

BM21S回路図

2015年モデル

コントロールボックス

- | | | |
|----|-----------|--------|
| 1 | BAT | 0.85Y |
| 2 | CL SW | 0.85Y |
| 3 | UP LS | 0.85O |
| 4 | | |
| 5 | CL ON LS | 0.85B |
| 6 | CL OFF LS | 0.85YW |
| 7 | SEAT SW | 0.85GO |
| 8 | PEDAL SW | 0.85L |
| 9 | KEY SW | 0.85L |
| 10 | BAT | 0.85Y |
| 11 | R SW | 0.85PB |
| 12 | L SW | 0.85VL |
| 13 | DWN SW | 0.85WL |
| 14 | UP SW | 0.85OL |
| 15 | RESET | |
| 16 | MODE | 0.85B |
| 17 | GND | 0.85Y |
| 18 | BAT | 0.85W |
| 19 | IG OUT | |
| 20 | | |
| 21 | SW LAMP | 0.85YB |
| 22 | SEL OUT | 0.85GO |
| 23 | R OUT | 0.85GR |
| 24 | L OUT | 0.85LR |
| 25 | GND | 0.85B |
| 26 | UP OUT | 0.85LY |
| 27 | UP OUT | 0.85LY |
| 28 | FLOAT | 0.85LG |
| 29 | FLOAT | 0.85LG |
| 30 | CL OFF | 0.85P |
| 31 | CL OFF | 0.85P |
| 32 | CL ON | 0.85LB |
| 33 | CL ON | 0.85LB |
| 34 | GND | 0.85E |

