

SMX1392始動率制回路図

	+E	-E	I	G	B	ST
OFF	○	○				
ON			○	○		
ST			○	○	○	○

