


和同除雪機

SE422AD パーツリスト

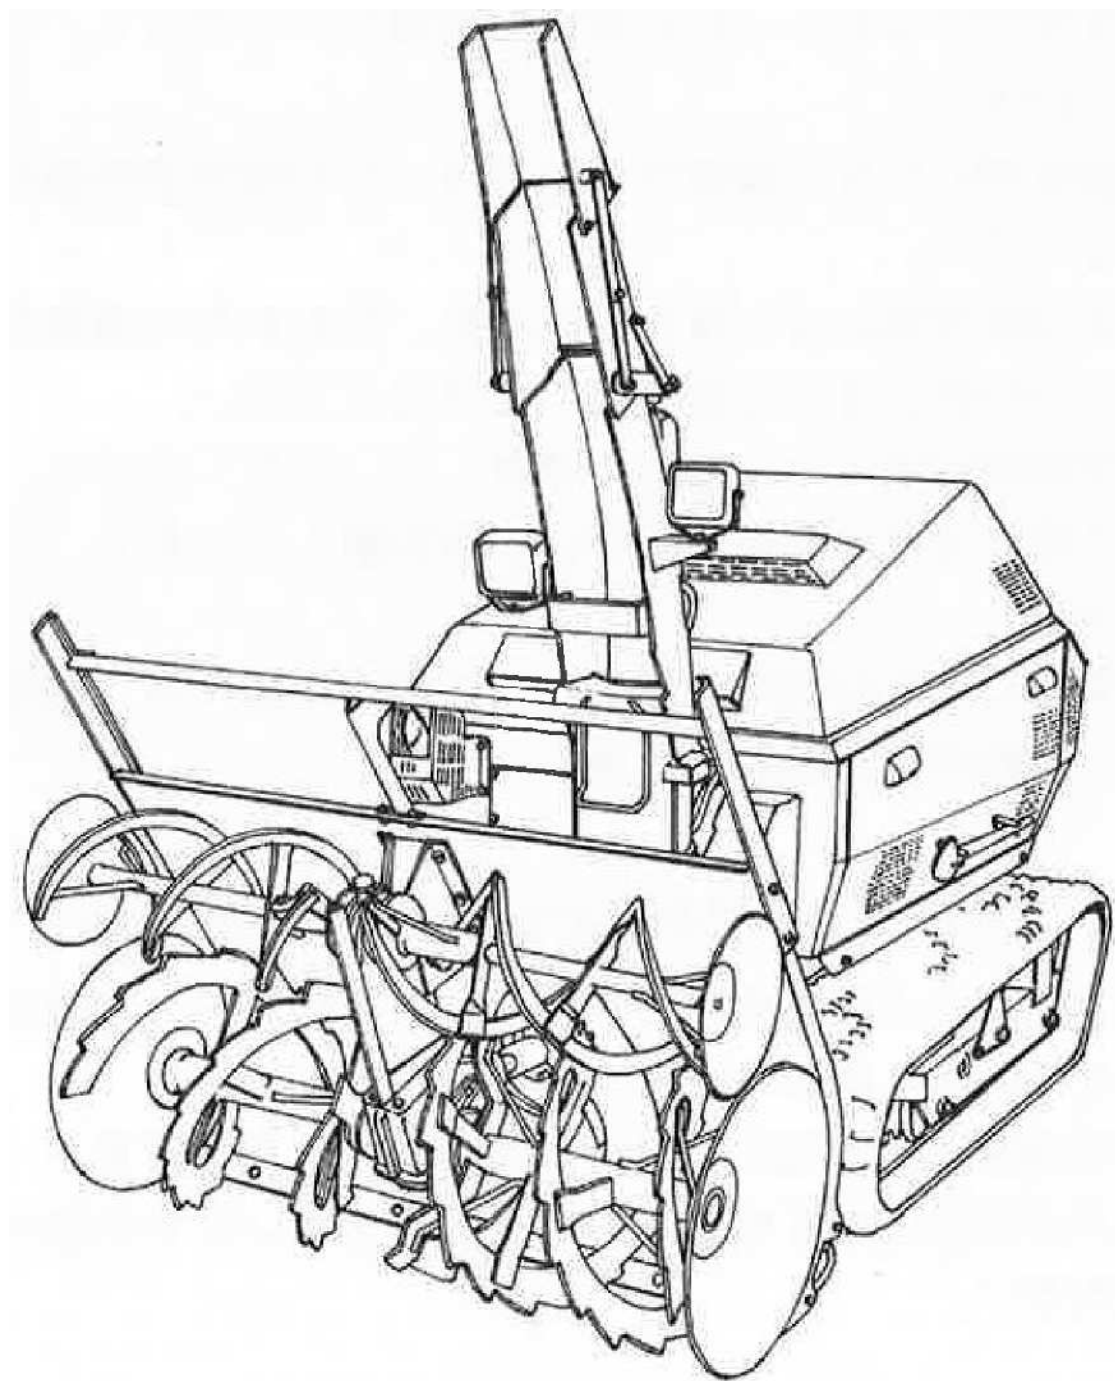

部品ご注文について

1. 部品をご注文の際、型式、機体番号、部品番号、部品名、個数等を連絡下さい。
2. 部品は必ず純正部品をご使用願います。
(市販の類似品を使用されると早期破損などの原因となります)
3. 本部品表は改良のため予告なく変更することがあります、予めご了承下さい。
4. ご注文の際 備考欄に PL部品番号注文 と記してある時には、
19. 銘板 (安全) を参照にして、(PL) ASSY の部品番号、部品名、で
ご注文下さい。
5. 警告ラベルが、損傷したときは、出来るだけ早く、19. 銘板 (安全) を
参照にして、ご注文し貼り替えして下さい。

目 次

SE422AD


(ブロック)	(ページ)
1. エンジン取付	2 ~ 5
2. エンジン関連	6 ~ 9
3. ミッション・本体フレーム	10 ~ 13
4. 除雪フレーム	14 ~ 15
5. シュータ	16 ~ 19
6. オーガギヤケース	20 ~ 23
7. ブロワ	24 ~ 25
8. オーガ・ロータ	26 ~ 31
9. カバー	32 ~ 35
10. 油圧配管	36 ~ 37
11. 動力伝達 (1)	38 ~ 41
12. 動力伝達 (2)	42 ~ 43
13. パネル・ハンドル	44 ~ 47
14. 操作レバー (1)	48 ~ 51
15. 操作レバー (2)	52 ~ 55
16. 電装品 (1)	56 ~ 57
17. 電装品 (2)	58 ~ 59
18. 銘板・付属品	60 ~ 61
19. 銘板 (安全)	62 ~ 63

1. エンジン取付

エンジン部品

16414-3243-2
フィルター(カートリッジ)

16343-9701-0
41.07° イベルト

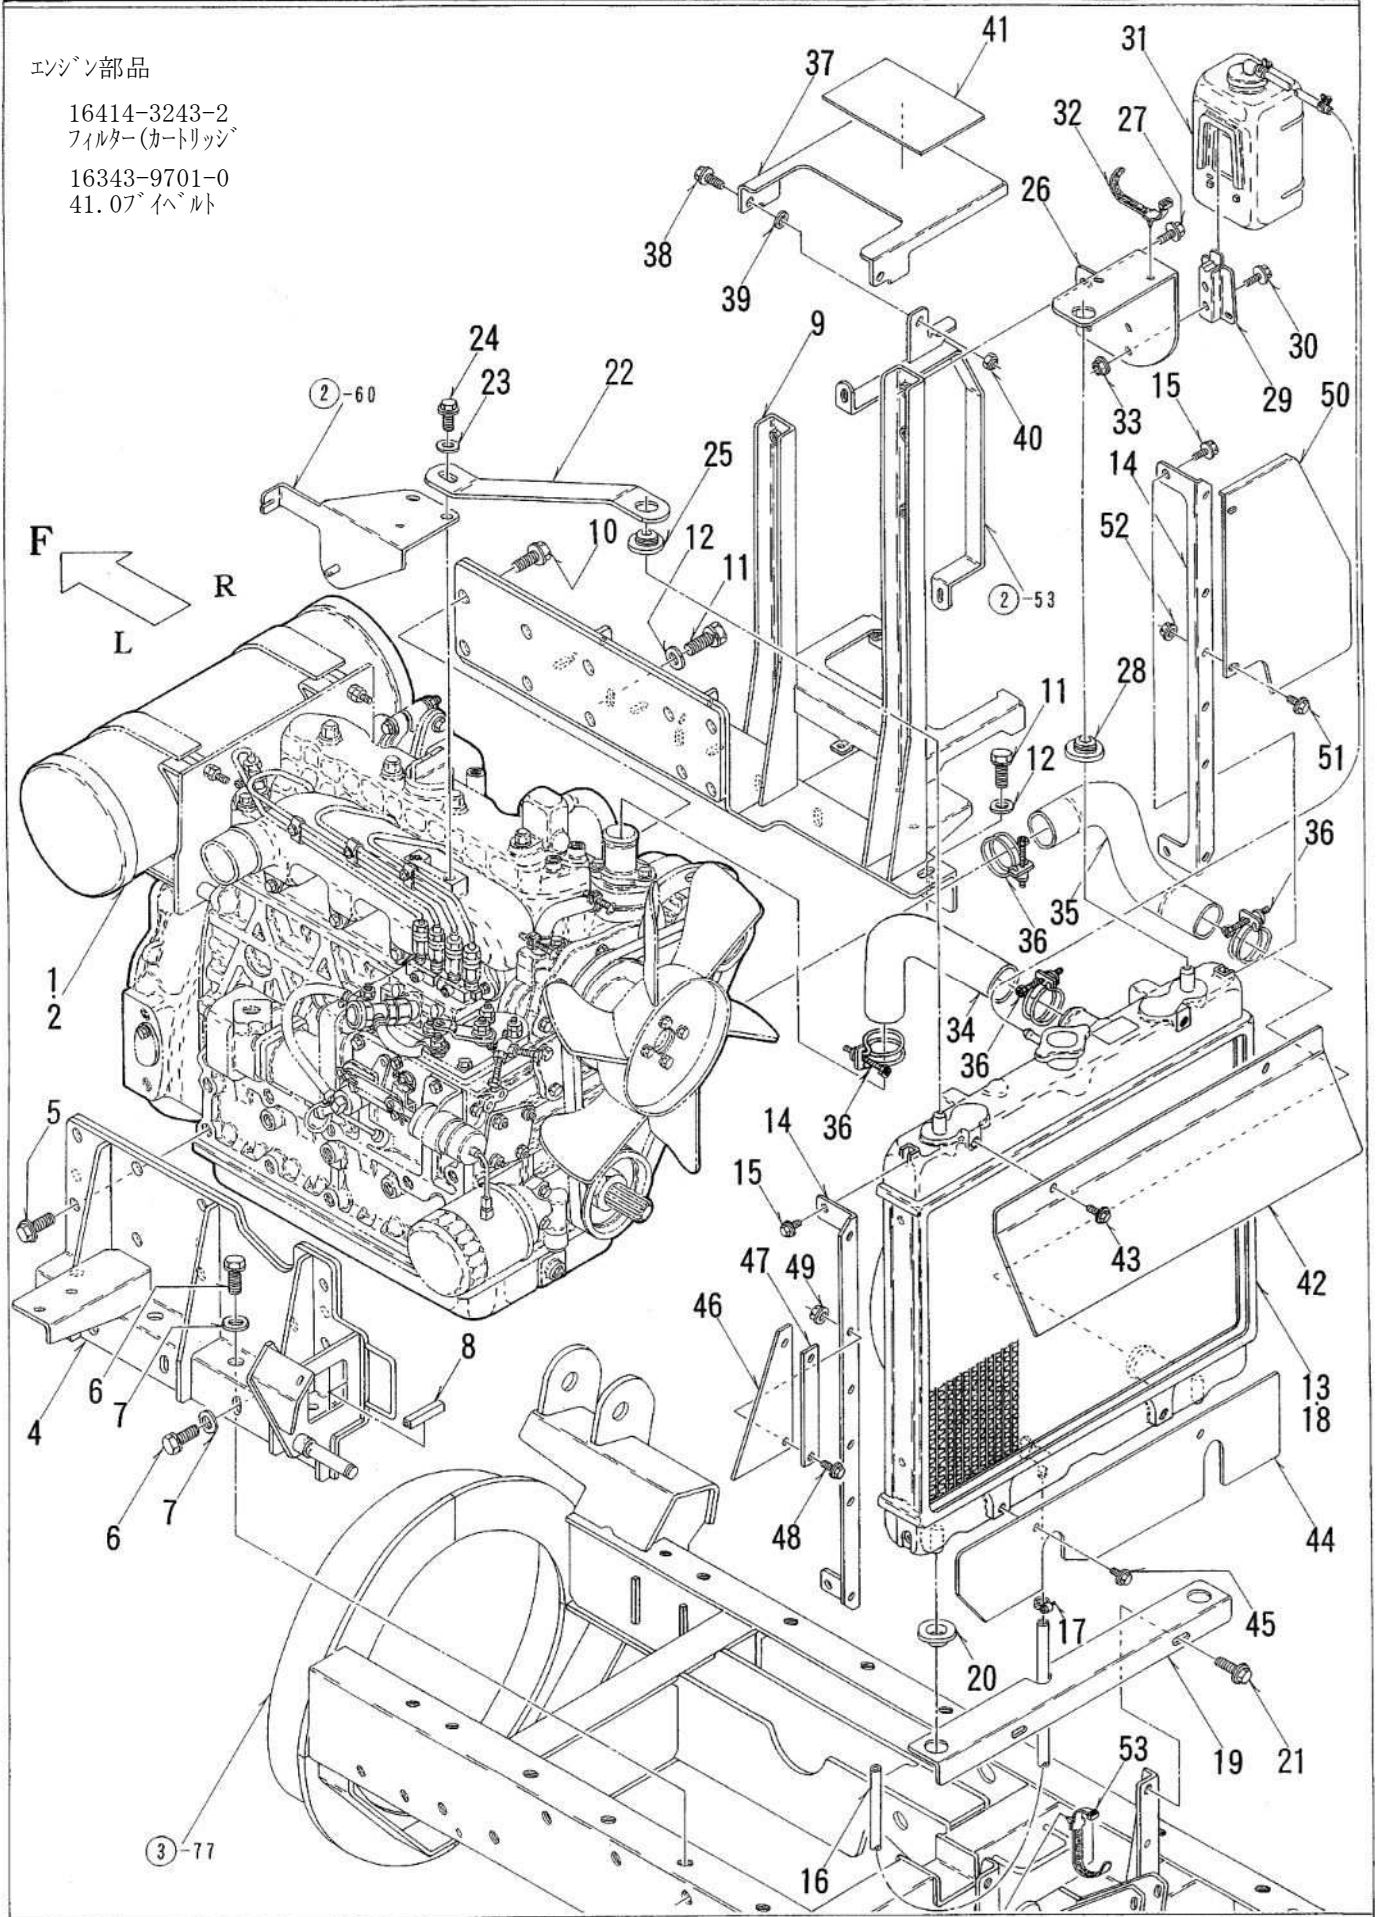

1. エンジン取付


SE422AD

パーツNo	部 品 番 号	部 品 名	個数	備 考
1	01001-B61-000	エンジン V2203(42ps	1	供給不可
2		Dエンジンオイル 10W30	9.7ℓ	エンジン用 非売品
3				
4	02100-B61-000	エンジンベース L COMP	1	
5	93300-1203017	フランジB 12×1.25×30	9	
6	93000-1203017	コガタバネB 12×30(7T	8	
7	94101-12010	ミガキW 12	8	販売単位 : 10
8	02903-B54-001	玉ナシ溝ゴム 12.5×53	3	
9	02200-B61-001	エンジンベース R COMP	1	
10	93300-1203017	フランジB 12×1.25×30	10	
11	93000-1203017	コガタバネB 12×30(7T	9	
12	94101-12010	ミガキW 12	8	販売単位 : 10
13	1K583-72061	ラジエータ, アッシ	1	エンジン付属品
14	03904-B61-800	ラジエータフレーム	2	供給不可
15	93100-0801617	フランジB 8×16	4	販売単位 : 10
16	91542-0806003	ホース 8×600	1	
17	91323-012	自在バンド 12	1	
18		不凍液	3.4ℓ	冷却水 全容量7.3ℓ 非売品
19	03100-B61-800	ラジエータフレーム COMP	1	供給不可
20	34070-16031	ゴム(ラジエータマウント	2	エンジン付属品
21	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
22	03901-B61-800	ラジエータステー L	1	供給不可
23	94101-10015	ダイヤルW 10	1	販売単位 : 10
24	93300-1002017	フランジB 10×1.25×20	1	販売単位 : 10
25	34070-16031	ゴム(ラジエータマウント	1	エンジン付属品
26	03902-B61-000	ラジエータステー R	1	
27	93100-0802017	フランジB 8×20	2	販売単位 : 10
28	34070-16031	ゴム(ラジエータマウント	1	エンジン付属品
29	11982-72461	リザーブタンクステー	1	エンジン付属品
30	93100-0602017	フランジB 6×20	2	販売単位 : 10
31	15377-72401	リザーブタンク アッシ	1	エンジン付属品
32	91314-119P7	ケーブルストラップ 1-19P7	1	
33	94002-06410	フランジN 6	2	販売単位 : 10
34	03906-B60-000	ラジエータホース	1	供給不可
35	1G932-72851	ホース(1, ウォータ	1	エンジン付属品
36	15108-72873	バンド	4	エンジン付属品
37	03903-B61-001	タンクガイド	1	
38	93100-0802017	フランジB 8×20	2	販売単位 : 10
39	94111-08012	バネW 8	2	販売単位 : 10
40	91234-084110	コガタタフロックN 8	2	販売単位 : 10
41	03906-B53-000	AKテープ 150×100	1	
42	03905-B61-000	シュラウドプレート(アッパー	1	
43	93100-0601217	フランジB 6×12	2	販売単位 : 10
44	03906-B61-801	シュラウドプレート(ロワ	1	供給不可
45	93100-0601217	フランジB 6×12	2	販売単位 : 10

1. エンジン取付

エンジン部品

16414-3243-2
フィルター(カートリッジ)
16343-9701-0
41.07 イベルト

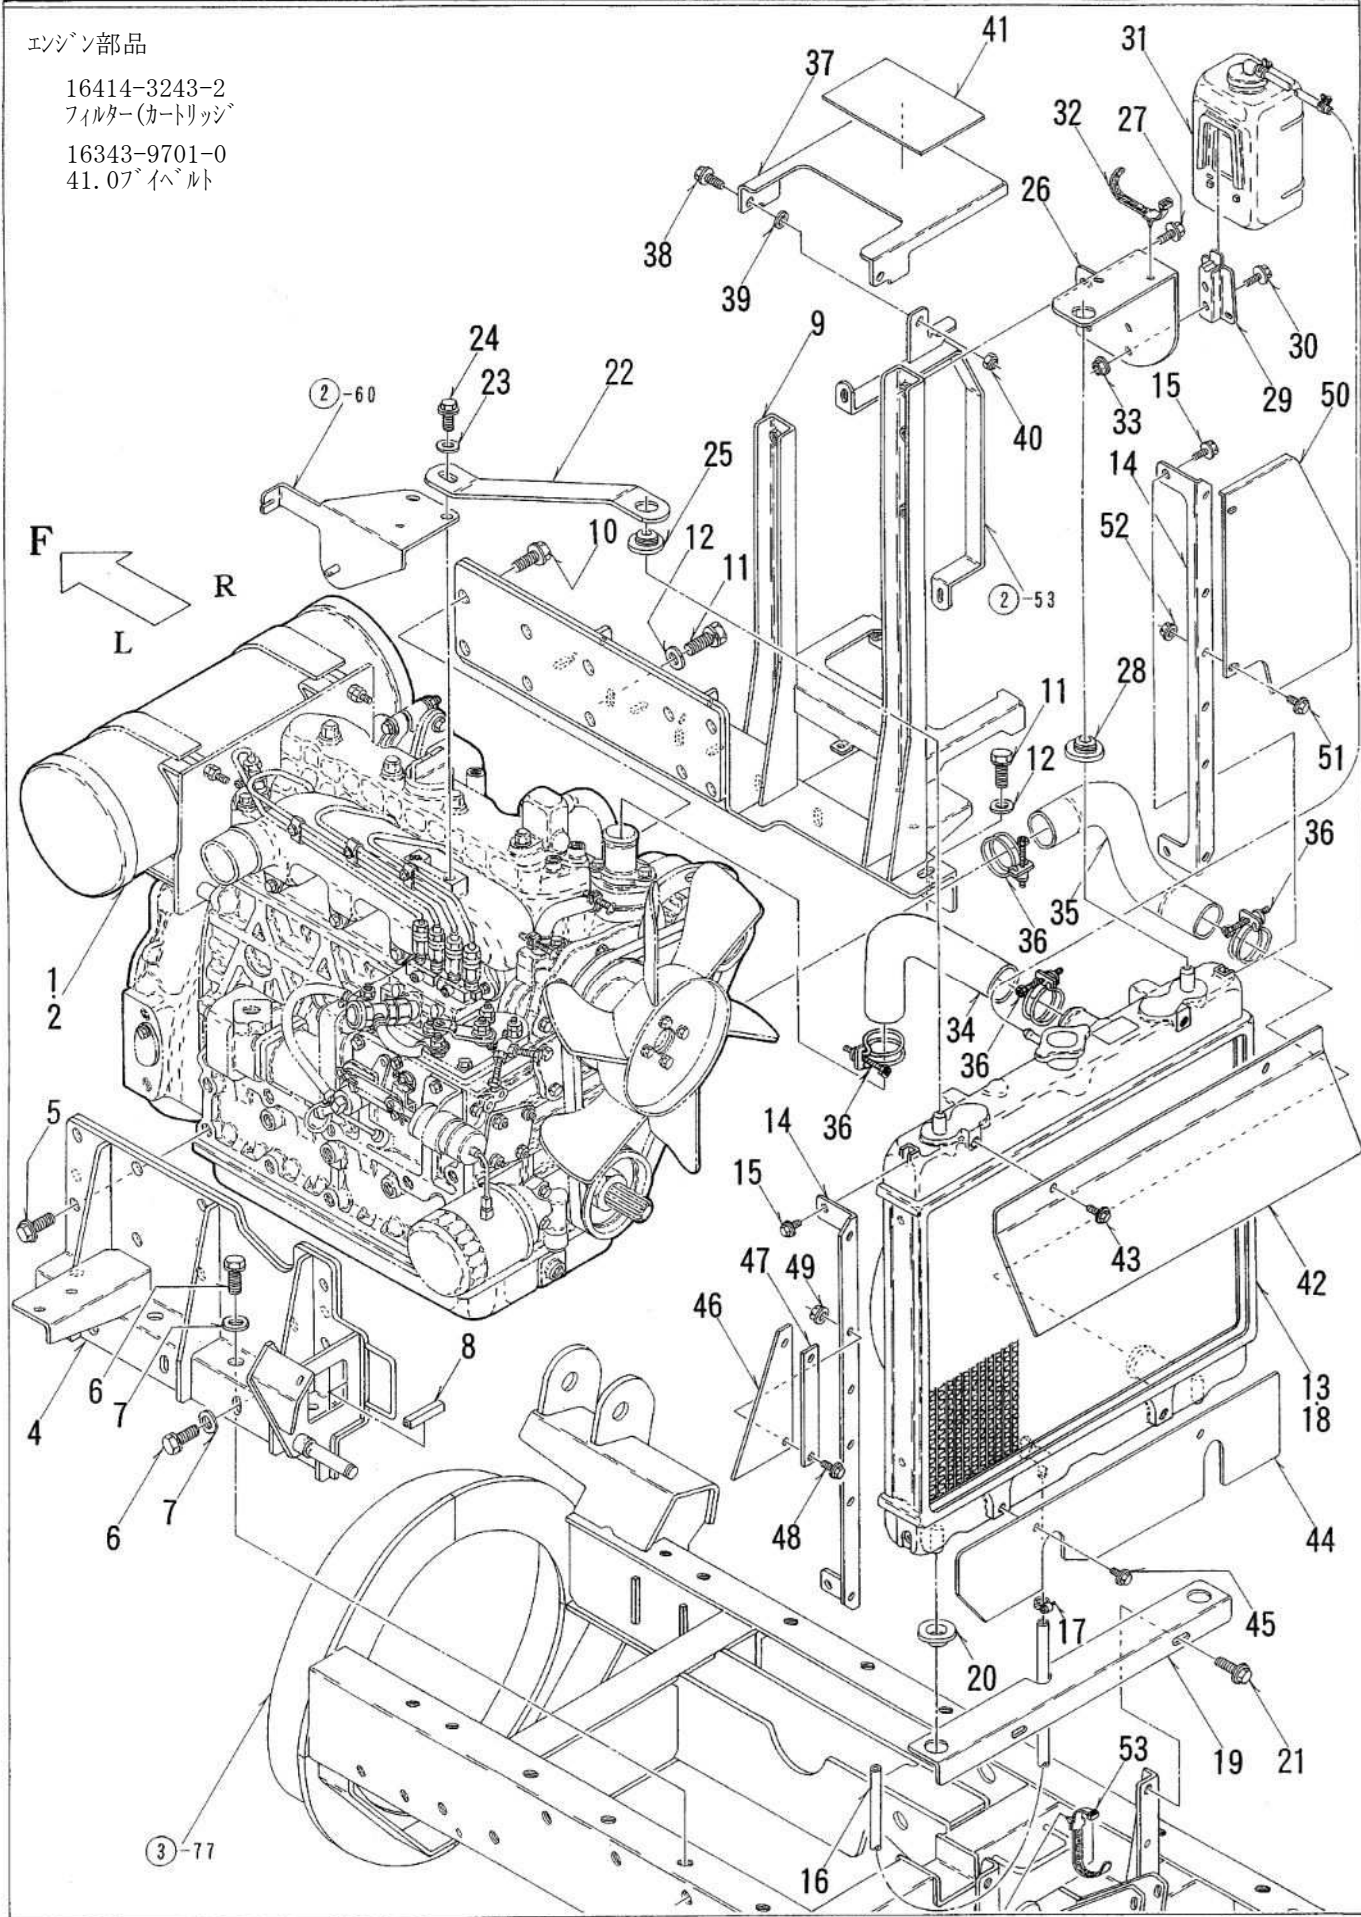


1. エンジン取付

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
4 6	03908-B61-000	シュラウドラバー	1	供給不可
4 7	03909-B61-800	ラバーサポート	1	供給不可
4 8	93100-0601617	フランジB 6×16	2	販売単位 : 10
4 9	94002-06410	フランジN 6	2	販売単位 : 10
5 0	03907-B61-800	シュラウドプレート R	1	供給不可
5 1	93100-0601217	フランジB 6×12	2	販売単位 : 10
5 2	94002-06410	フランジN 6	2	販売単位 : 10
5 3	91314-119P7	ケーブルストラップ 1-19P7	1	
5 4				
5 5				
5 6				
5 7				
5 8				
5 9				
6 0				
6 1				
6 2				
6 3				
6 4				
6 5				
6 6				
6 7				
6 8				
6 9				
7 0				
7 1				
7 2				
7 3				
7 4				
7 5				
7 6				
7 7				
7 8				
7 9				
8 0				
8 1				
8 2				
8 3				
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				

2. エンジン関連

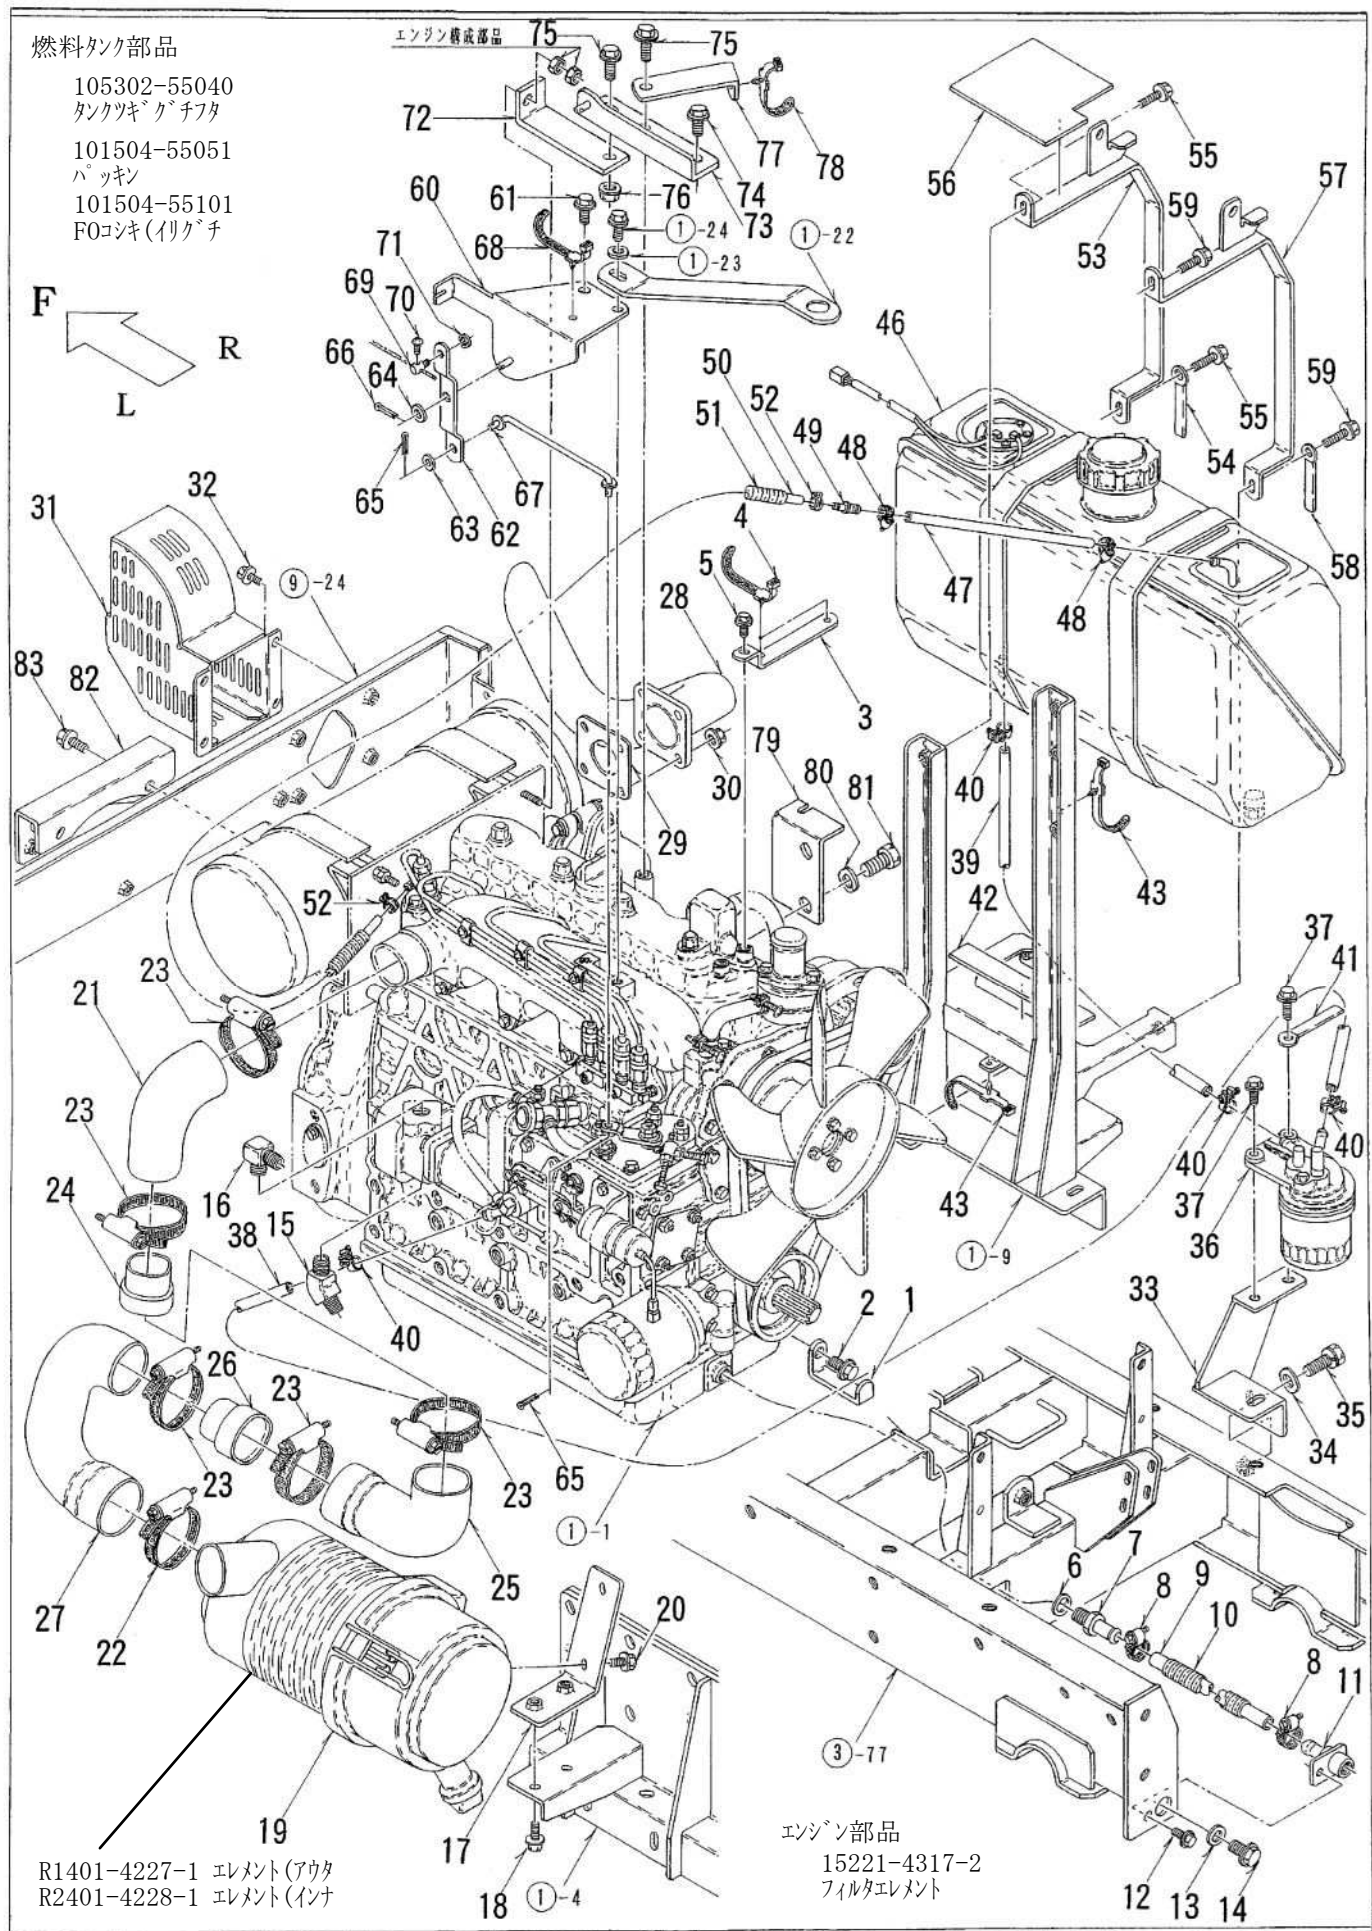


2. エンジン関連

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	02906-B61-800	ホースクランプ	1	
2	93300-1001617	フランジB 10×1.25×16	1	
3	02909-B61-000	クランプステー	1	
4	91314-119P7	ケーブルストラップ 1-19P7	2	
5	93100-0601217	フランジB 6×12	1	販売単位 : 10
6	15101-33581	パッキン	1	エンジン付属品
7	15434-33261	ドレンパイプジョイント	1	エンジン付属品
8	91323-019	自在バンド 19	2	
9	91542-1506501	ホース 15×650	1	
10	91382-1906001	コルゲート 19×600	1	
11	02700-B56-801	ドレンジョイント COMP	1	
12	93100-0802017	フランジB 8×20	1	販売単位 : 10
13	91691-1222202	丸パッキン 12×22×2	1	
14	93300-1201617	フランジB 12×1.25×16	1	
15	91551-3024008	45° エルボ 302408	1	
16	67908-A63-000	90° エルボ 1/4×3/8	1	
17	02700-B61-800	エアクリーナブラケット COMP	1	供給不可
18	93100-0801617	フランジB 8×16	2	販売単位 : 10
19	13092-69511	エアークリーナ, アッシ	1	エンジン付属品
20	93100-0801617	フランジB 8×16	2	販売単位 : 10
21	16414-11622	ホース(インレット)	1	エンジン付属品
22	91323-075	自在バンド 75	1	
23	91323-065	自在バンド 65	5	
24	02905-B61-800	ホースジョイント B	1	供給不可
25	16369-11620	ホース(1, インレット)	1	エンジン付属品
26	02904-B61-800	ホースジョイント A	1	供給不可
27	15428-11621	インレットパイプ	1	エンジン付属品
28	02600-B61-000	EXパイプ COMP	1	供給不可
29	17326-12231	マフラパッキン	1	エンジン付属品
30	94002-08410	フランジN 8	4	販売単位 : 10
31	03200-B61-800	マフラーカバー COMP	1	供給不可
32	93100-0801617	フランジB 8×16	4	販売単位 : 10
33	02300-B61-800	フィルターブラケット COMP	1	供給不可
34	94101-12010	ミガキW 12	2	販売単位 : 10
35	93000-1203017	コガタバネB 12×30(7T)	2	
36	15291-43012	フューエルフィルタ, アッシ	1	エンジン付属品
37	93100-0802517	フランジB 8×25	2	販売単位 : 10
38	91543-0751351	ブレードホース 7.5×1350	1	
39	91543-0750601	ブレードホース 7.5×600	1	
40	14301-42753	パイプクリップ	4	エンジン付属品
41	91331-080801	コードクランプ 8×80	1	
42	02906-B18-000	タンクアンダーゴム	1	
43	91314-119P7	ケーブルストラップ 1-19P7	2	
44				
45				

2. エンジン関連

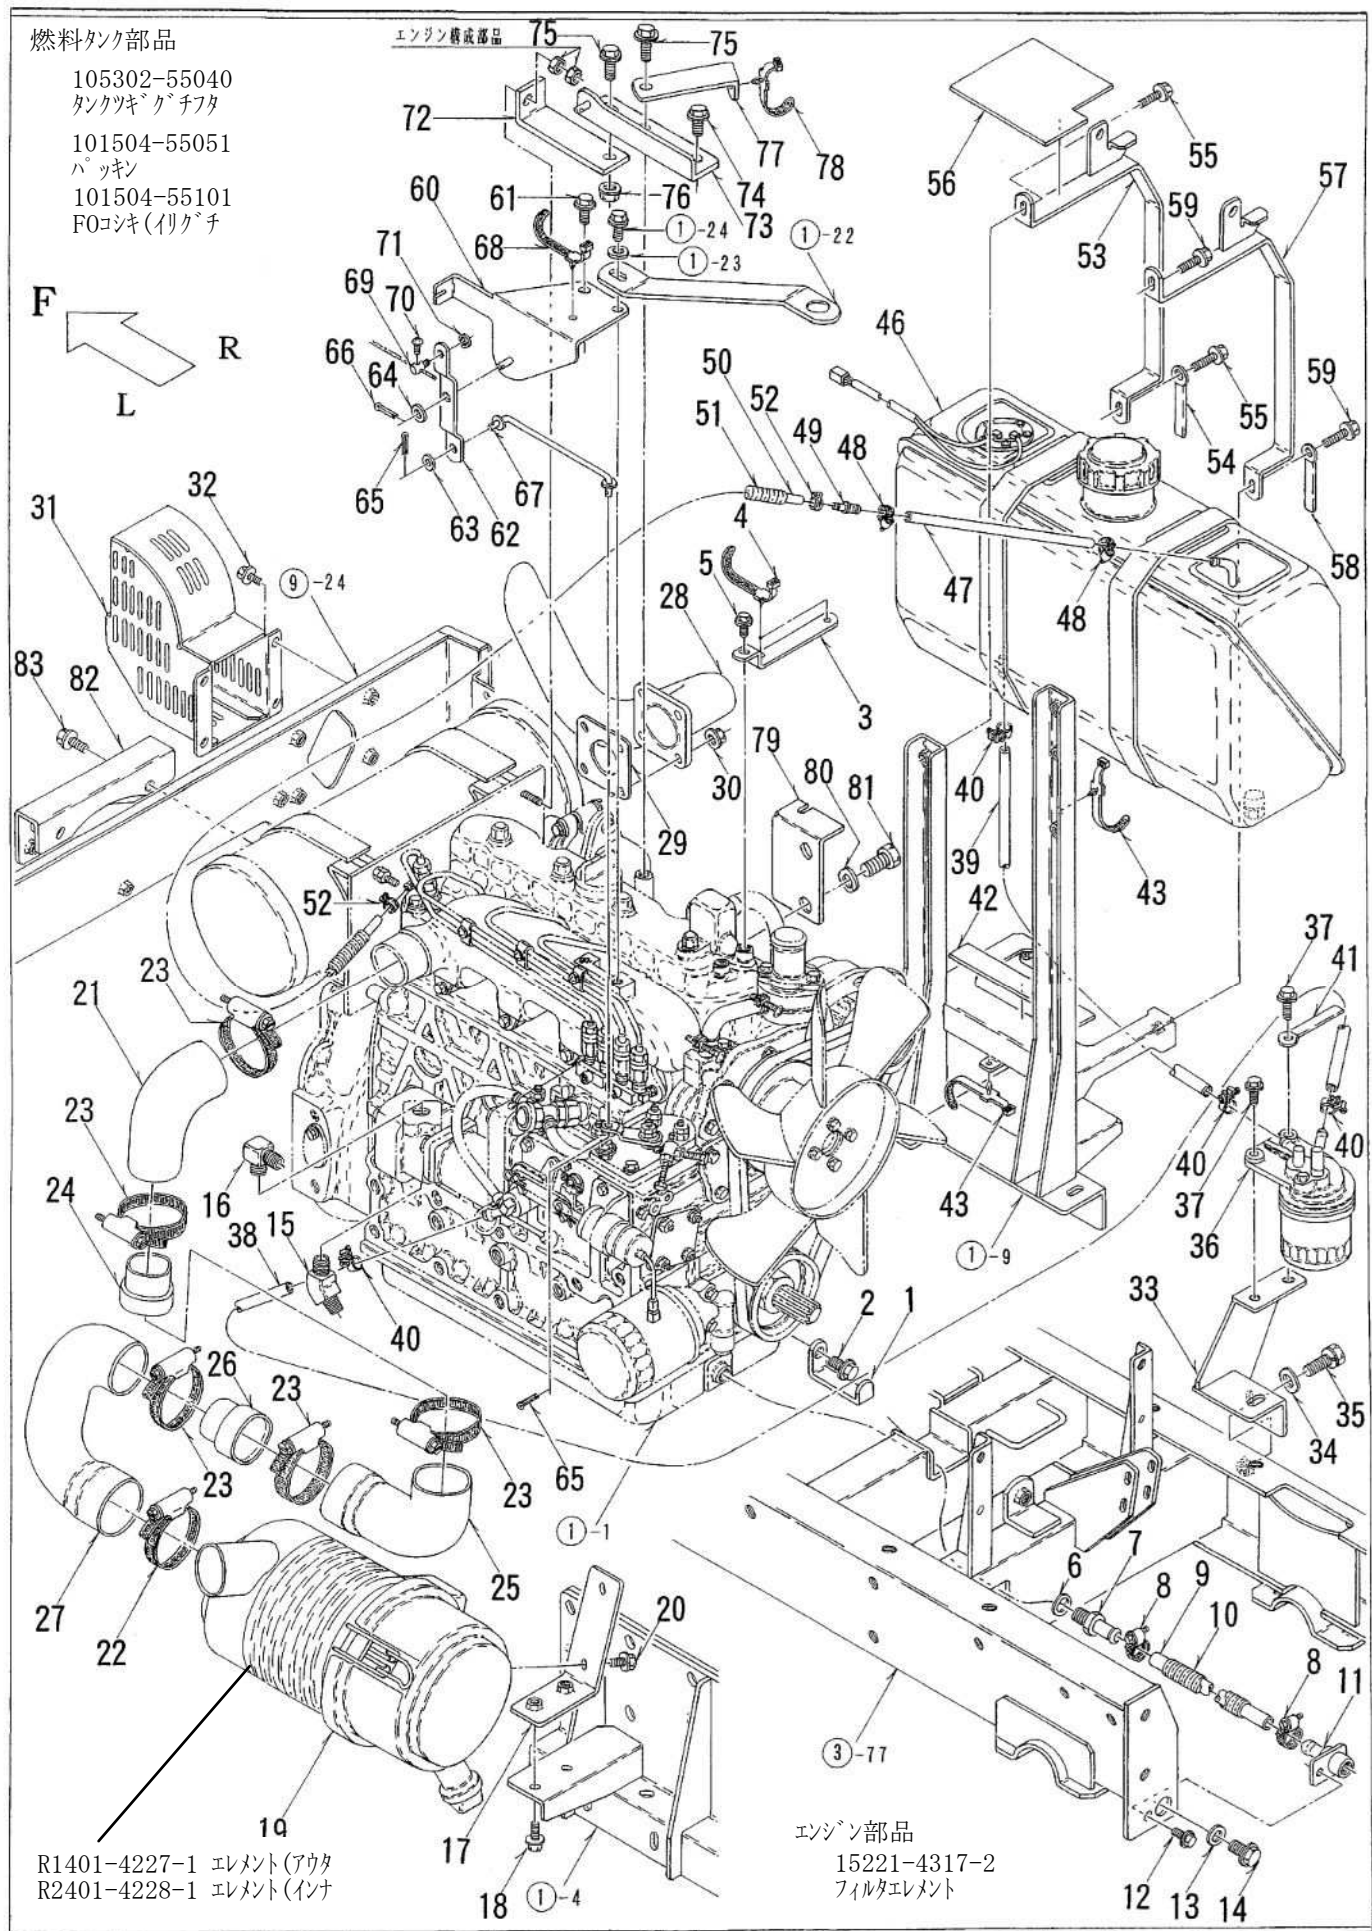


2. エンジン関連

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
4 6	04100-B36-000	FOタンク COMP	1	129065-55010へ 構成部品最終頁に記載
4 7	91543-0750251	ブレードホース 7.5×250	1	
4 8	14301-42753	パイプクリップ	2	エンジン付属品
4 9	03901-B21-000	ホースジョイント	1	
5 0	91542-0407001	ホース 4×700	1	
5 1	91382-1006001	コルゲート 10×600	1	
5 2	09318-88080	ホースクランプ(パネツキ	2	エンジン付属品
5 3	03600-B56-002	タンクバンド 34 COMP	1	
5 4	91331-080801	コードクランプ 8×80	1	
5 5	93100-0803017	フランジB 8×30	2	販売単位 : 10
5 6	02906-B54-001	タンクゴム	1	
5 7	03600-B56-002	タンクバンド 34 COMP	1	
5 8	91331-080801	コードクランプ 8×80	1	
5 9	93100-0803017	フランジB 8×30	2	販売単位 : 10
6 0	02400-B61-800	スロットルリンクベース COMP	1	供給不可
6 1	93300-1001617	フランジB 10×1.25×16	1	
6 2	02902-B30-000	スロットルリンク	1	供給不可
6 3	94101-06010	ミガキW 6	1	販売単位 : 10
6 4	94101-08010	ミガキW 8	1	販売単位 : 10
6 5	94210-20120	ワリピン 2×12	2	販売単位 : 10
6 6	94210-25150	ワリピン 2.5×15	1	販売単位 : 10
6 7	02500-B61-000	ロッド 160 COMP	1	供給不可
6 8	91341-119P7	ケーブルストラップ 1-19P7	1	
6 9	77901-A55-000	ワイヤーストッパー	1	供給不可
7 0	93500-0401014	ナベコネジ 4×10	1	販売単位 : 10
7 1	94511-05010	Eトメワ 5	1	販売単位 : 10
7 2	02907-B61-000	マフラーサポート	1	
7 3	03800-B61-800	タンパーブラケット COMP	1	供給不可
7 4	93300-1002017	フランジB 10×1.25×20	1	販売単位 : 10
7 5	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
7 6	94006-10410	フランジN 10×1.25	1	販売単位 : 10
7 7	02908-B61-800	ワイヤークランプ	1	供給不可
7 8	91341-119P7	ケーブルストラップ 1-19P7	1	
7 9	66901-B61-800	オーガクラッチワイヤーブラケット	1	供給不可
8 0	94111-14012	パネW 14	2	
8 1	92100-1402517	B 14×1.5×25(7T	2	
8 2	65100-B61-000	ベルトストッパーブラケット COMP	1	
8 3	93300-1002017	フランジB 10×1.25×20	2	販売単位 : 10
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				

3. ミッションケース・本体フレーム

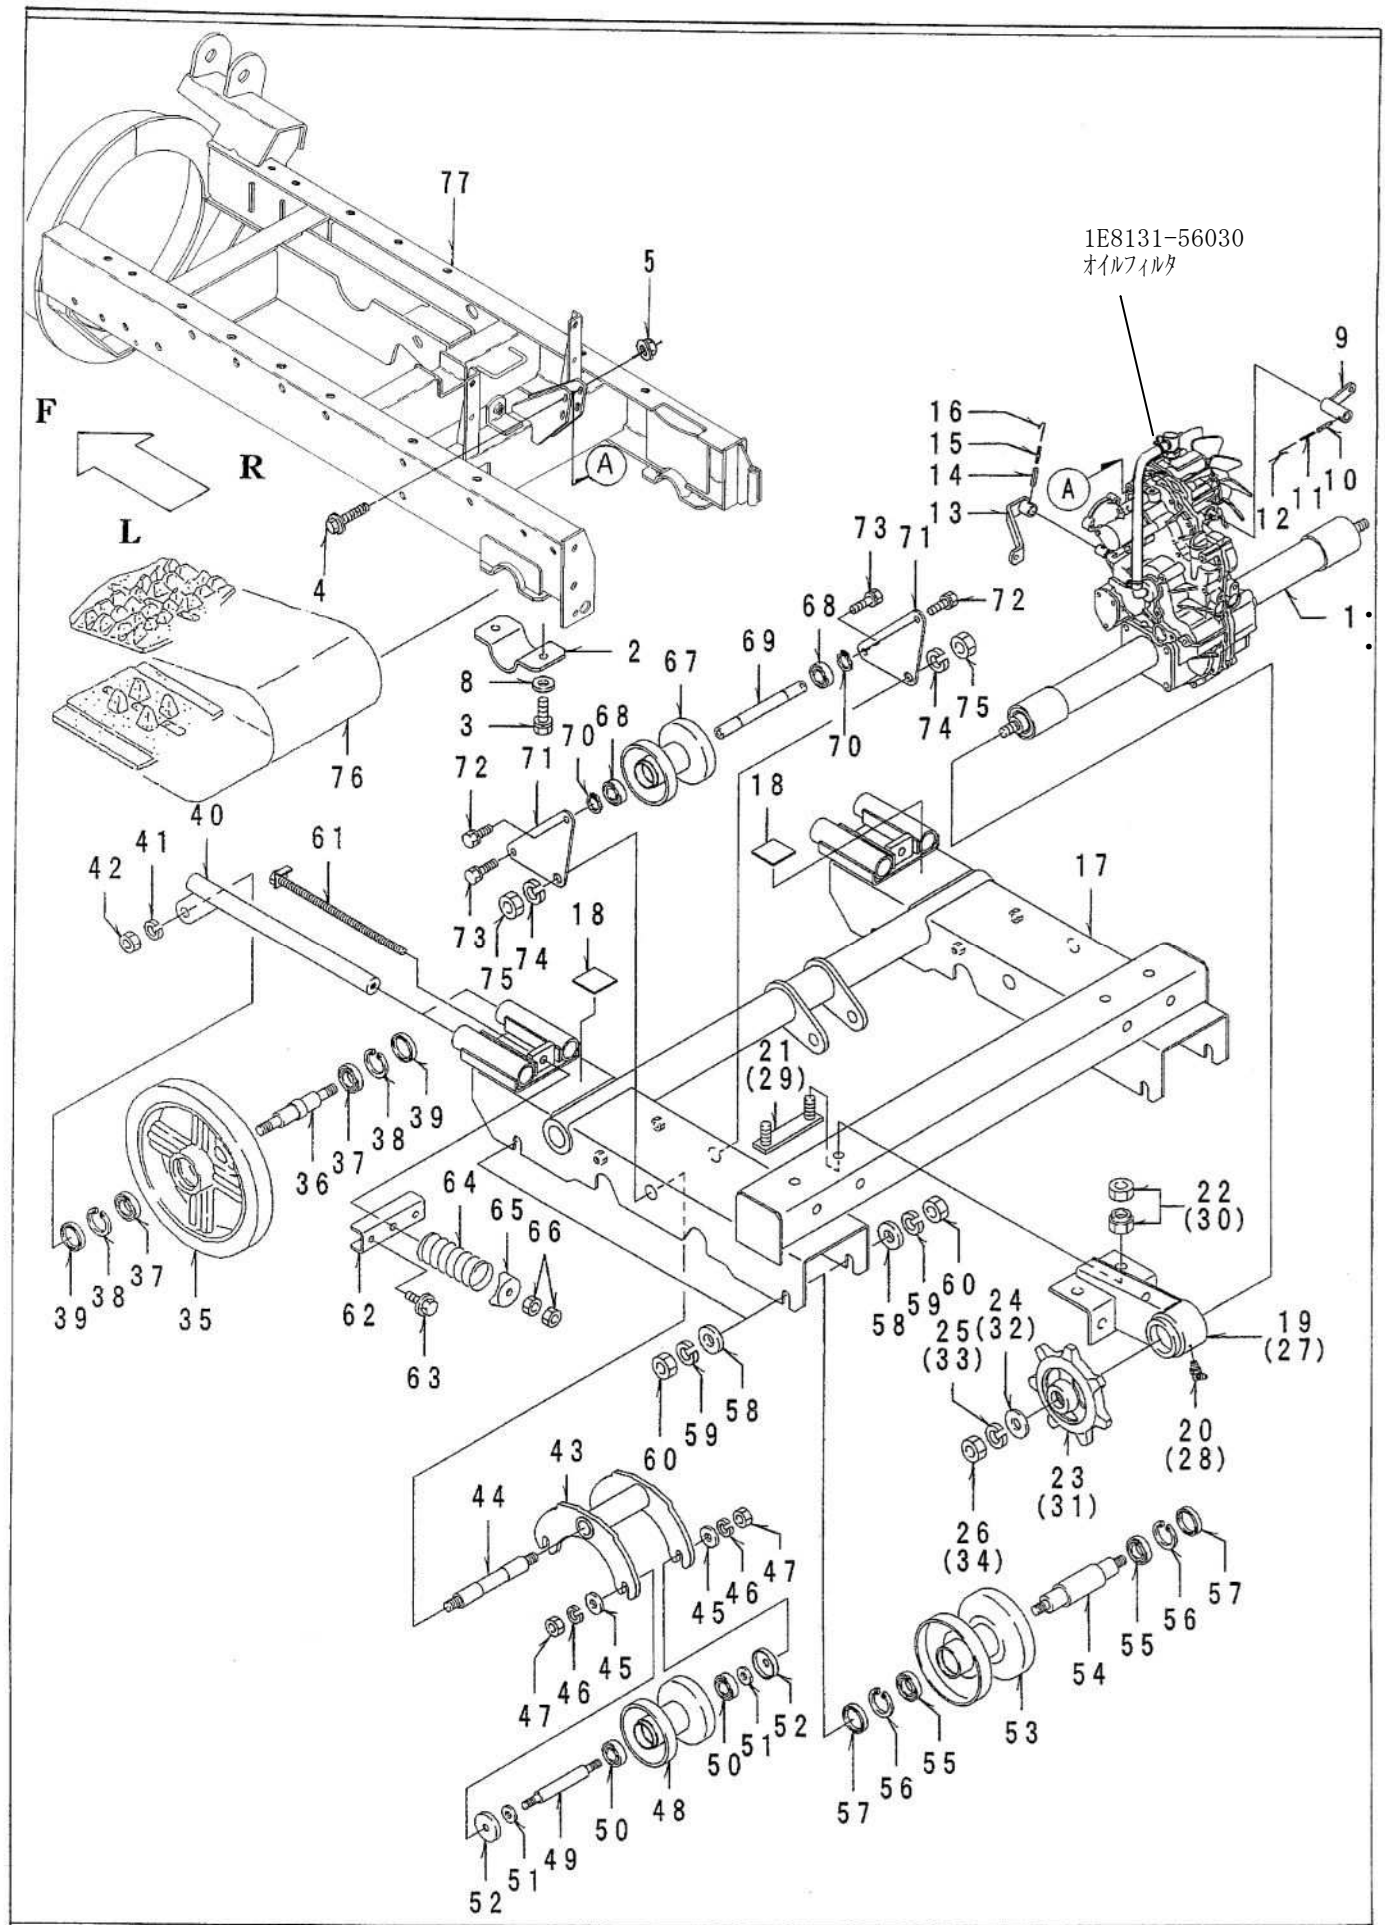


3. ミッション・本体フレーム

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	10001-B57-002	トランスミッション SB-30HL ミッションオイル (HSTオイル兼用) : ディーゼルエンジンオイル10W-30 CD級3.1ℓ	1	
2	41903-A91-000	車軸ホルダー	2	
3	93000-1203017	コガタパネB 12×30(7T	4	
4	93300-1005017	フランジB 10×1.25×50	2	
5	94006-10410	フランジN 10×1.25	2	販売単位 : 10
6				
7				
8	94101-12010	ミガキW 12	4	販売単位 : 10
9	75300-B56-804	変速アーム COMP	1	
10	94319-50025	スプリングピン 5×25	1	販売単位 : 10
11	94319-30025	スプリングピン 3×25	1	販売単位 : 10
12	75913-B18-000	ツヅリ線 1.2×100	1	
13	75400-B16-000	副変速アーム COMP	1	
14	94319-60025	スプリングピン 6×25	1	販売単位 : 10
15	94319-35025	スプリングピン 3.5×25	1	販売単位 : 10
16	75913-B18-000	ツヅリ線 1.2×100	1	
17	21100-B61-000	クローラフレーム COMP	1	
18	21905-B18-000	ゴム 50×50×3.0	2	
19	21200-B54-001	アクスルサポート L COMP	1	
20	96381-65000	グリースニップル B-M6×1	1	
21	21500-B18-801	セットボルト COMP	2	
22	91235-16100	ハードロックN 16	4	
23	26901-B54-801	ドライブスプロケット	1	
24	91251-1640451	マルザガネ 16×40×4.5	1	
25	94111-16012	パネW 16	1	
26	94001-16411	N 16	1	
27	21300-B54-001	アクスルサポート R COMP	1	
28	96381-65000	グリースニップル B-M6×1	1	
29	21500-B18-801	セットボルト COMP	2	
30	91235-16100	ハードロックN 16	4	
31	26901-B54-801	ドライブスプロケット	1	
32	91251-1640451	マルザガネ 16×40×4.5	1	
33	94111-16012	パネW 16	1	
34	94001-16411	N 16	1	
35	26901-B18-701	フロントホイール	2	
36	24902-A94-002	ホイールシャフト B	2	
37	96100-06005	ベアリング 6005	4	
38	94520-47080	Cアナトメワ 47	4	
39	98251-2504708	シール D25478	4	
40	21400-B54-001	テンションビーム COMP	4	
41	94111-16012	パネW 16	4	
42	94001-16411	N 16	4	
43	21400-B18-030	イコライザフレーム COMP	2	
44	24901-B18-030	イコライザシャフト	2	
45	91251-1230451	マルザガネ 12×30×4.5	8	

3. ミッションケース・本体フレーム

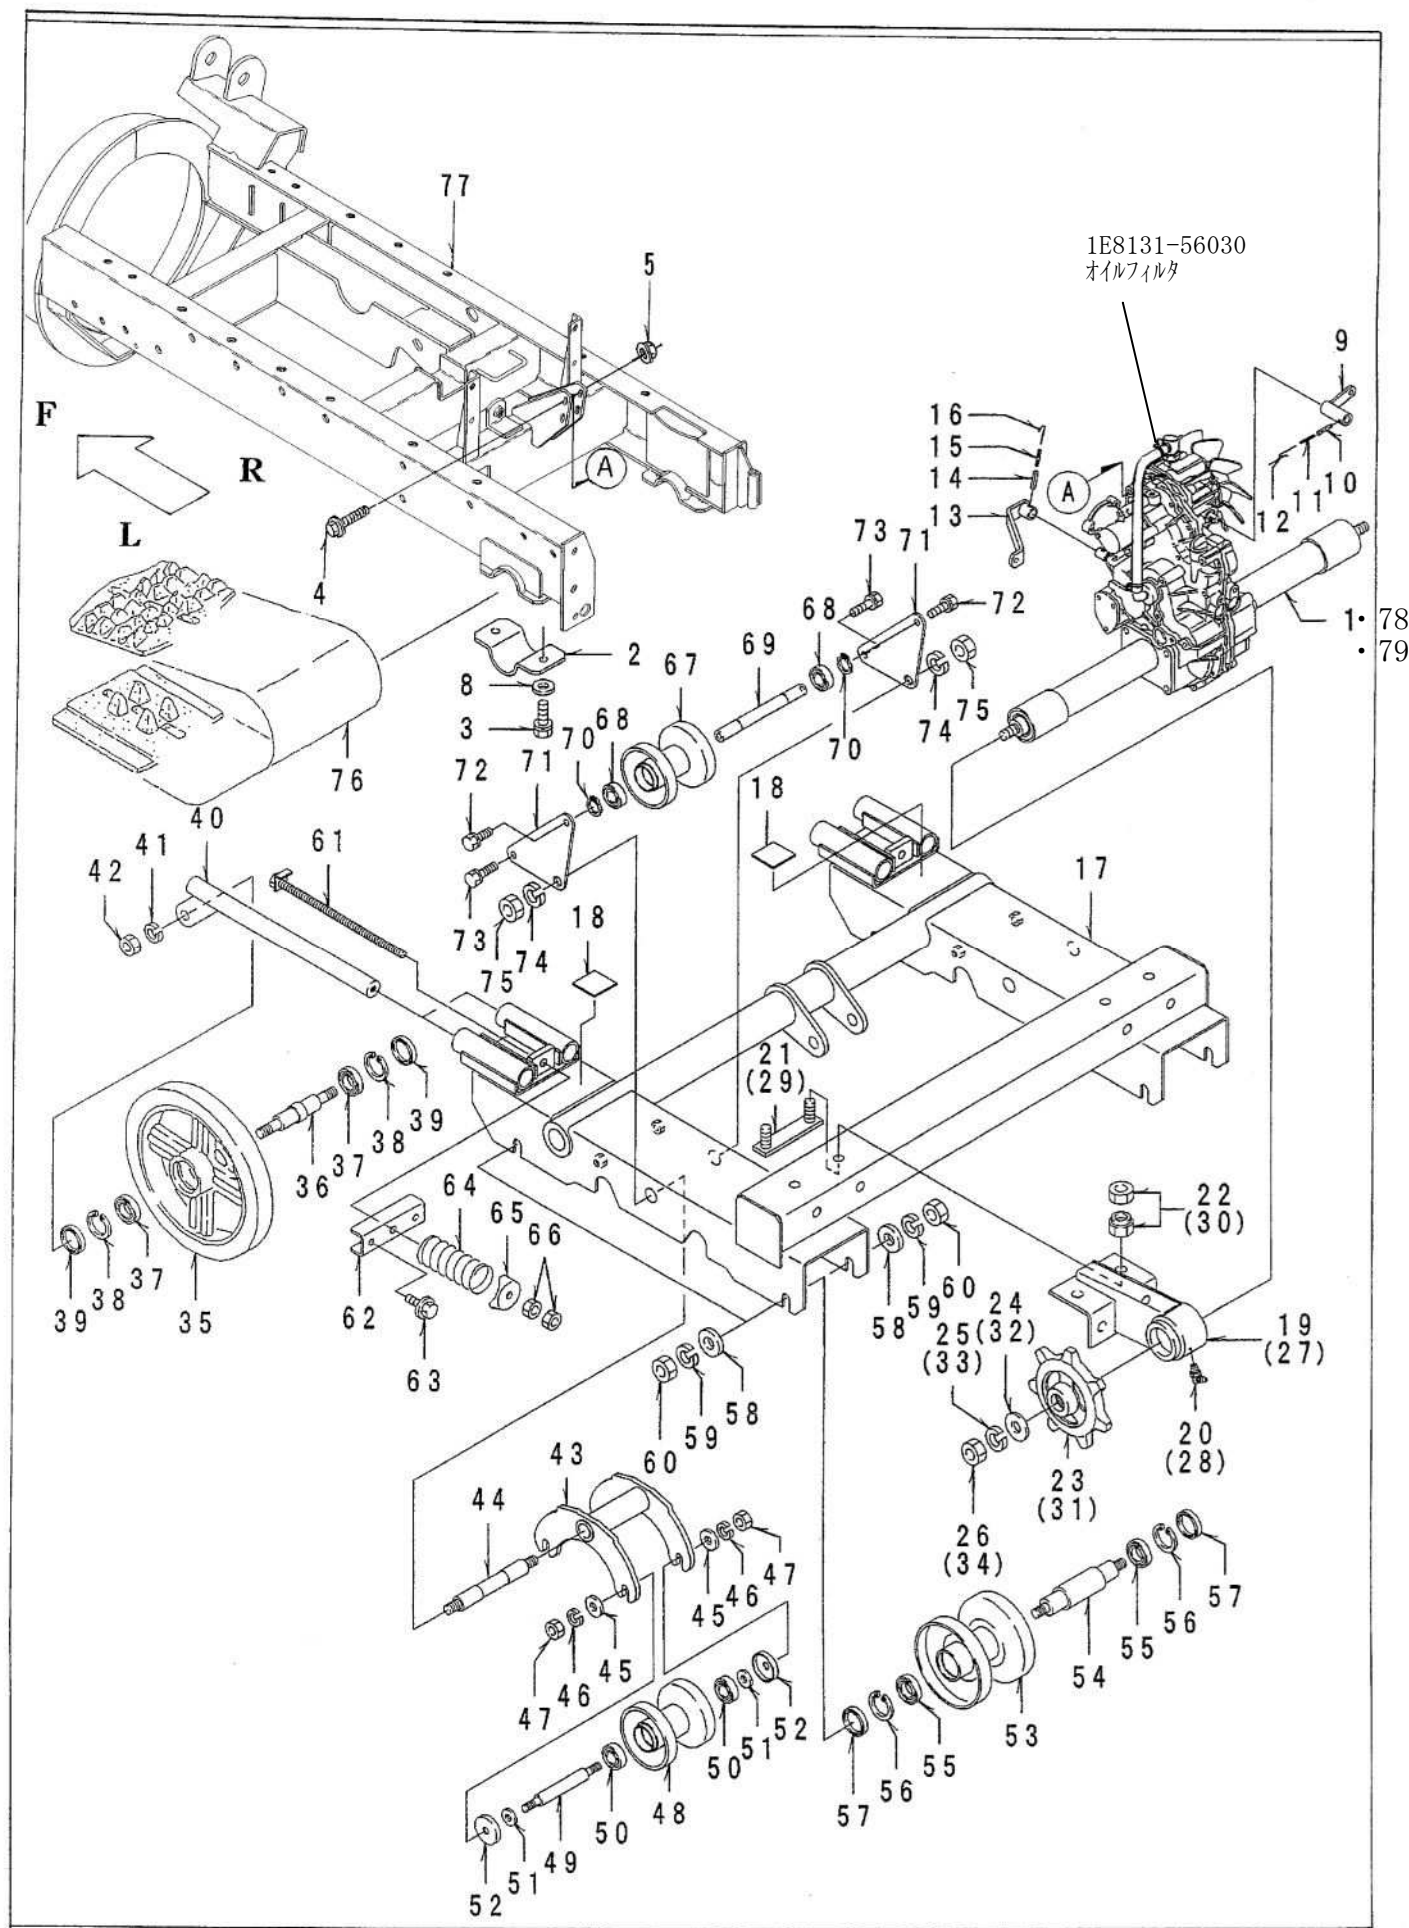


3. ミッション・本体フレーム

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
4 6	94111-12012	バネW 12	8	販売単位 : 10
4 7	94003-12412	コガタN 12(2	8	販売単位 : 10
4 8	26100-B18-802	イコライザホイール COMP	4	
4 9	24902-B18-000	イコライザホイールシャフト	4	
5 0	96105-06004	ベアリング 6004UU	8	
5 1	91251-1230451	マルザガネ 12×30×4.5	8	
5 2	28901-G14-000	転輪カバー	8	
5 3	26100-A94-802	クローラホイール COMP	4	
5 4	24903-B18-000	ホイールシャフト A	4	
5 5	96100-06005	ベアリング 6005	8	
5 6	94520-47080	Cアナトメワ 47	8	
5 7	98251-2504708	シール D25478	8	
5 8	94101-16010	ミガキW 16	8	
5 9	94111-16012	バネW 16	8	
6 0	94001-16411	N 16	8	
6 1	21500-A94-031	テンションボルト COMP	2	
6 2	21901-B54-000	テンションビームサポート	2	
6 3	93300-1002017	フランジB 10×1.25×20	4	販売単位 : 10
6 4	23901-B18-000	スプリング BJ 50×100	2	
6 5	21902-B54-800	スプリングホルダー	2	
6 6	94003-12412	コガタN 12(2	4	販売単位 : 10
6 7	26100-B18-802	イコライザホイール COMP	2	
6 8	96105-06004	ベアリング 6004UU	4	
6 9	24901-B56-001	クローラアイドルシャフト	2	
7 0	94510-20080	Cジクトメワ 20	4	販売単位 : 10
7 1	21901-B56-000	クローラアイドルサポート	4	
7 2	91219-1020011	コガタバネプレコートB 10×20	4	
7 3	91219-1025011	コガタバネプレコートB 10×25	4	
7 4	94111-16012	バネW 16	4	
7 5	94001-16411	N 16	4	
7 6	23901-A53-000	ゴムクローラ 300×72×40	2	
7 7	41100-B61-803	本体フレーム COMP	1	供給不可
7 8		Dエンジンオイル 10W30	3.10	ミッション2.60 HST0.50 非売品
7 9		グリース ダイナMAX EP No1	30g	非売品
8 0				
8 1				
8 2				
8 3				
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				

4. 除雪フレーム

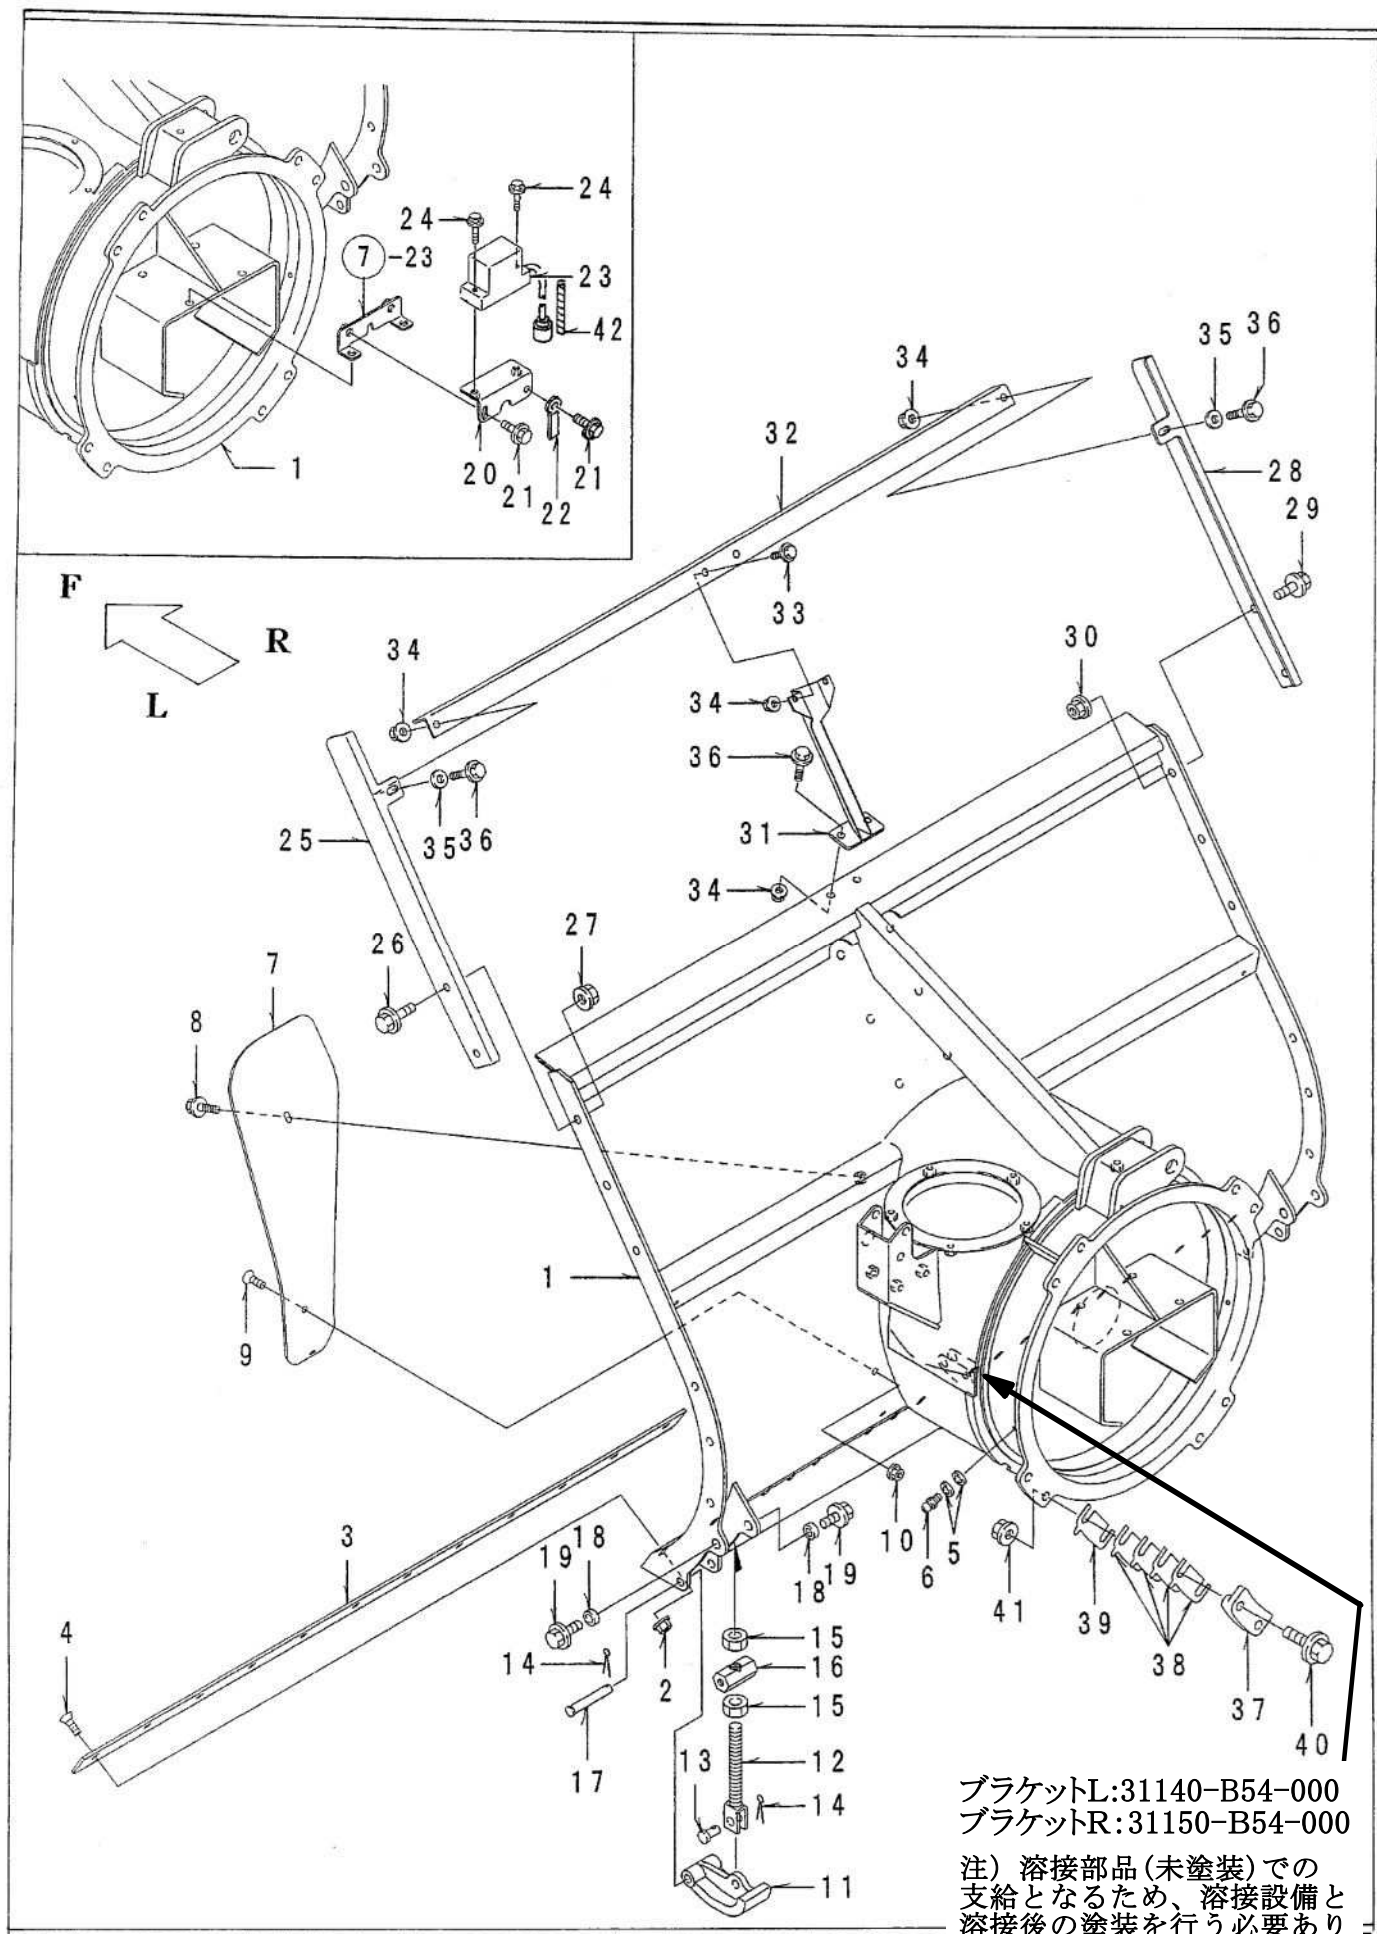


4. 除雪フレーム

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	31100-B57-113	除雪フレーム COMP	1	
2	94002-08410	フランジN 8	12	販売単位 : 10
3	31907-B54-800	エッジ	1	
4	92600-0802014	カクネB 8×20	12	販売単位 : 10
5	94101-06010	ミガキW 6	6	販売単位 : 10
6	96381-20000	グリースニップル A-MT6×1	3	
7	31901-A26-400	シャヘイバン	1	
8	93100-0802017	フランジB 8×20	1	販売単位 : 10
9	91217-0801679	6アナサラB 8×16	2	販売単位 : 10
10	94002-08410	フランジN 8	2	販売単位 : 10
11	31901-B03-800	ソリ	2	
12	31300-A53-002	ソリサポート COMP	2	
13	91401-A53-000	ピン 12×22	2	
14	94210-25200	ワリピン 2.5×20	4	販売単位 : 10
15	94001-16411	N 16	4	
16	31905-B54-000	ポスト	2	
17	91402-A53-000	ピン 12×70	2	
18	31906-B54-000	ポストカラー	4	末番-801可
19	93300-1002017	フランジB 10×1.25×20	4	販売単位 : 10
20	32100-B56-000	センサープレート COMP	1	
21	93100-0802017	フランジB 8×20	2	販売単位 : 10
22	91331-080801	コードクランプ 8×80	1	
23	83700-B18-000	傾斜センサ	1	
24	93100-0603017	フランジB 6×30	2	販売単位 : 10
25	31901-B54-800	スノーカッティングプレート L	1	
26	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
27	94006-10410	フランジN 10×1.25	2	販売単位 : 10
28	31902-B54-800	スノーカッティングプレート R	1	
29	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
30	94006-10410	フランジN 10×1.25	2	販売単位 : 10
31	31400-B54-802	センターサポート COMP	1	
32	31904-B54-802	スノーカッティングバー	1	
33	93100-0801617	フランジB 8×16	2	販売単位 : 10
34	94002-08410	フランジN 8	6	販売単位 : 10
35	94101-08015	ダイヤルW 8	2	販売単位 : 10
36	93100-0802017	フランジB 8×20	4	販売単位 : 10
37	31400-B18-800	ローリングガイド COMP	4	
38	31902-B18-000	シム (調整用)	16	
39	31903-B18-000	シム 0.6 (調整用)	4	
40	93300-1204517	フランジB 12×1.25×45	8	
41	94006-12410	フランジN 12×1.25	8	販売単位 : 10
42	91382-0702001	コルゲート 7×200	1	
43				
44				
45				
46				
47				
48				
49				
50				


5. シュータ

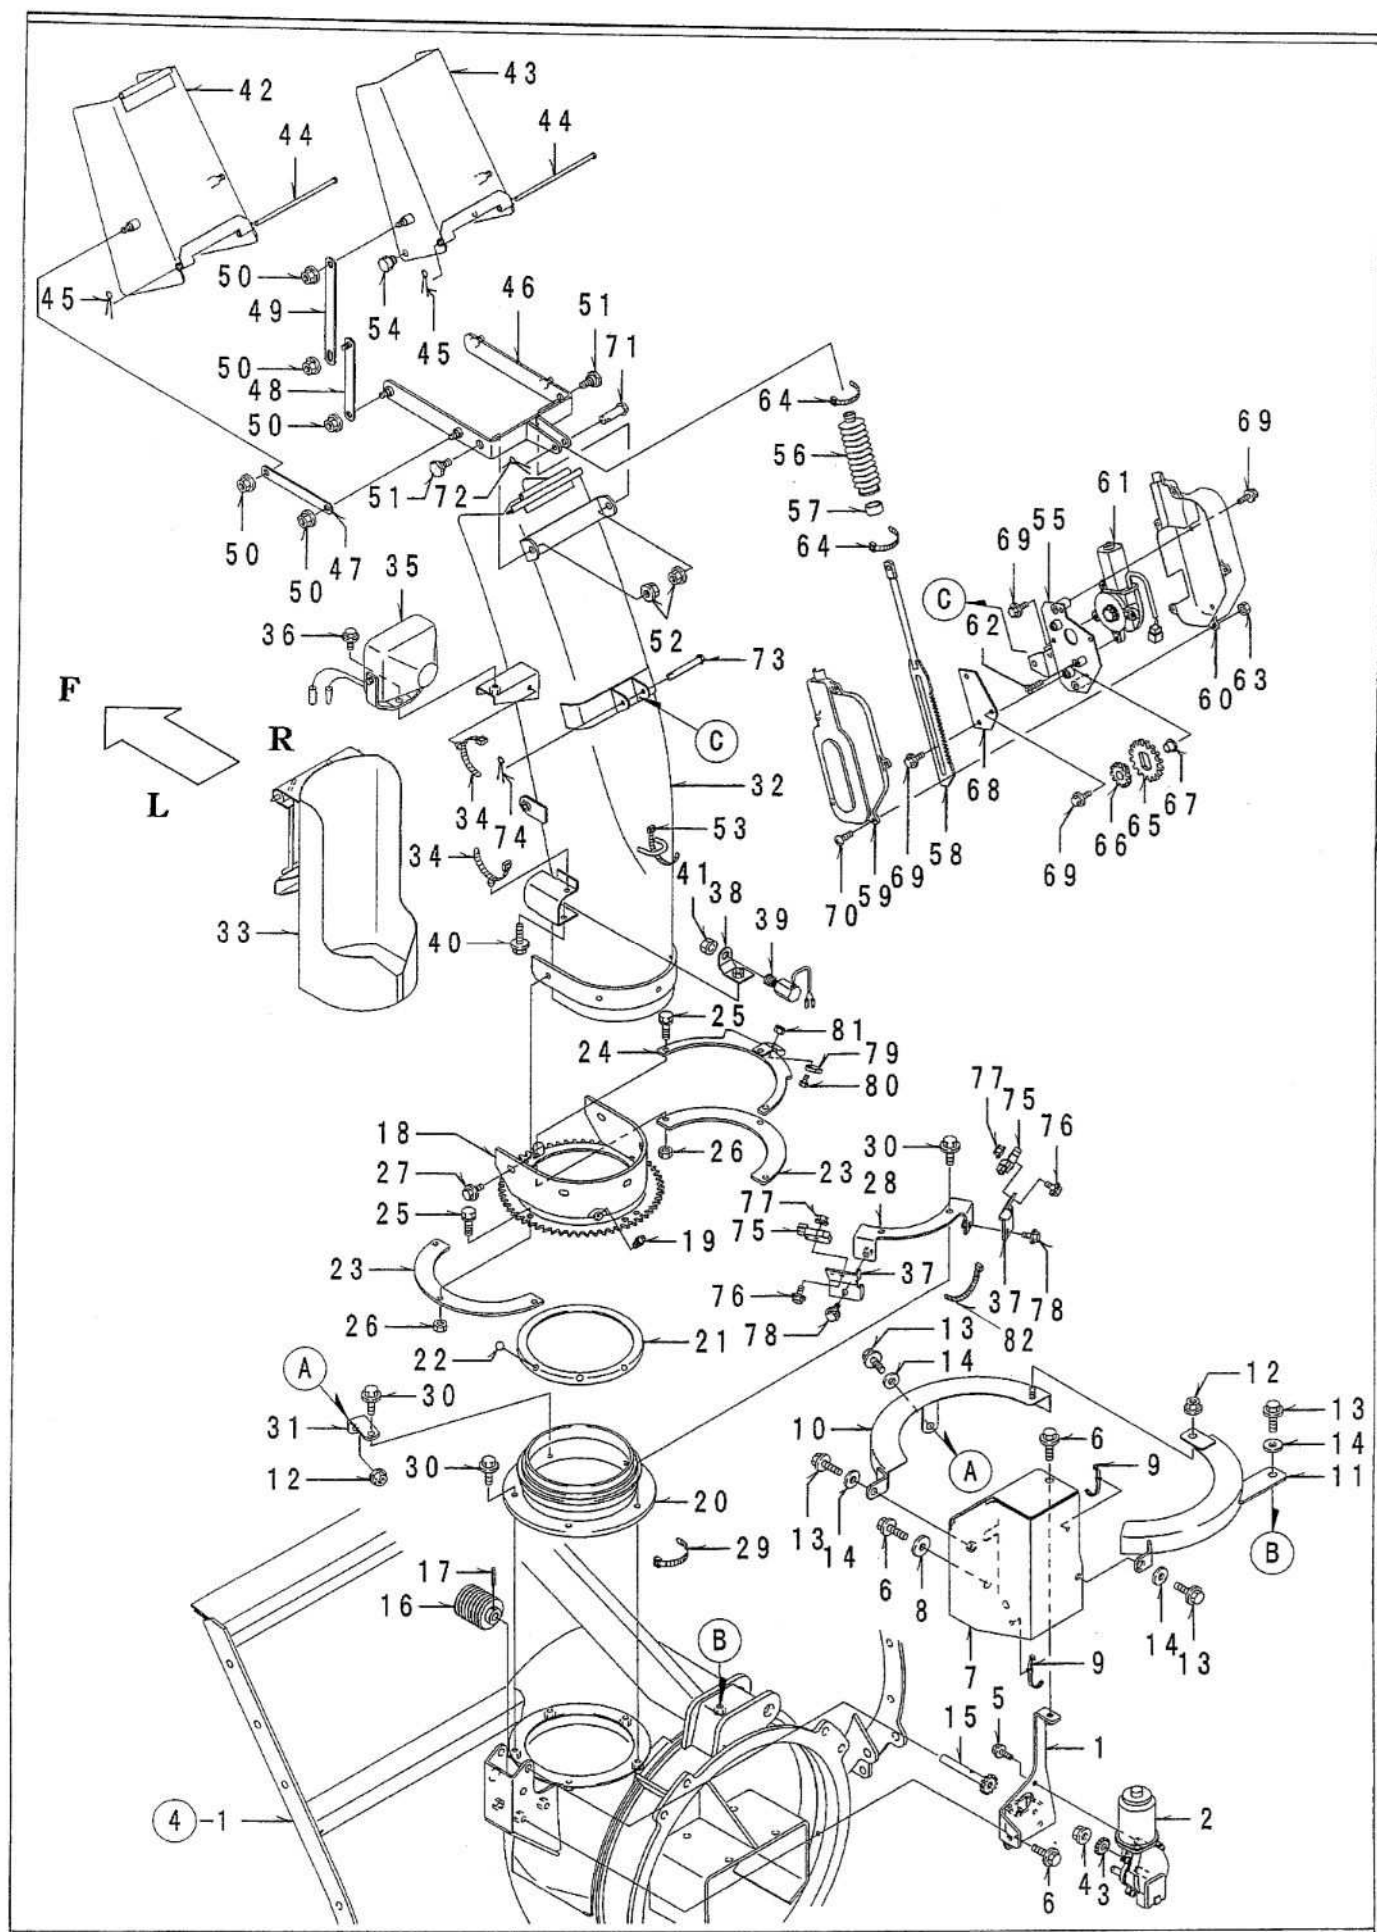

5. シュータ


SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	31300-B56-001	旋回モータブラケット COMP	1	
2	81100-B56-000	モータ LM12	1	08012-B56-000へ 詳細次項
3	31904-B56-002	旋回モータギヤ	1	
4	94002-08410	フランジN 8	1	販売単位 : 10
5	93100-0601617	フランジB 6×16	3	販売単位 : 10
6	93100-0802017	フランジB 8×20	5	販売単位 : 10
7	38100-B56-002	旋回モータカバー COMP	1	
8	94101-08015	ダイマルW 8	1	販売単位 : 10
9	91314-119P7	ケーブルストラップ 1-19P7	2	
10	38200-B56-001	シュータアンダーカバー A COMP	1	
11	38300-B56-002	シュータアンダーカバー B COMP	1	
12	94002-08410	フランジN 8	2	販売単位 : 10
13	93100-0802017	フランジB 8×20	4	販売単位 : 10
14	94101-08015	ダイマルW 8	4	販売単位 : 10
15	34100-B53-002	ウォームシャフト COMP	1	
16	62901-A71-030F1	ウォーム	1	
17	94319-45025	スプリングピン 4.5×25	1	販売単位 : 10
18	33200-B07-504	シュータベース COMP	1	
19	96381-20000	グリースニップル A-MT6×1	1	
20	31500-B50-002	ベース COMP	1	
21	33905-B08-030	ボールリテーナ	1	
22	96391-85000	スチールボール 8.5	24	販売単位 : 10
23	33901-A26-800	シュートクランプ	2	
24	33100-B56-001	シュータストッパー COMP	1	
25	92200-0802517	コガタB 8×25<7T	6	
26	94003-08412	コガタN 8<2	6	販売単位 : 10
27	93100-0801217	フランジB 8×12	5	販売単位 : 10
28	32300-B56-001	スイッチベース COMP	1	
29	91311-250	リピータイ RF250	2	販売単位 : 10
30	93100-0802017	フランジB 8×20	5	販売単位 : 10
31	33901-B56-800	センカイカバーステー	1	
32	33100-B53-101L	シュート 900 PLシキミ	1	飛散警告ラベル貼付済
33	33200-B50-003L	カートリッジカバー PL ASSY	1	ブロー警告ラベル貼付済
34	91315-C4397	ケーブルクリップ C-4397	2	
35	83100-G18-000	ワーキングランプ 18W	1	83120-G09-000 ハルブ 12V18W
36	93100-0801217	フランジB 8×12	1	販売単位 : 10
37	32902-B56-000	スイッチプレート R	2	
38	81200-A90-803	シュートスイッチブラケット COMP	1	
39	83100-A65-000	ガードスイッチ	1	
40	93100-0801217	フランジB 8×12	1	販売単位 : 10
41	94005-12412	コガタN 12×1.25<2	1	販売単位 : 10
42	33300-B53-600F2	シュータデフレクタ A COMP	1	
43	33400-B53-600F2	シュータデフレクタ B COMP	1	
44	91262-061650	プレスピン 6×165	2	
45	94210-20120	ワリピン 2×12	2	販売単位 : 10

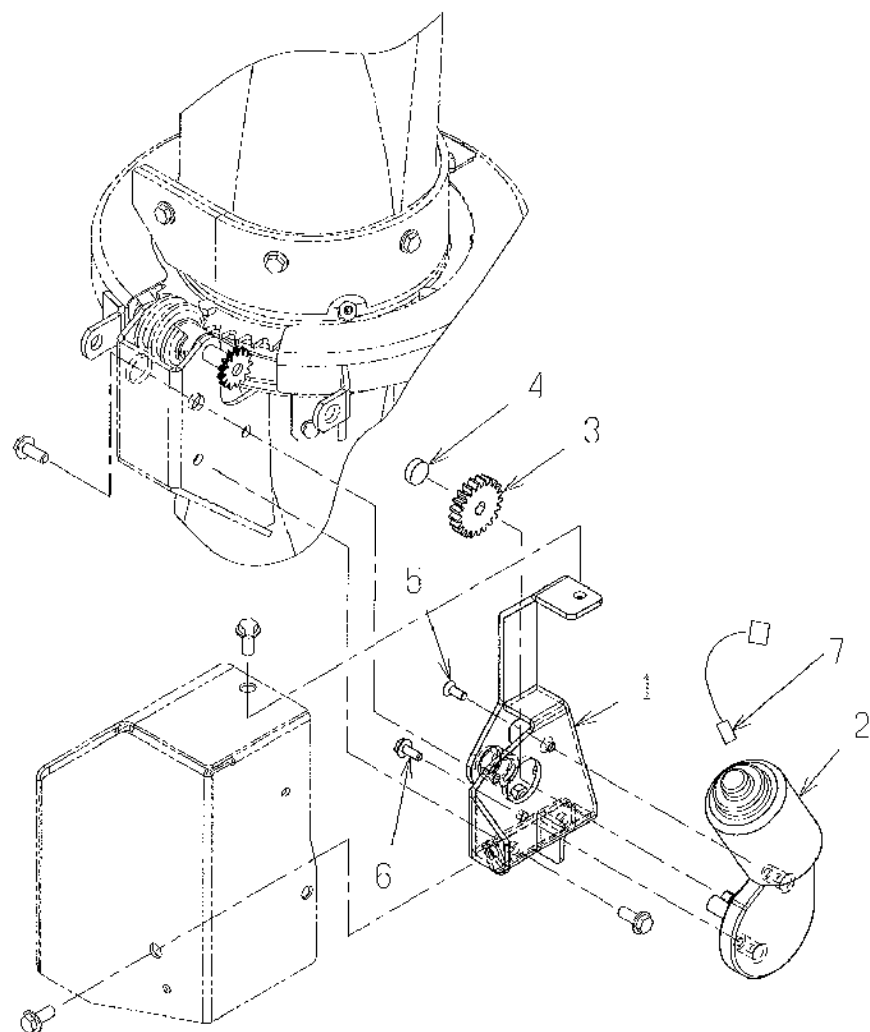

No	品番	品名	処建	個数	備考	改訂日	明細
1	31300-B86-930	旋回モータブラケット COMP	B2	1			1
2	81100-B82-001	モータ8157		1			2
3	31904-B56-830	旋回モータギヤ	B2	1			3
4	38802-B72-000	ナイロンホイール		1			4
5	81217-0601874	67ナリラB 6×16		1			5
6	83100-0601617	ファンZB 6×16		2			6
7	80300-B56-000	モータ交換ハネス		1			7

5. シュータ

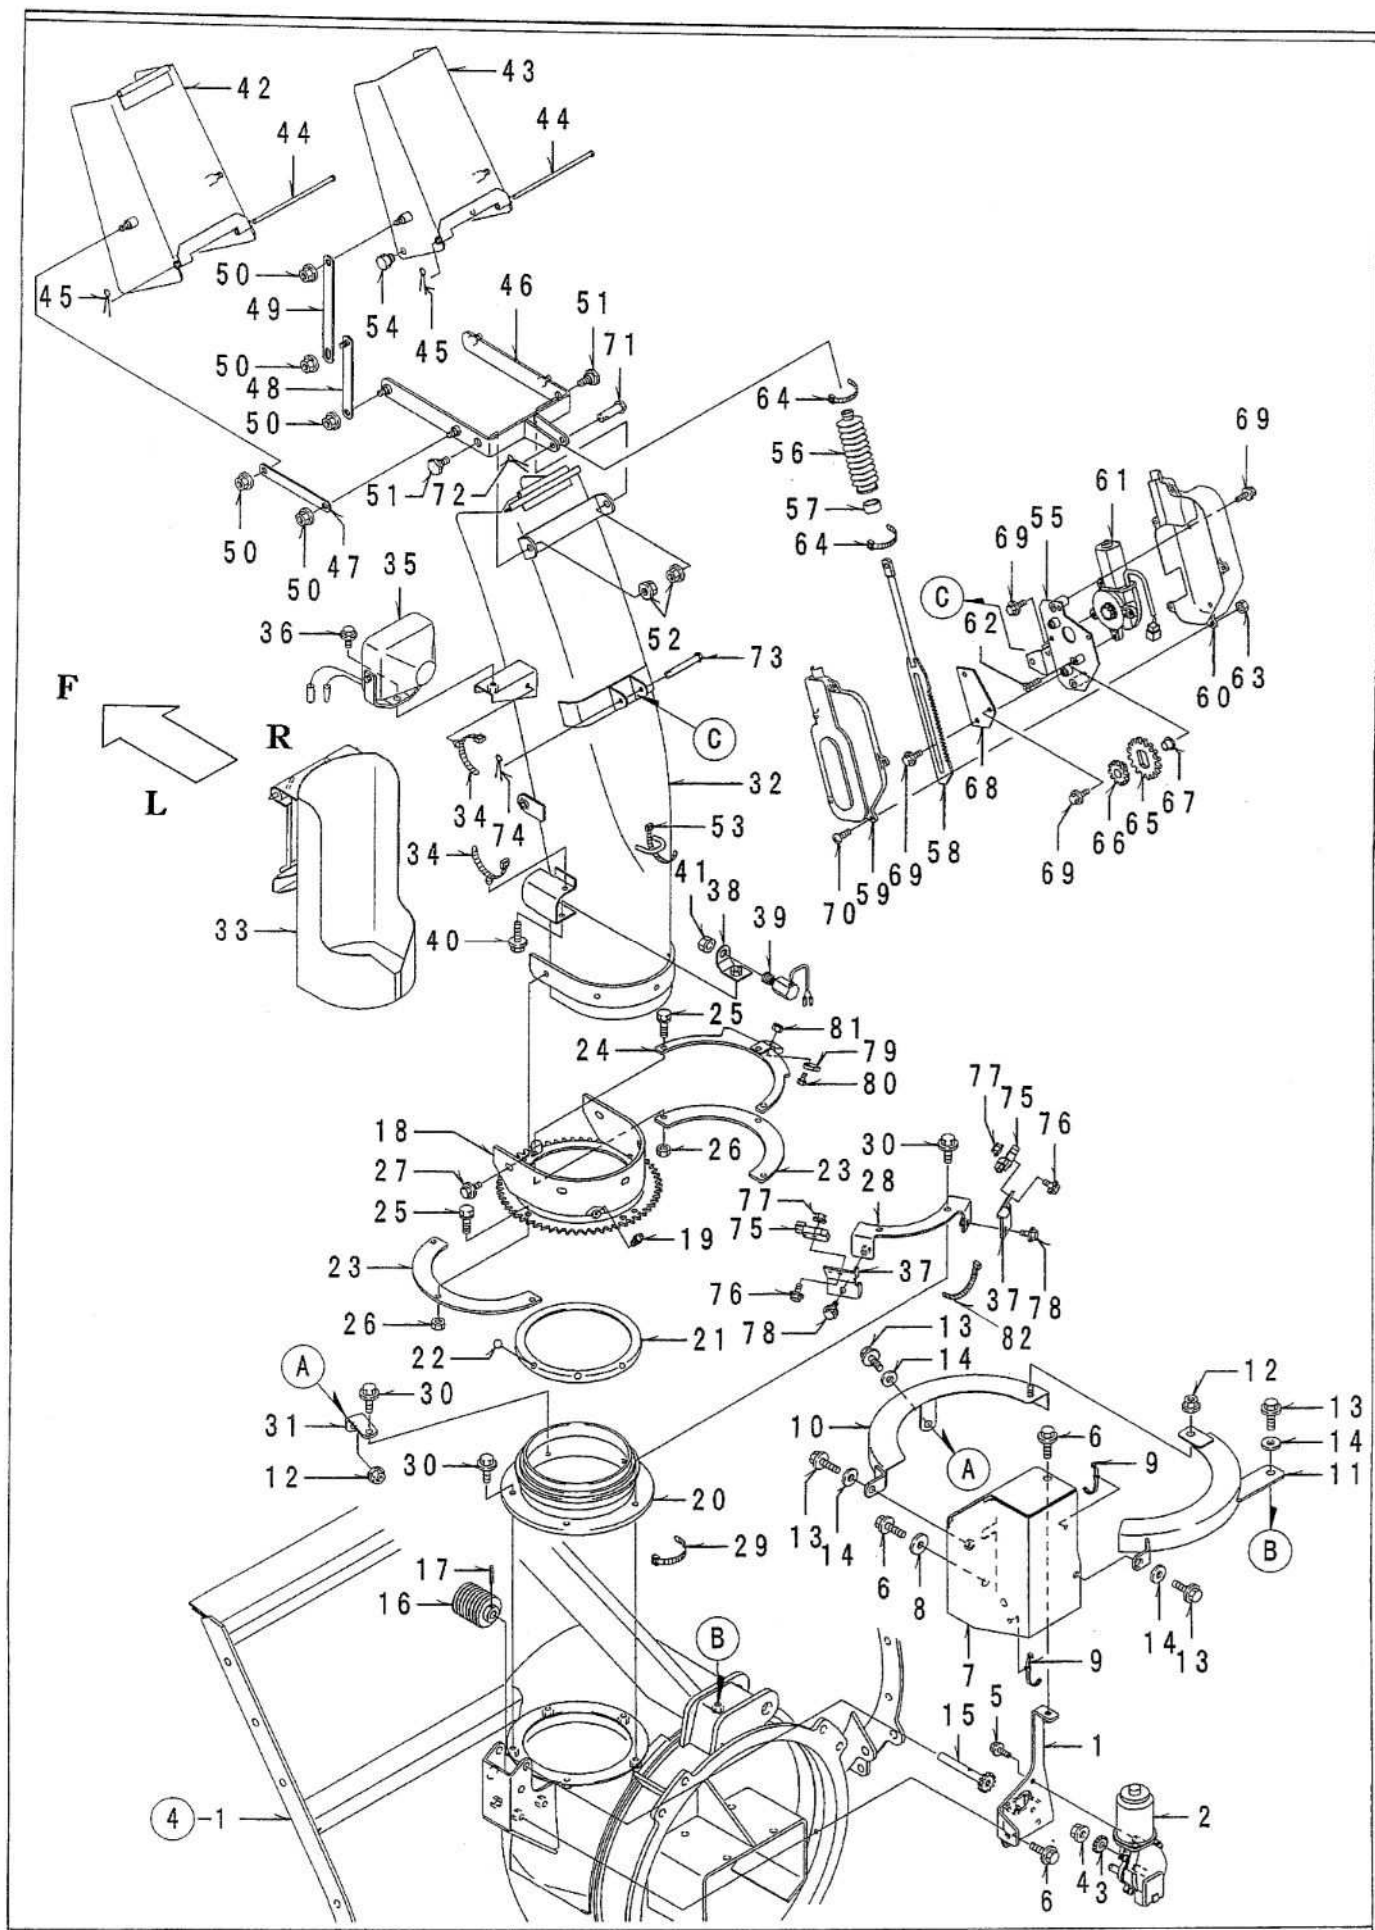


5. シュータ

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
4 6	33500-B56-800	シューターム COMP	1	
4 7	33902-B53-800	リンクアーム 129	2	
4 8	33600-B53-800	シュータリンク A COMP	2	
4 9	33903-B53-801	シュータリンク B	2	
5 0	94002-08410	フランジN 8	10	販売単位 : 10
5 1	33904-B53-000	股付ボルト	2	
5 2	94002-08410	フランジN 8	2	販売単位 : 10
5 3	91311-140	リピータイ RF140	1	販売単位 : 10
5 4	91361-18N0	ホルプラグ 18N0	2	
5 5	33700-B56-803	モーターブラケット A COMP	1	
5 6	33904-B08-000	シュータブーツ	1	
5 7	33908-B08-000	スベサチューブ	1	
5 8	34200-B08-002	シュータラック COMP	1	末番-003可
5 9	38905-B08-000F1	モーターカバー L	1	
6 0	38908-B08-000F1	モーターカバー R	1	
6 1	81100-B53-002	モータ JC578VA	1	
6 2	91217-0601674	67ナサラB 6×16	1	販売単位 : 10
6 3	91233-054110	Uナット 5	5	販売単位 : 10
6 4	91316-2140	ケーブルバンド CV-140SW	2	販売単位 : 10
6 5	33902-B56-002	ギヤ M2×32	1	
6 6	33903-B56-003	ギヤ M2×18	1	
6 7	91644-121080	フランジブッシュ 80F-1210	1	
6 8	33904-B56-800	オサエプレート	1	
6 9	93100-0601617	フランジB 6×16	8	販売単位 : 10
7 0	93500-0501214	ナベコネジ 5×12	5	販売単位 : 10
7 1	94330-0802510	マルアタマピン 8×25	1	
7 2	94210-25150	ワリピン 2.5×15	1	販売単位 : 10
7 3	94330-0805510	マルアタマピン 8×55	1	
7 4	94210-25150	ワリピン 2.5×15	1	販売単位 : 10
7 5	83100-B56-000	スイッチ E21	2	
7 6	93100-0502014	フランジB 5×20	2	販売単位 : 10
7 7	94002-05410	フランジN 5	2	販売単位 : 10
7 8	93100-0601217	フランジB 6×12	2	販売単位 : 10
7 9	83200-B56-000	スイッチマグネット	1	
8 0	92000-0501017	B 5×10(7T	1	販売単位 : 10
8 1	94001-05412	N 5(2	1	販売単位 : 10
8 2	91311-140	リピータイ RF140	3	販売単位 : 10
8 3				
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				

6. オーガギヤケース

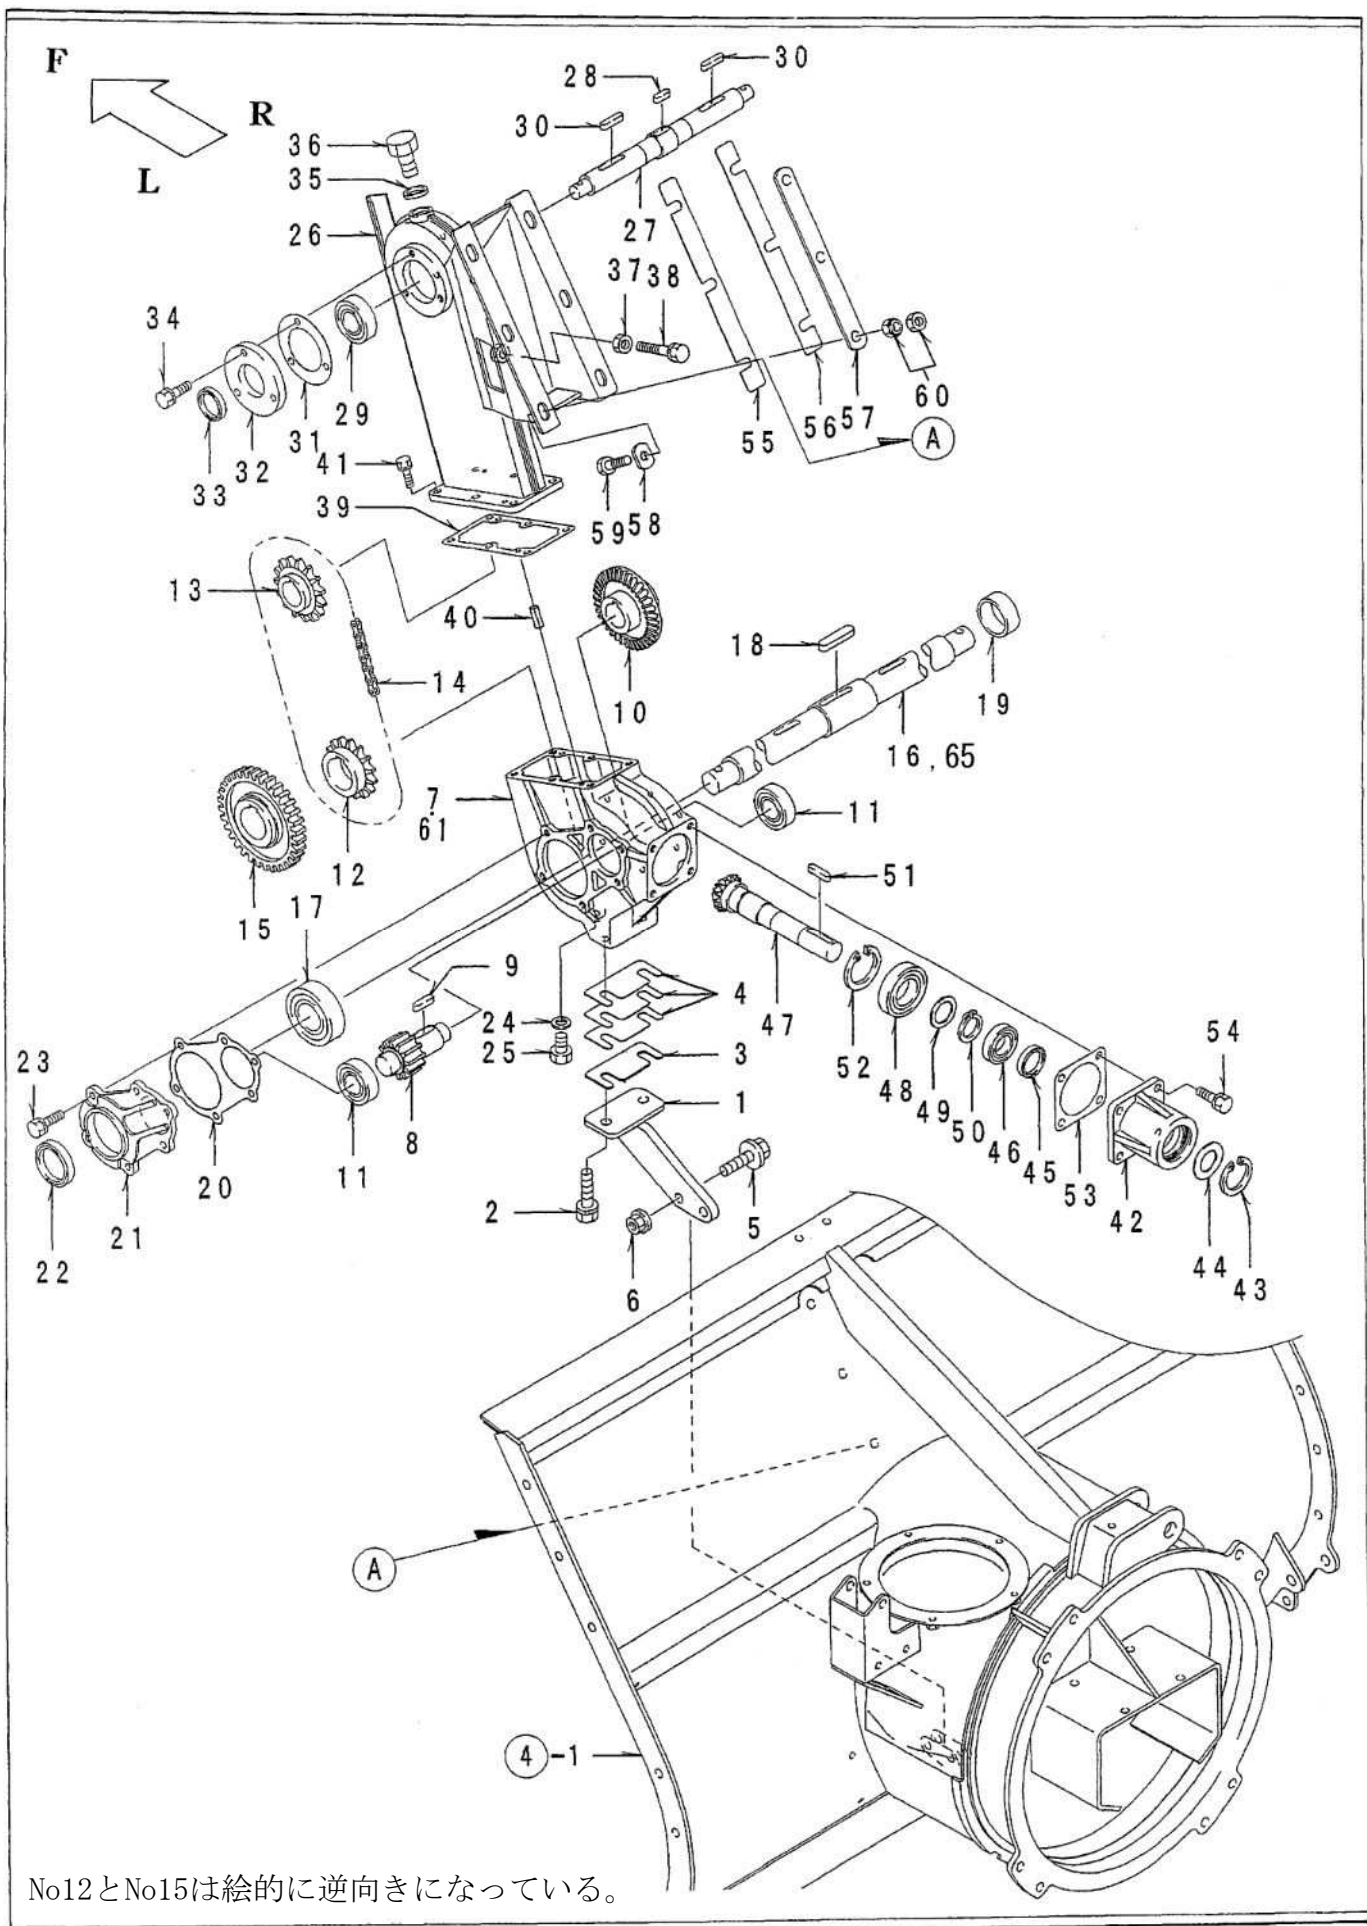


6. オーガギヤケース

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	31200-B54-800	ギヤケースサポート COMP	1	
2	91219-1030010	コガタバネプレートB 10×30	2	
3	31907-A71-001	ギヤケースライナー 2.0 (調整用)	1	
4	31908-A71-001	ギヤケースライナー 0.6 (調整用)	3	
5	93300-1003517	フランジB 10×1.25×35	2	
6	94006-10410	フランジN 10×1.25	2	販売単位 : 10
7	31911-A26-701	オーガギヤケース	1	
8	32903-A71-002	平歯車 M3.5×12	1	
9	97115-030241	キー 8×7×30RR	1	
10	32907-A70-001	ベベルギヤ M3×33	1	
11	96100-06205	ベアリング 6205	2	
12	32907-A09-000	スプロケット 40×18(下)	1	
13	32908-A09-000	スプロケット 40×18(上)	1	
14	91911-A26-000	ローラーチェーン 40×78	1	
15	32904-A71-002	平歯車 M3.5×34	1	
16	34901-A57-003	オーガ軸	1	適用号機 ~05****
17	96100-06207	ベアリング 6207	2	
18	97117-052241	キー 12×8×52RR	1	
19	32909-A09-001	カラー 40×19	1	
20	31903-A71-001	ギヤケースフタパッキン	2	
21	31904-A09-730F1	オーガギヤケースフタ	2	
22	98251-3505511	シール D355511	2	
23	91219-0825010	コガタバネプレートB 8×25	12	販売単位 : 10
24	91691-1018202	丸パッキン 10×18×2	1	
25	92000-1001614	B 10×16	1	販売単位 : 10
26	31600-A26-610	チェーンケース COMP	1	
27	34901-B18-002	上段ローターシャフト	1	
28	97114-023240	キー 7×7×23RR	1	
29	96100-06205	ベアリング 6205	2	
30	97114-033041	キー 7×7×33S	2	
31	31908-A26-001	上段ローターフタパッキン	2	
32	31909-A26-801	上段ロータフタ	2	
33	98251-2504008	シール D25408	2	
34	91219-0825010	コガタバネプレートB 8×25	6	販売単位 : 10
35	91902-A53-000	オイルキャップパッキン	1	
36	91901-A53-000	オイルキャップ	1	
37	94003-10412	コガタN 10(2)	1	販売単位 : 10
38	92201-1006514	コガタB 10×65	1	
39	31902-A71-001	オーガギヤケースパッキン	1	
40	94319-60016	スプリングピン 6×16	2	販売単位 : 10
41	91219-0825010	コガタバネプレートB 8×25	6	販売単位 : 10
42	31906-A70-700	入力ハウジング	1	
43	94520-45080	Cアナトメワ 45	1	
44	31906-A71-000	ボウゴバン	1	
45	98251-2504008	シール D25408	1	

6. オーガギヤケース

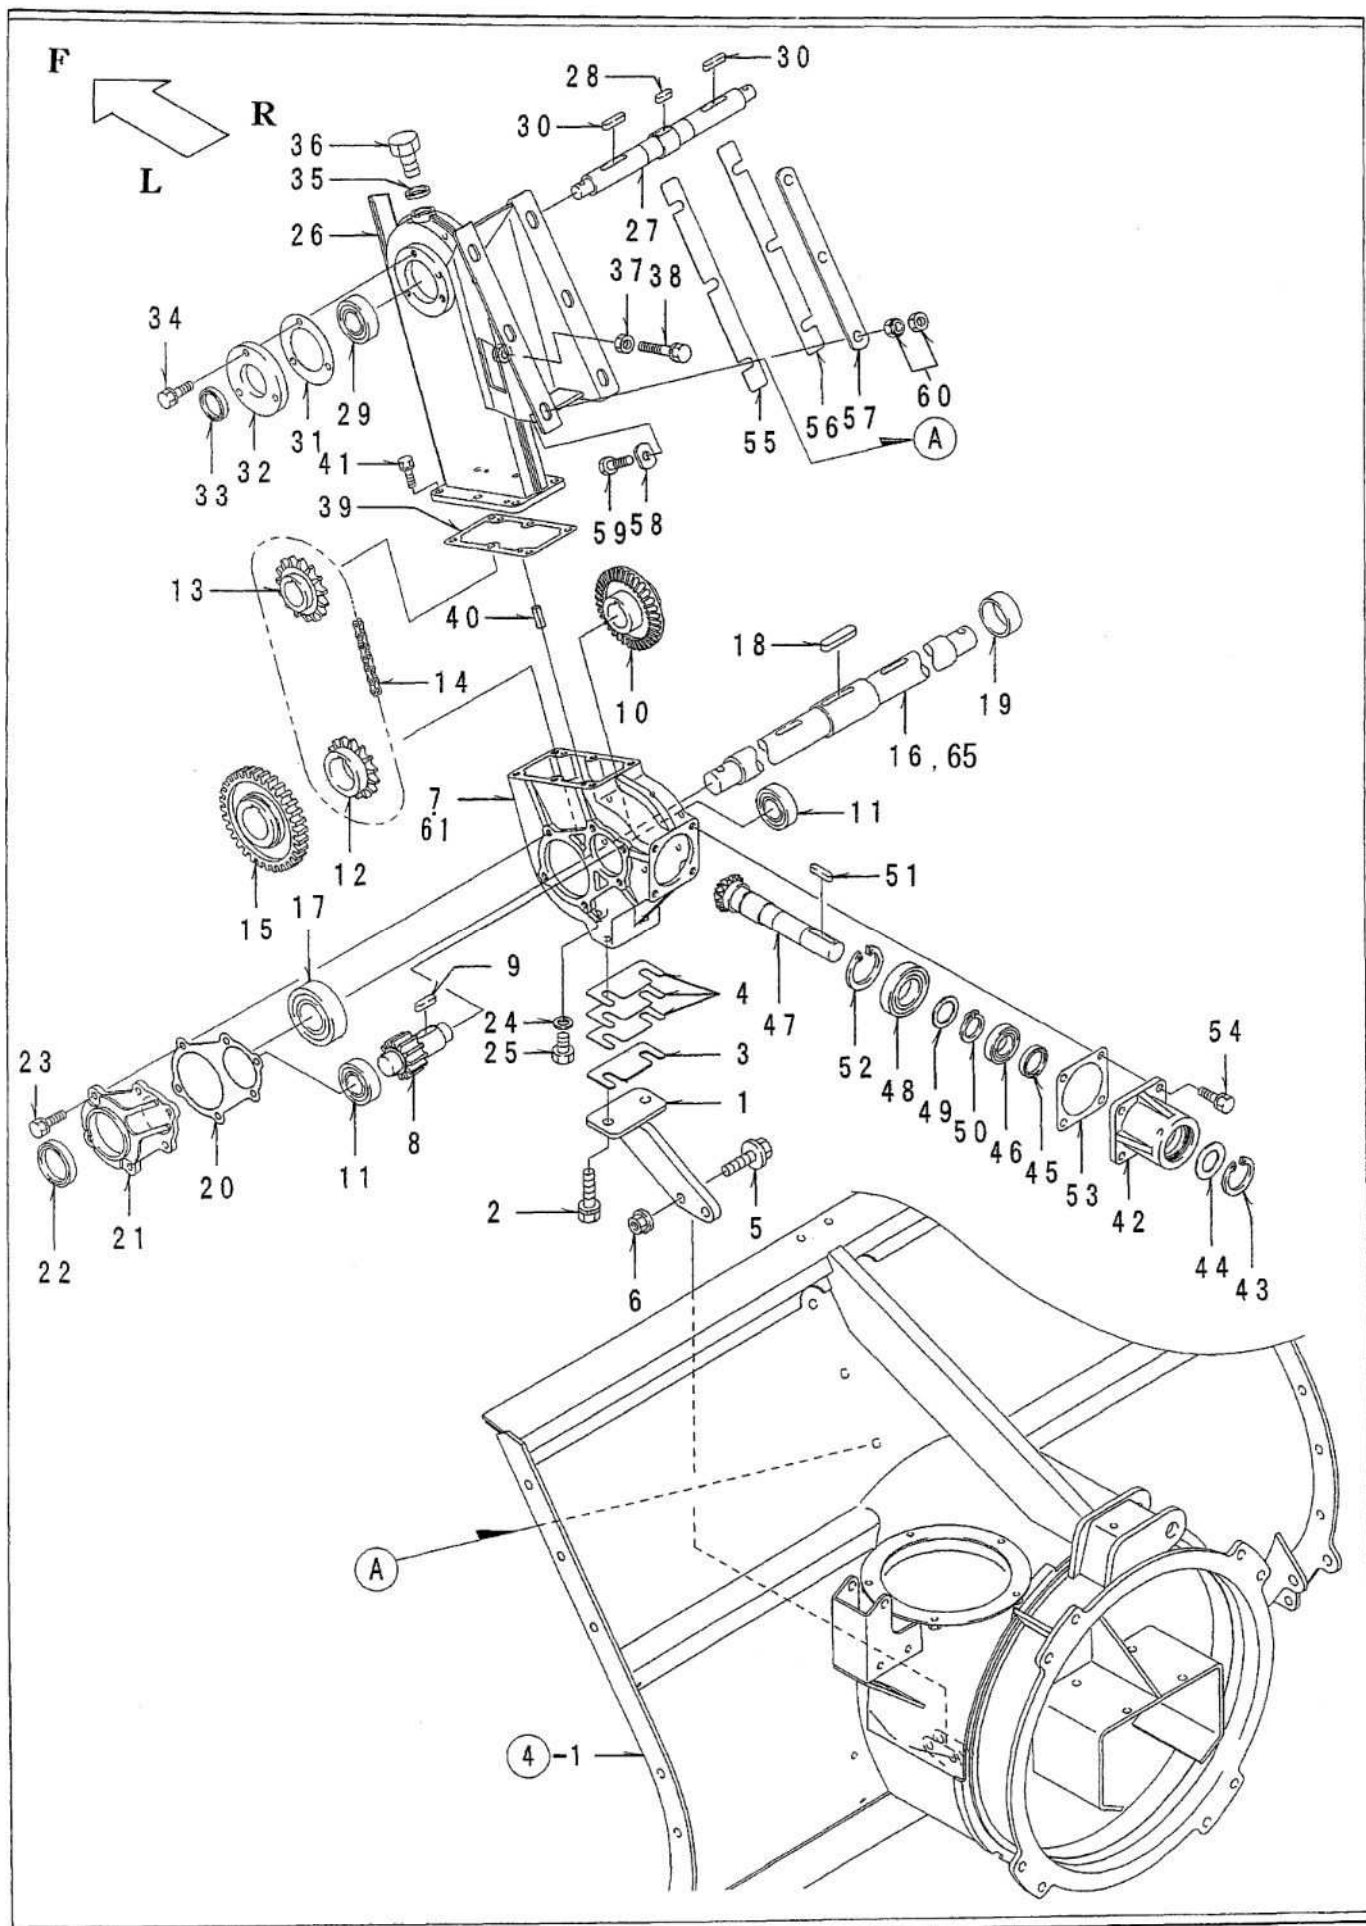


6. オーガギヤケース

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
4 6	96100-06005	ベアリング 6005	1	
4 7	32901-B18-000	ベベルギヤ M3×14	1	
4 8	96100-06028	ベアリング 60/28	1	
4 9	32905-A70-000	スラストワッシャ 28×40×2	1	末番-001可
5 0	94510-28080	Cジクトメワ 28	1	販売単位 : 10
5 1	97114-033041	キー 7×7×33S	1	
5 2	94520-52080	C7ナトメワ 52	1	
5 3	31905-A71-001	入力ハウジングパッキン	1	
5 4	91219-0825010	コガタバネプレートB 8×25	4	販売単位 : 10
5 5	31901-B56-001	チェーンケース調整ライナー 1.0 (調整用)	2	
5 6	31902-B56-001	チェーンケース調整ライナー 2.0 (調整用)	5	
5 7	31913-A09-400	アテ座金	2	
5 8	31901-A58-000	チェーンケース座金	6	
5 9	92200-1004517	コガタB 10×45(7T)	6	
6 0	91235-10100	ハードロックN 10	6	
6 1		ギヤオイル #90	0.8ℓ	オーガギヤケース用 非売品
6 2				
6 3				
6 4				
6 5	34901-B56-002	オーガシャフト	1	適用号機 06****~
6 6				
6 7				
6 8				
6 9				
7 0				
7 1				
7 2				
7 3				
7 4				
7 5				
7 6				
7 7				
7 8				
7 9				
8 0				
8 1				
8 2				
8 3				
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				


7. ブロワ

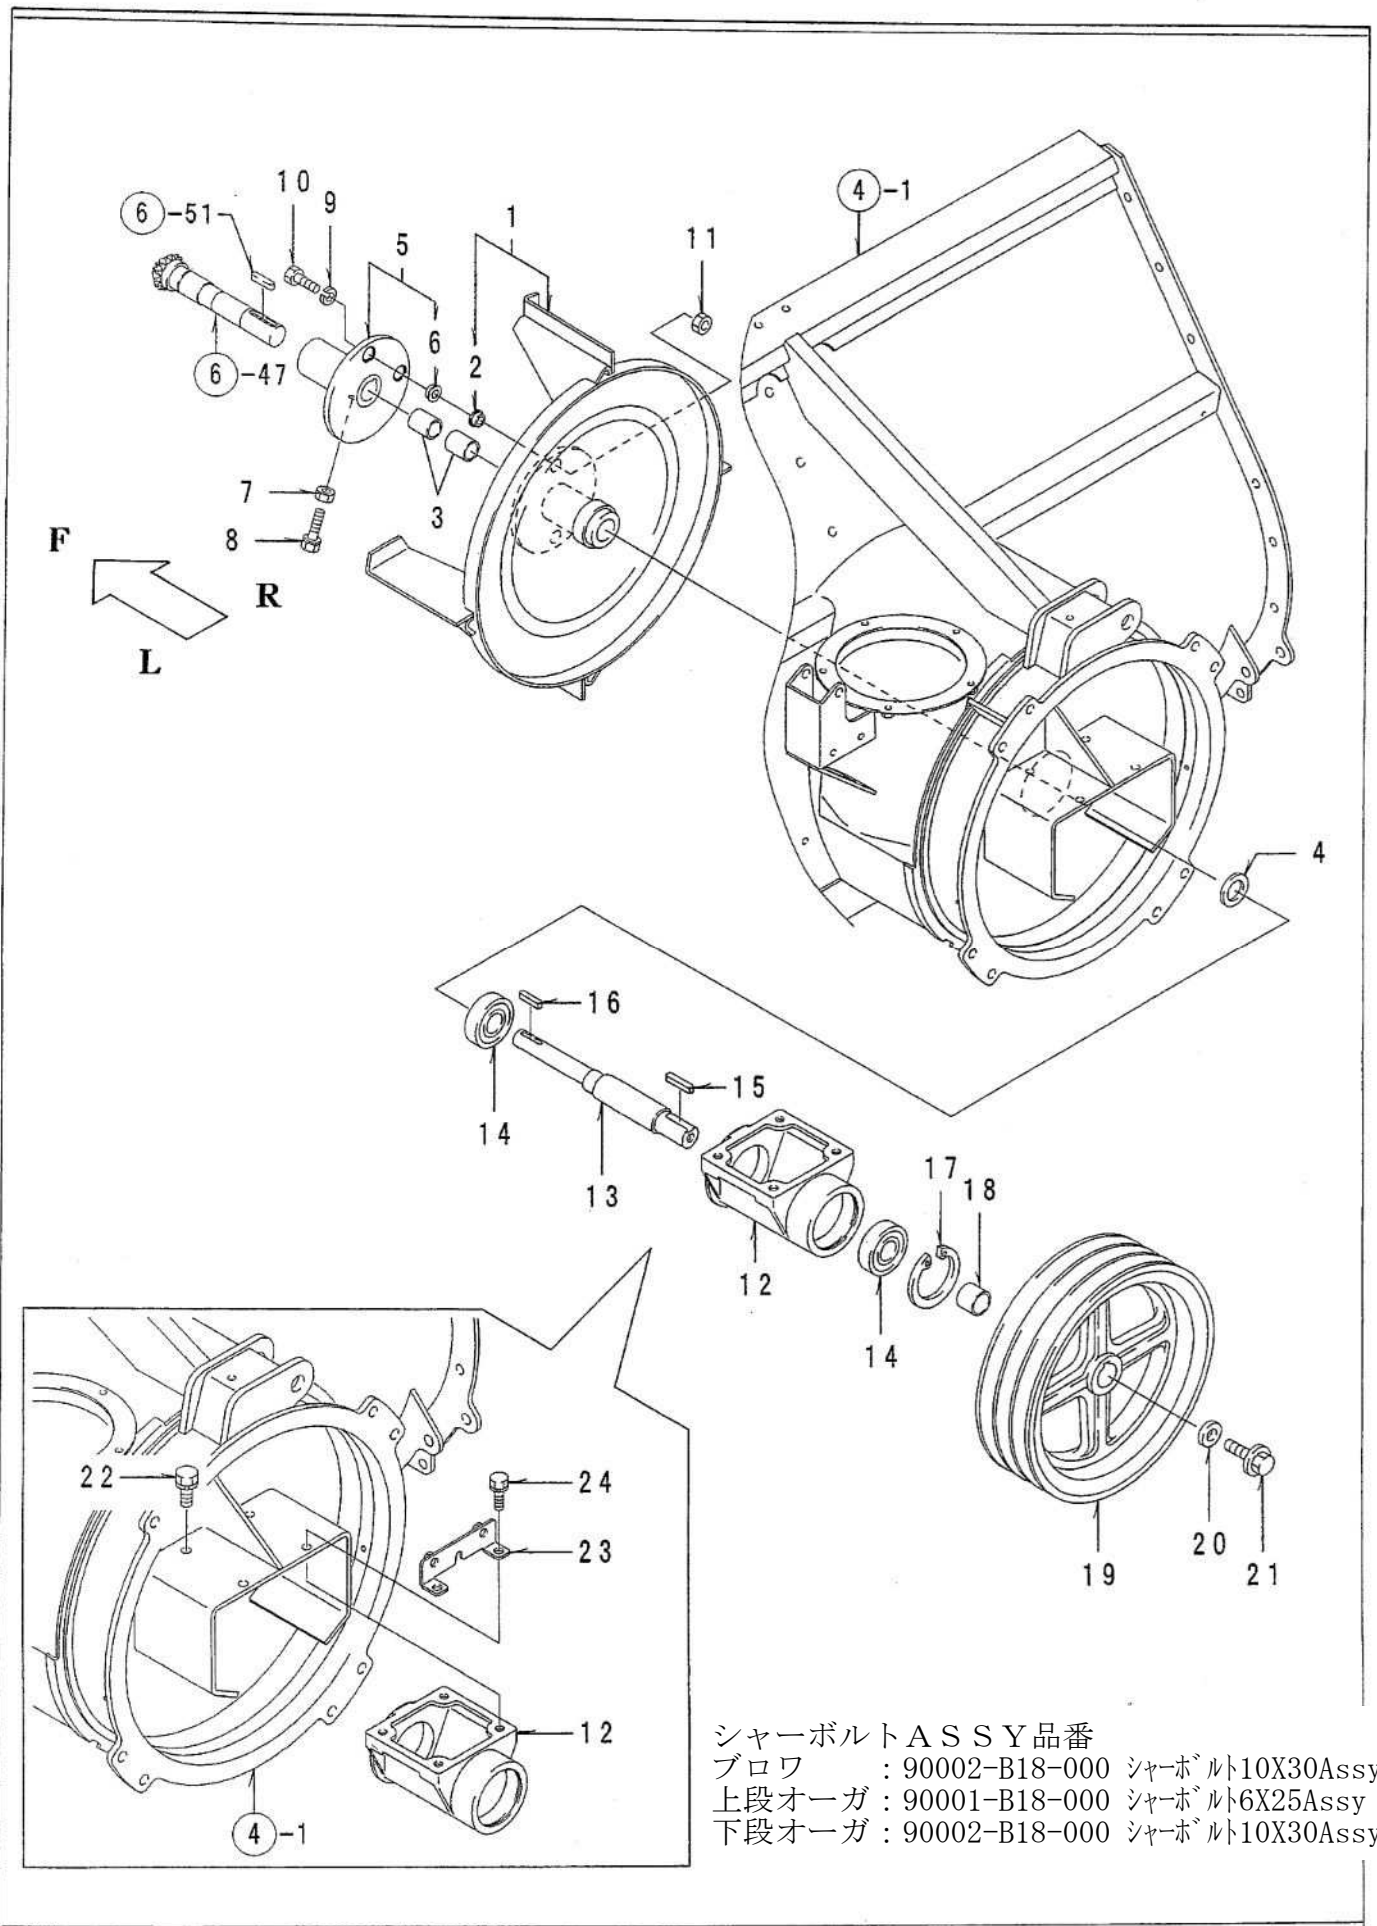

7. プロウ

SE422AD


パート	部 品 番 号	部 品 名	個数	備 考
1	36100-A94-810	プロウ COMP	1	
2	35901-A30-000	オーガシヤープッシュ	2	
3	91646-2530 R	プッシュ BM2530FB	2	
4	34902-A98-001	カラ- 25×4.5	1	
5	36200-A94-800	オーガジョイント COMP	1	
6	35901-A30-000	オーガシヤープッシュ	2	
7	94003-10412	コガタN 10(2	1	販売単位 : 10
8	91212-1030147	コガタオシB 10×30(120° (7T	1	
9	94111-10012	バネW 10	1	販売単位 : 10
10	92001-1003014	B 10×30	1	販売単位 : 10
11	94001-10412	N 10(2	1	販売単位 : 10
12	36901-A91-701	プロウ軸ベアリングケース	1	
13	34902-B30-000	プロウシャフト	1	
14	96105-06306	ベアリング 6306UU	2	
15	97115-040041	キー 8×7×40S	1	
16	97114-033041	キー 7×7×33S	1	
17	94520-72080	CアナトメW 72	1	
18	34903-B30-000	カラ- 30×24	1	
19	63901-B54-700	Vプーリー 284C-3×30	1	
20	91251-1035451	マルザガネ 10×35×4.5	1	
21	93300-1002517	フランジB 10×1.25×25	1	販売単位 : 10
22	93000-1002517	コガタバネB 10×25(7T	2	
23	32200-B56-000	センサーブラケット COMP	1	
24	93000-1003017	コガタバネB 10×30(7T	2	
25				
26				
27				
28		No1 プロウ形状		
29		上記品番36100-A94-810は		
30		こちらの形状になります。		
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				

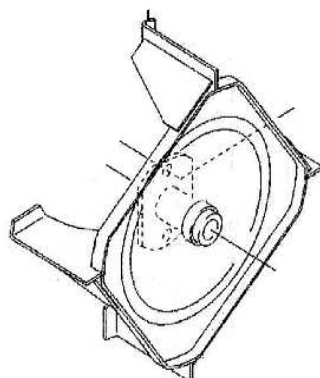

90002-B18-000
シャ-ボルト10×30
10本 ASSY 構成部品

適用号機 06****~

8. オーガ・ローダ

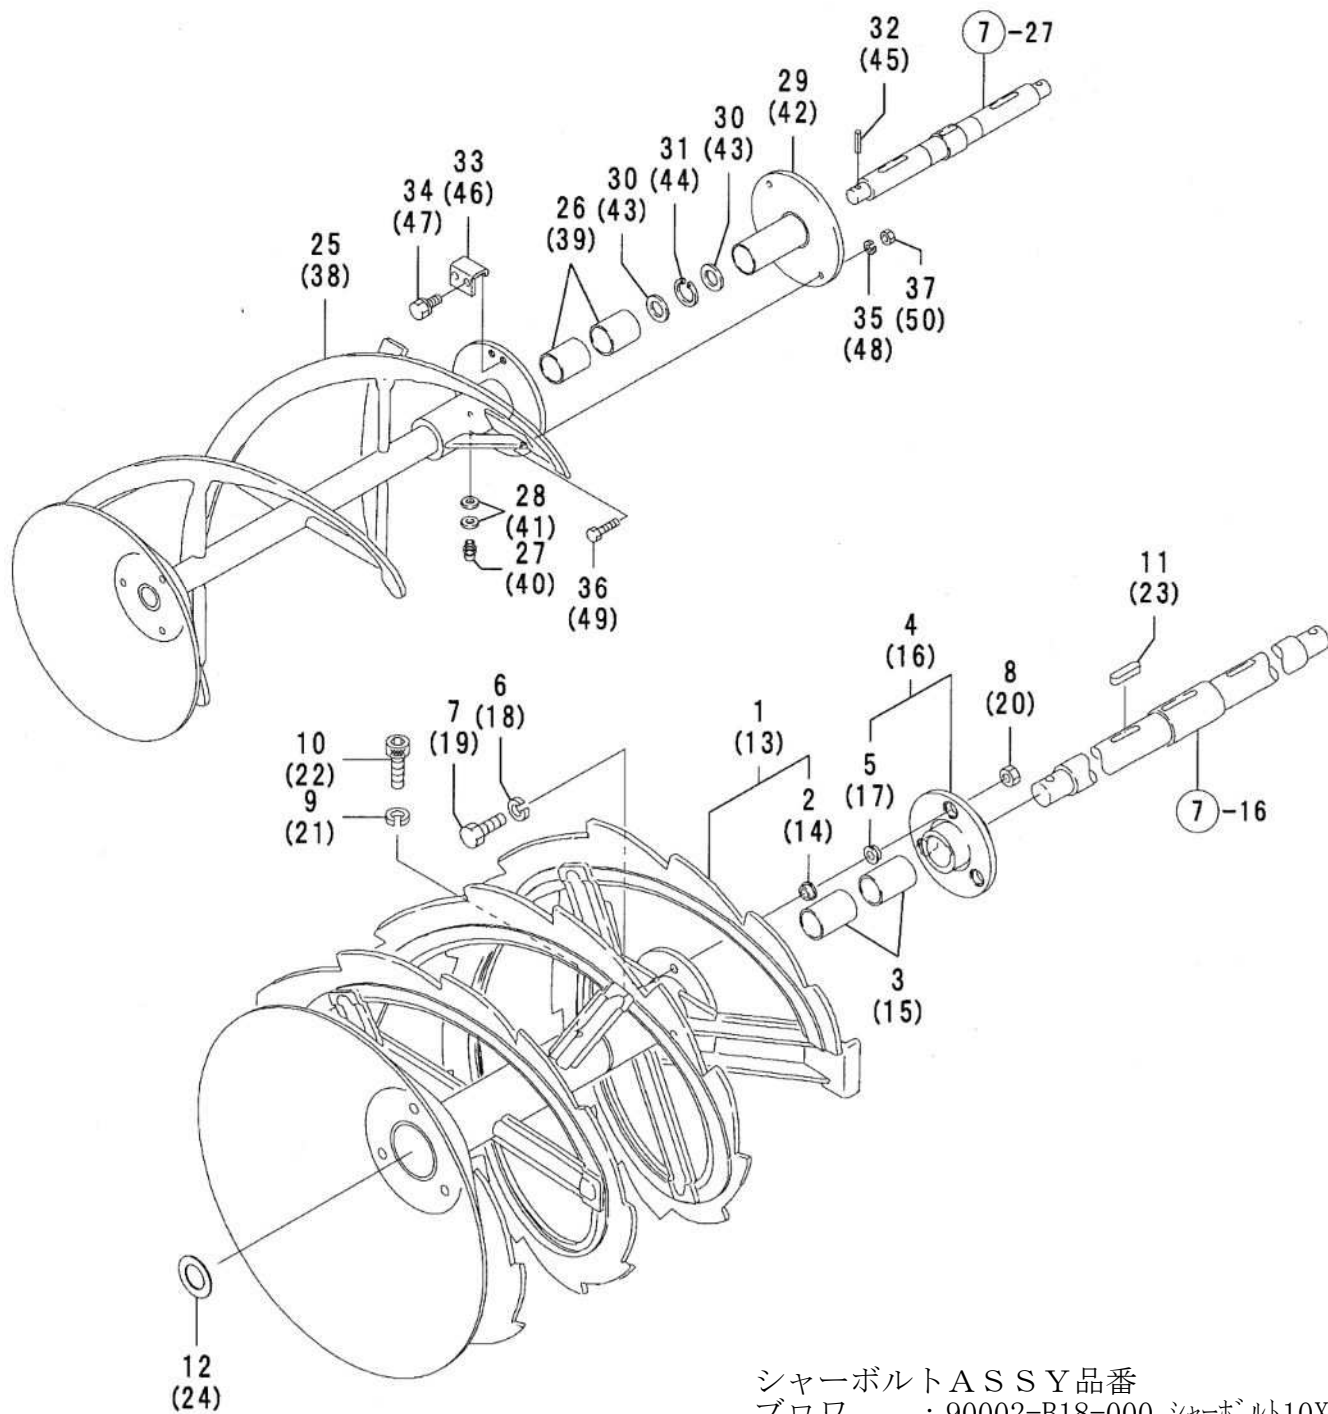

シャーボルトASSY品番

ブロー : 90002-B18-000 シャーボルト10X30Assy

上段オーガ : 90001-B18-000 シャーボルト6X25Assy

下段オーガ : 90002-B18-000 シャーボルト10X30Assy

適用号機 06****~ 8. オーガ・ロータ

No.	部 品 番 号	部 品 名	個数	備 考
1	35100-B56-609	下段オーガ`L COMP	1	
2	35901-A30-000	オーガ`シャ-ブ`ツシュ	2	
3	91646-3550R	ブ`ツシュ BM3550FS	2	
4	35500-B72-803	オーガ`シャ-フランジ` COMP	1	
5	35901-A30-000	オーガ`シャ-ブ`ツシュ	3	
6	94111-10012	ハ`ネW 10	1	販売単位 : 10
7	92001-1003014	B 10*30	1	販売単位 : 10
8	94001-10412	N 10(2	1	販売単位 : 10
9	94111-08012	ハ`ネW 8	1	販売単位 : 10
10	93900-0803009	6ア`B8*30	1	販売単位 : 10
11	97116-040241	キ- 10*8*40RR	1	
12	91926-A09-000	スラストワッシャー	1	
13	35200-B56-609	下段オーガ`R COMP	1	
14	35901-A30-000	オーガ`シャ-ブ`ツシュ	2	
15	91646-3550R	ブ`ツシュ BM3550FS	2	
16	35500-B72-800	オーガ`シャ-フランジ` COMP	1	
17	35901-A30-000	オーガ`シャ-ブ`ツシュ	3	
18	94111-10012	ハ`ネW 10	1	販売単位 : 10
19	92001-1003014	B 10*30	1	販売単位 : 10
20	94001-10412	N 10(2	1	販売単位 : 10
21	94111-08012	ハ`ネW 8	1	販売単位 : 10
22	93900-0803009	6ア`B8*30	1	販売単位 : 10
23	97116-040241	キ- 10*8*40RR	1	
24	91926-A09-000	スラストワッシャー	1	
25	35300-B56-602	上段オーガ`L COMP	1	
26	91646-3540R	ブ`ツシュ BM3540FS	2	
27	96381-20000	グ`リースニップ`ル A-MT6*1	1	
28	94101-06010	ミカ`キW 6	2	販売単位 : 10
29	35100-B18-802	上段シャ-フランジ` COMP	1	
30	91251-1830321	マルサ`カ`ネ 18*30*3.2	2	94101-18011 コカ`タW18へ
31	94520-30080	Cア`ナトメ 30	1	
32	94319-60025	スプ`リング`ピ`ン 6*25	1	販売単位 : 10
33	35903-A09-801	ストップ`ハ-	1	
34	93000-0801217	コカ`タハ`ネB 8*12(7T	2	販売単位 : 10
35	94111-06012	ハ`ネW 6	1	販売単位 : 10
36	92001-0602514	B 6*25	1	販売単位 : 10
37	94001-06412	N 6(2	1	販売単位 : 10
38	35400-B56-602	上段オーガ`R COMP	1	
39	91646-3540R	ブ`ツシュ BM3540FS	2	
40	96381-20000	グ`リースニップ`ル A-MT6*1	1	
41	94101-06010	ミカ`キW 6	2	販売単位 : 10
42	35100-B18-802	上段シャ-フランジ` COMP	1	


90002-B18-000
シャ-ボルト10×30
10本 ASSY 構成部品

90002-B18-000
シャ-ボルト10×30
10本 ASSY 構成部品

90001-B18-000
シャ-ボルト6×25
10本 ASSY 構成部品

適用号機 06****～

8. オーガ・ローダ

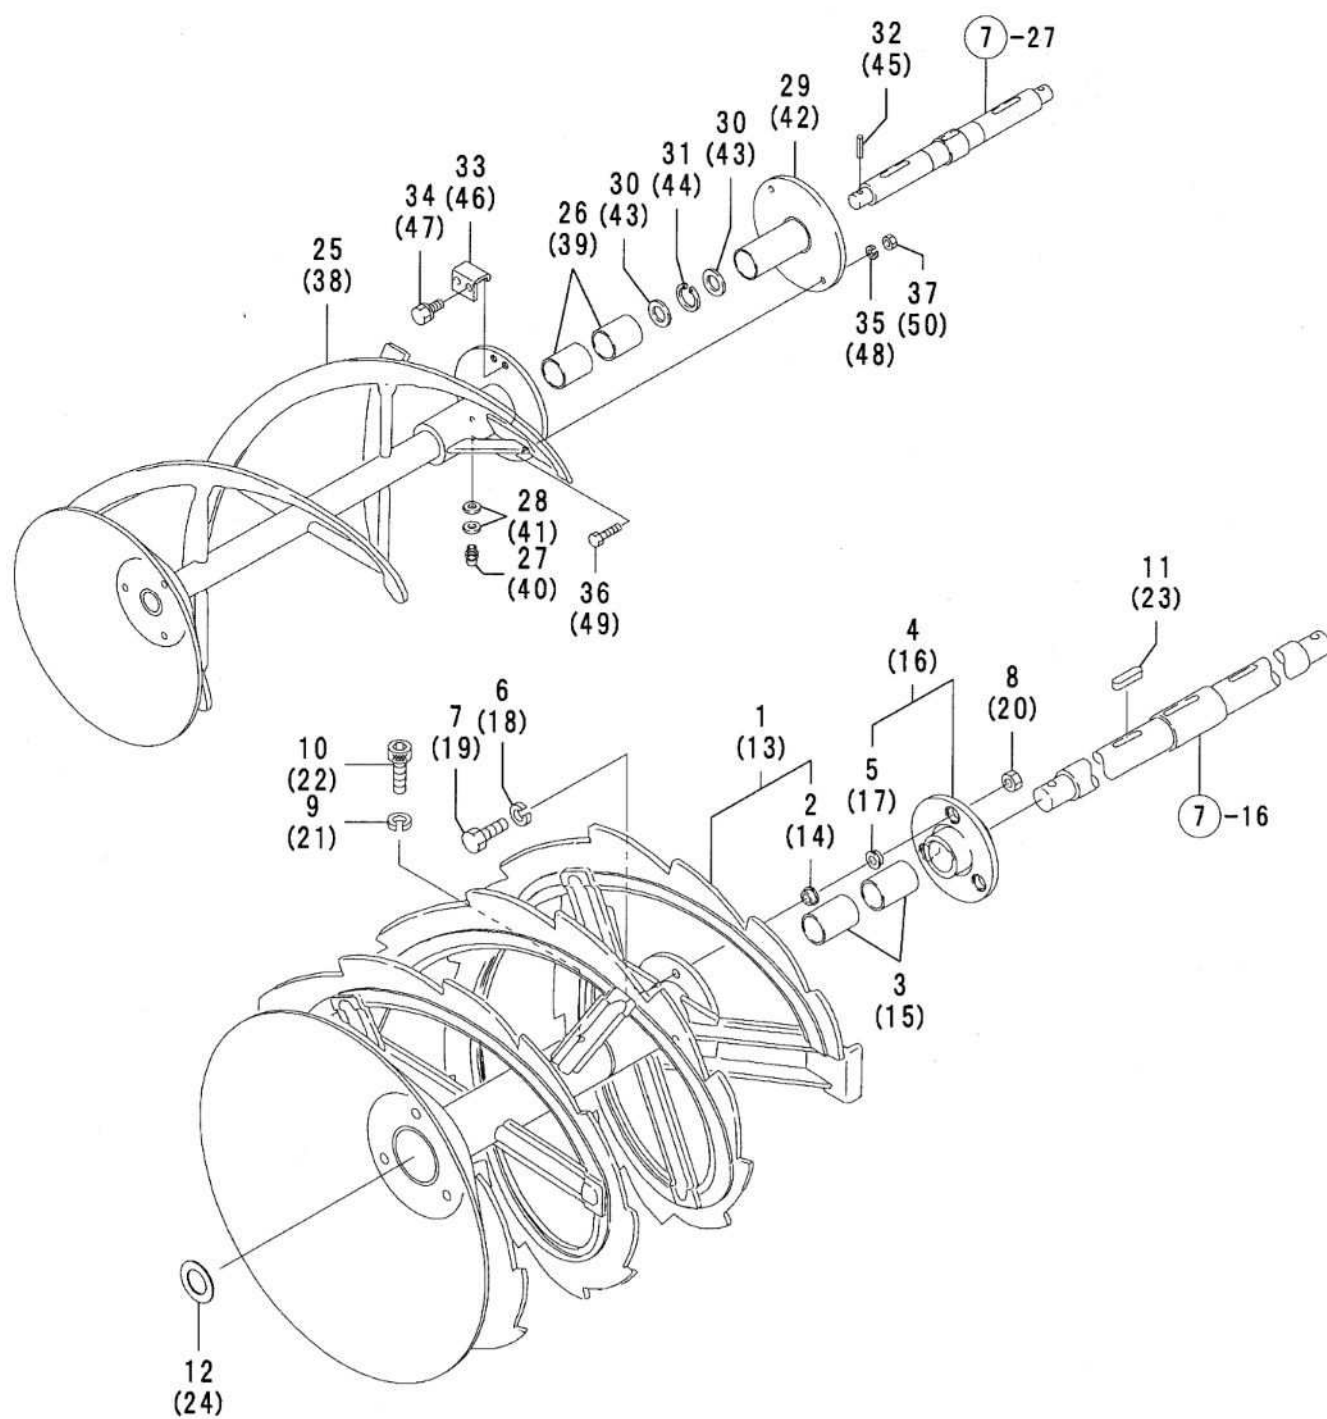

適用号機 06****~

8. オーガ・ロータ

No.	部 品 番 号	部 品 名	個数	備 考
43	91251-1830321	マルサガネ 18*30*3.2	2	94101-18011 コクタW18へ
44	94520-30080	C7ナトリ 30	1	
45	94319-60025	スプリングピン 6*25	1	販売単位 : 10
46	35903-A09-801	ストッパー	1	
47	93000-0801217	コクタハネB 8*12(7T	2	販売単位 : 10
48	94111-06012	ハネW 6	1	販売単位 : 10
49	92001-0602514	B 6*25	1	販売単位 : 10
50	94001-06412	N 6(2	1	販売単位 : 10

90001-B18-000
シャーボルト6×25
10本 ASSY 構成部品

This diagram is an exploded view of a mechanical assembly, likely a pump or motor component. It shows various parts numbered for identification, with some numbers in parentheses indicating alternative or related part numbers. The parts are arranged in a perspective view, showing their relative positions and how they fit together.

Key components and their labels include:

- Directional Arrows:** At the top right, there are three arrows labeled 'F' (Forward), 'L' (Left), and 'R' (Right) to indicate orientation.
- Shaft and Coupling:** A central shaft (11, 22) is shown with a coupling (6, 16) and a bearing (8, 19). The shaft is also labeled with 30 (43) and 33 (48) (46).
- Impeller and Housing:** The assembly includes an impeller (1, 12) with blades (2, 13) and a housing (3, 14). The impeller is also labeled with 27 (40) and 28 (41).
- Mounting and Fasteners:** Various mounting brackets (23, 36), bolts (24, 37), and nuts (25, 38) are shown. Other fasteners include 26 (39), 28 (42), 29 (41), 31, 32 (44), 34 (47), and 35.
- Seals and Gaskets:** Components like 10 (21), 9 (20), and 7 (17) are shown, likely representing seals or gaskets.

The diagram is a technical drawing used for assembly instructions, showing the exploded view of a mechanical assembly. The parts are numbered 1 through 35, with some numbers in parentheses indicating alternative or related part numbers. The assembly includes a central shaft (11, 22) with a coupling (6, 16) and a bearing (8, 19). The shaft is also labeled with 30 (43) and 33 (48) (46). The assembly includes an impeller (1, 12) with blades (2, 13) and a housing (3, 14). The impeller is also labeled with 27 (40) and 28 (41). Various mounting brackets (23, 36), bolts (24, 37), and nuts (25, 38) are shown. Other fasteners include 26 (39), 28 (42), 29 (41), 31, 32 (44), 34 (47), and 35. The diagram is a technical drawing used for assembly instructions.

ブロワ : 90002-B18-000 シャーボルト10X30Assy
 上段オーガ : 90001-B18-000 シャーボルト6X25Assy
 下段オーガ : 90002-B18-000 シャーボルト10X30Assy


8. オーガ・ロータ

適用号機 ~05****

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	35100-B56-609	下段オーガ L COMP	1	
2	35901-A30-000	オーガシャープッシュ	2	
3	91646-3550R	プッシュ BM3550FB	2	
4	35500-A58-804	オーガシャープランジ COMP	1	
5	35901-A30-000	オーガシャープッシュ	2	
6	94111-10012	バネW 10	1	販売単位: 10
7	92001-1003014	B 10×30	1	販売単位: 10
8	94001-10412	N 10(2)	1	販売単位: 10
9	94319-10045	スプリングピン 10×45	1	販売単位: 10
10	94319-60045	スプリングピン 6×45	1	販売単位: 10
11	97116-040241	キー 10×8×40RR	1	
12	35200-B56-609	下段オーガ R COMP	1	
13	35901-A30-000	オーガシャープッシュ	2	
14	91646-3550R	プッシュ BM3550FB	2	
15	35500-A58-804	オーガシャープランジ COMP	1	
16	35901-A30-000	オーガシャープッシュ	2	
17	94111-10012	バネW 10	1	販売単位: 10
18	92001-1003014	B 10×30	1	販売単位: 10
19	94001-10412	N 10(2)	1	販売単位: 10
20	94319-10045	スプリングピン 10×45	1	販売単位: 10
21	94319-60045	スプリングピン 6×45	1	販売単位: 10
22	97116-040241	キー 10×8×40RR	1	
23	35300-B56-602	上段オーガ L COMP	1	
24	91646-3540R	プッシュ BM3540FB	2	
25	96381-20000	グリースニップル A-MT6×1	1	
26	94101-06010	ミガキW 6	2	販売単位: 10
27	35100-B18-802	上段シャープランジ COMP	1	
28	91251-1830321	マルザガネ 18×30×3.2	2	94101-18011 コガタW18へ
29	94520-30080	C7ナットメワ 30	1	
30	94319-60025	スプリングピン 6×25	1	販売単位: 10
31	35903-A09-801	ストッパー	1	
32	93000-0801217	コガタバネB 8×12(7T)	2	販売単位: 10
33	94111-06012	バネW 6	1	販売単位: 10
34	92001-0602514	B 6×25	1	販売単位: 10
35	94001-06412	N 6(2)	1	販売単位: 10
36	35400-B56-602	上段オーガ R COMP	1	
37	91646-3540R	プッシュ BM3540FB	2	
38	96381-20000	グリースニップル A-MT6×1	1	
39	94101-06010	ミガキW 6	2	販売単位: 10
40	35100-B18-802	上段シャープランジ COMP	1	
41	91251-1830321	マルザガネ 18×30×3.2	2	94101-18011 コガタW18へ
42	94520-30080	C7ナットメワ 30	1	
43	94319-60025	スプリングピン 6×25	1	販売単位: 10
44	35903-A09-801	ストッパー	1	
45	93000-0801217	コガタバネB 8×12(7T)	2	販売単位: 10
46	94111-06012	バネW 6	1	販売単位: 10
47	92001-0602514	B 6×25	1	販売単位: 10
48	94001-06412	N 6(2)	1	販売単位: 10
49				
50				
51				
52				
53				
54				
55				

9. カバー

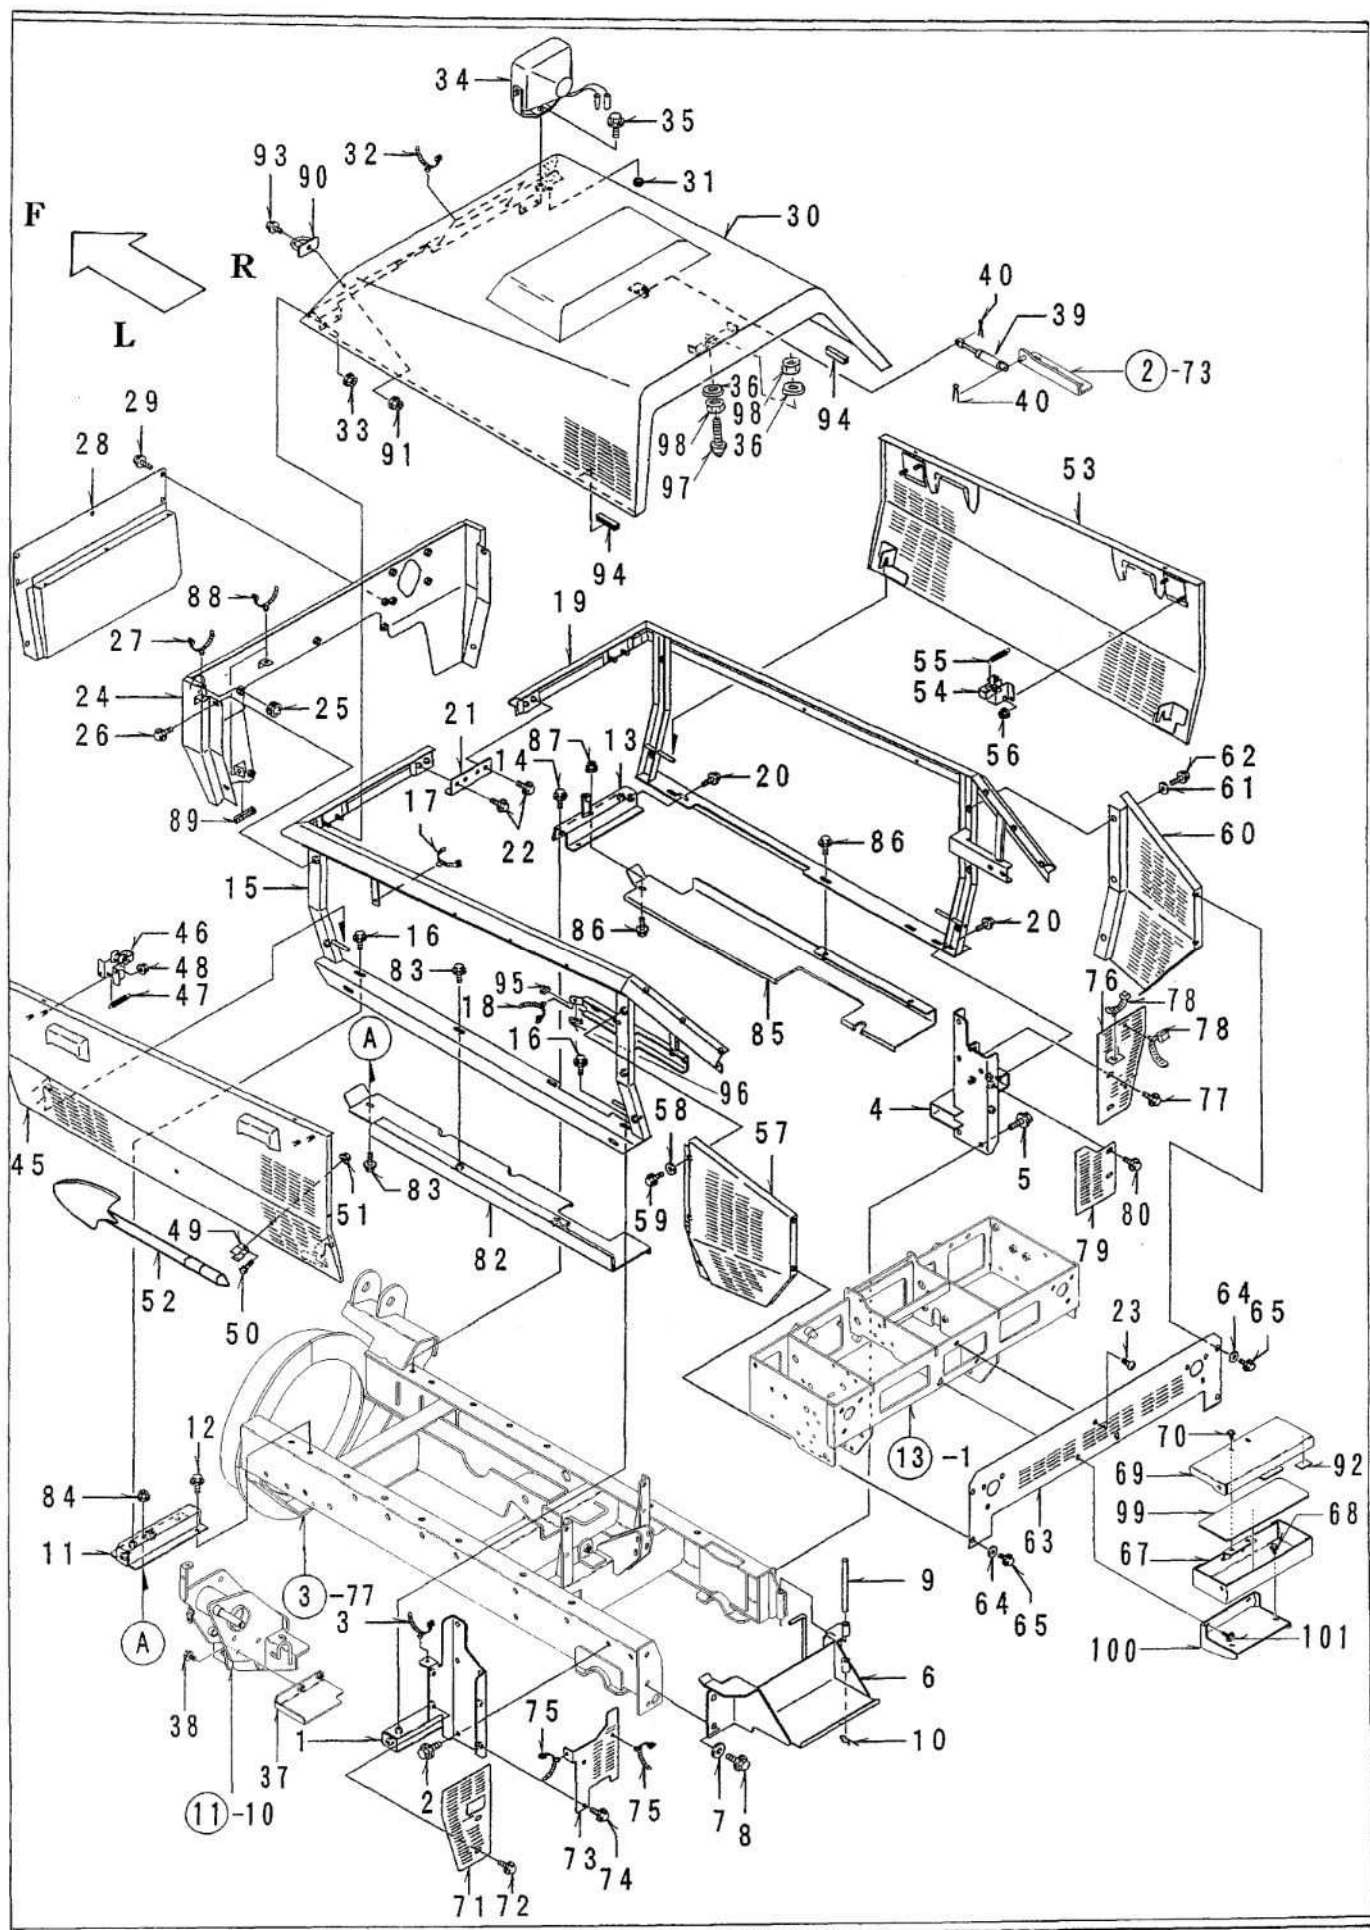


9. カバー

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	41200-B56-800	パネルブラケット L COMP	1	供給不可
2	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
3	91314-119P7	ケーブルストラップ 1-19P7	1	
4	41300-B56-002	パネルブラケット R COMP	1	
5	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
6	41400-B56-802	バッテリーベース COMP	1	
7	94101-10015	ダイヤルW 10	2	販売単位 : 10
8	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
9	91262-121400	プレスピン 12×140	1	
10	94251-120111	スナップピン A12×2.6	1	販売単位 : 10
11	48200-B61-802	カバーステー L COMP	1	供給不可
12	93100-0801617	フランジB 8×16	2	販売単位 : 10
13	48300-B56-001	カバーステー R COMP	1	
14	93100-0801617	フランジB 8×16	2	販売単位 : 10
15	48400-B61-000	カバーフレーム L COMP	1	
16	93100-0801617	フランジB 8×16	4	販売単位 : 10
17	91314-11W02	ケーブルストラップ 1-1W02	1	
18	91311-250	リポートタイ RF250	1	販売単位 : 10
19	48500-B57-004	カバーフレーム R COMP	1	
20	93100-0801617	フランジB 8×16	4	販売単位 : 10
21	48901-B18-002	フレームジョイント	1	
22	93100-0801617	フランジB 8×16	4	販売単位 : 10
23	93400-0801614	トラスコネジ 8×16	1	販売単位 : 10
24	49100-B57-002	フロントカバー COMP	1	
25	91352-3324420	ゴムブッシュ BW-32-2	1	
26	93100-0801617	フランジB 8×16	4	販売単位 : 10
27	91314-11W02	ケーブルストラップ 1-1W02	1	
28	49200-B56-001	フロントベルトカバー COMP	1	
29	93100-0801617	フランジB 8×16	5	販売単位 : 10
30	48100-B61-004	ボンネット COMP	1	供給不可
31	91351-1081020	ゴムブッシュ BSB-21	1	
32	91315-C4397	ケーブルクリップ C-4397	1	
33	94002-08410	フランジN 8	4	販売単位 : 10
34	83300-B18-000	ワーキングランプ (L	1	83320-B18-000 バルブ 12V27W
35	93300-1002017	フランジB 10×1.25×20	1	販売単位 : 10
36	94101-10010	ミガキW 10	2	販売単位 : 10
37	49600-B57-000	アンダーカバー LR COMP	1	
38	93100-0801617	フランジB 8×16	2	販売単位 : 10
39	40001-B18-000	ガスダンパー 084603	1	40001-B18-001 ガススプリングへ
40	94210-25150	ワリピン 2.5×15	2	販売単位 : 10
41				
42				
43				
44				
45	48700-B61-100	サイドカバー L COMP	1	供給不可
46	48700-B18-001	サイドカバーストッパー COMP	2	
47	91602-B18-002	コイルスプリング 9.5×42	2	
48	94002-06410	フランジN 6	4	販売単位 : 10
49	39902-A65-001	止め金具	2	
50	92200-0801617	コガタB 8×16(7T	2	販売単位 : 10
51	94002-08410	フランジN 8	2	販売単位 : 10
52	39901-B51-001	雪かき棒	1	
53	48800-B61-000	サイドカバー R COMP	1	
54	48700-B18-001	サイドカバーストッパー COMP	2	
55	91602-B18-002	コイルスプリング 9.5×42	2	

9. カバー

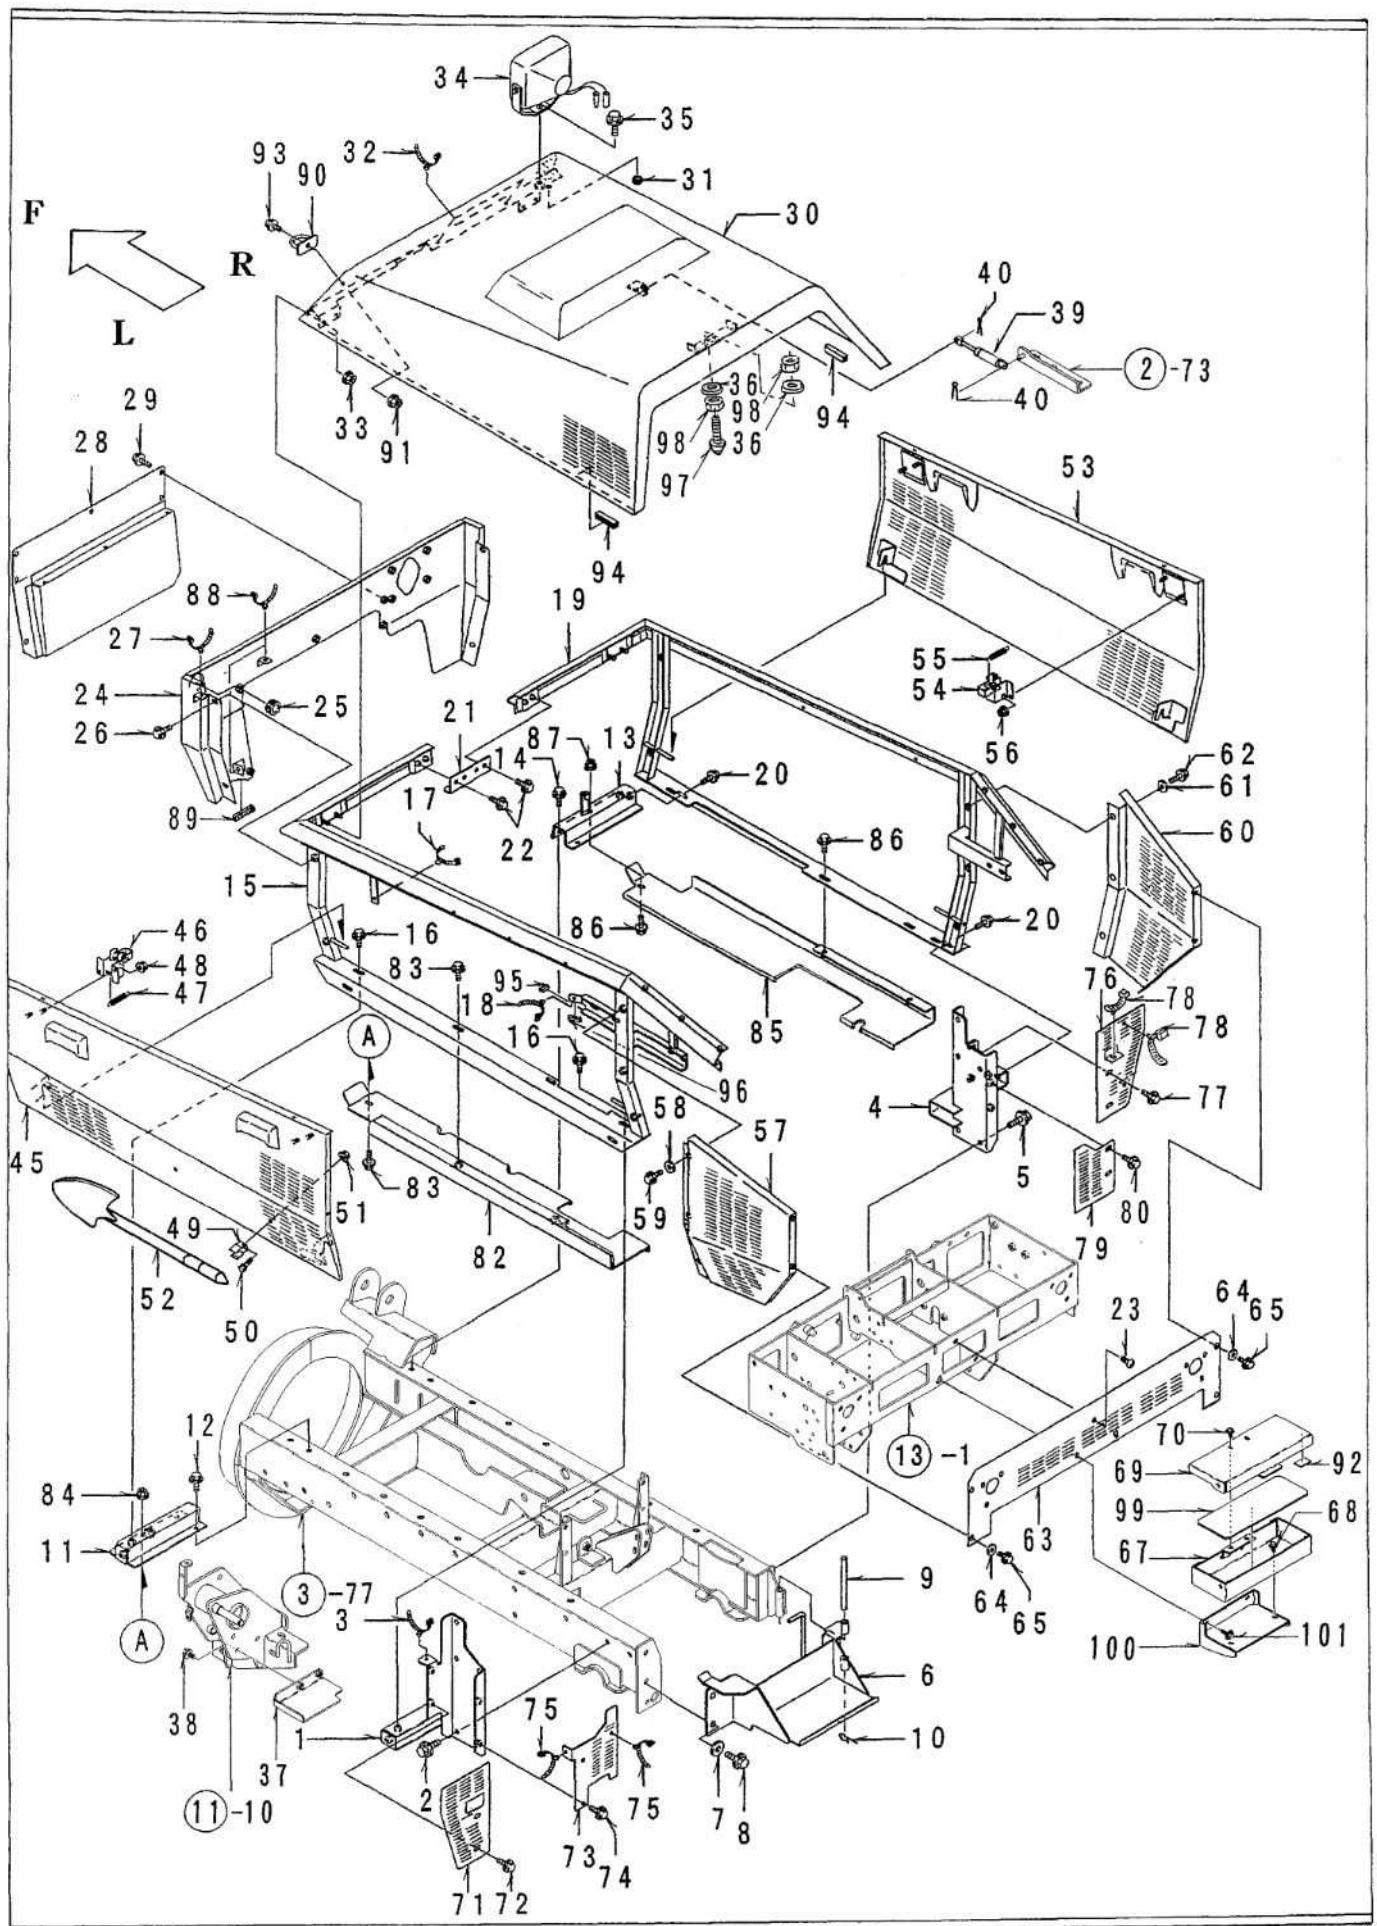


9. カバー

SE422AD

パーツNo	部 品 番 号	部 品 名	個数	備 考
5 6	94002-06410	フランジN 6	4	販売単位 : 10
5 7	49300-B61-002	リヤサイドカバー L COMP	1	
5 8	94101-08015	ダイヤルW 8	3	販売単位 : 10
5 9	93100-0801617	フランジB 8×16	3	販売単位 : 10
6 0	49400-B61-002	リヤサイドカバー R COMP	1	
6 1	94101-08015	ダイヤルW 8	3	販売単位 : 10
6 2	93100-0801617	フランジB 8×16	3	販売単位 : 10
6 3	49901-B61-001	リヤカバー	1	
6 4	94101-06015	ダイヤルW 6	4	販売単位 : 10
6 5	93100-0601217	フランジB 6×12	4	販売単位 : 10
6 6				
6 7	42100-B53-002	ツールボックス COMP	1	
6 8	93100-0601217	フランジB 6×12	2	販売単位 : 10
6 9	42200-B53-801	ツールボックスカバー COMP	1	
7 0	93100-0601217	フランジB 6×12	2	販売単位 : 10
7 1	48901-B61-000	リヤカバー FL	1	
7 2	93100-0801617	フランジB 8×16	2	販売単位 : 10
7 3	48903-B61-000	リヤカバー RL	1	
7 4	93100-0801617	フランジB 8×16	2	販売単位 : 10
7 5	91314-119P7	ケーブルストラップ 1-19P7	2	
7 6	48902-B61-000	リヤカバー FR	1	
7 7	93100-0801617	フランジB 8×16	2	販売単位 : 10
7 8	91314-119P7	ケーブルストラップ 1-19P7	3	
7 9	48904-B61-800	リヤカバー RR	1	供給不可
8 0	93100-0801617	フランジB 8×16	2	販売単位 : 10
8 1				
8 2	49500-B57-000	アンダーカバー LF COMP	1	
8 3	93100-0801617	フランジB 8×16	3	販売単位 : 10
8 4	94002-08410	フランジN 8	1	販売単位 : 10
8 5	49600-B61-801	アンダーカバー R COMP	1	供給不可
8 6	93100-0801617	フランジB 8×16	3	販売単位 : 10
8 7	94002-08410	フランジN 8	1	販売単位 : 10
8 8	91314-11765	ケーブルストラップ 1-1765	2	
8 9	91360-16080	NGロメット TH16(80	1	
9 0	42100-B56-803	ハーネスクランプ COMP	1	
9 1	94002-08410	フランジN 8	1	販売単位 : 10
9 2	42901-B56-000	ラバーパット 20×30	2	
9 3	93100-0801617	フランジB 8×16	1	販売単位 : 10
9 4	91360-12040	NGロメット TH-12(40	2	
9 5	85901-B50-000	玉ナシ溝ゴム 12×15	1	供給不可
9 6	48903-B53-000	玉ナシ溝ゴム 12×25	1	
9 7	75909-B18-001	ボンネットホルダーシャフト	1	
9 8	94003-10412	コガタN 10(2	2	販売単位 : 10
9 9	42901-B53-000	ゴムシート	1	
1 0 0	42100-B61-000	ツールボックスブラケット COMP	1	
1 0 1	93100-0802017	フランジB 8×20	2	販売単位 : 10
1 0 2				
1 0 3				
1 0 4				
1 0 5				
1 0 6				
1 0 7				
1 0 8				
1 0 9				
1 1 0				

10. 油圧配管

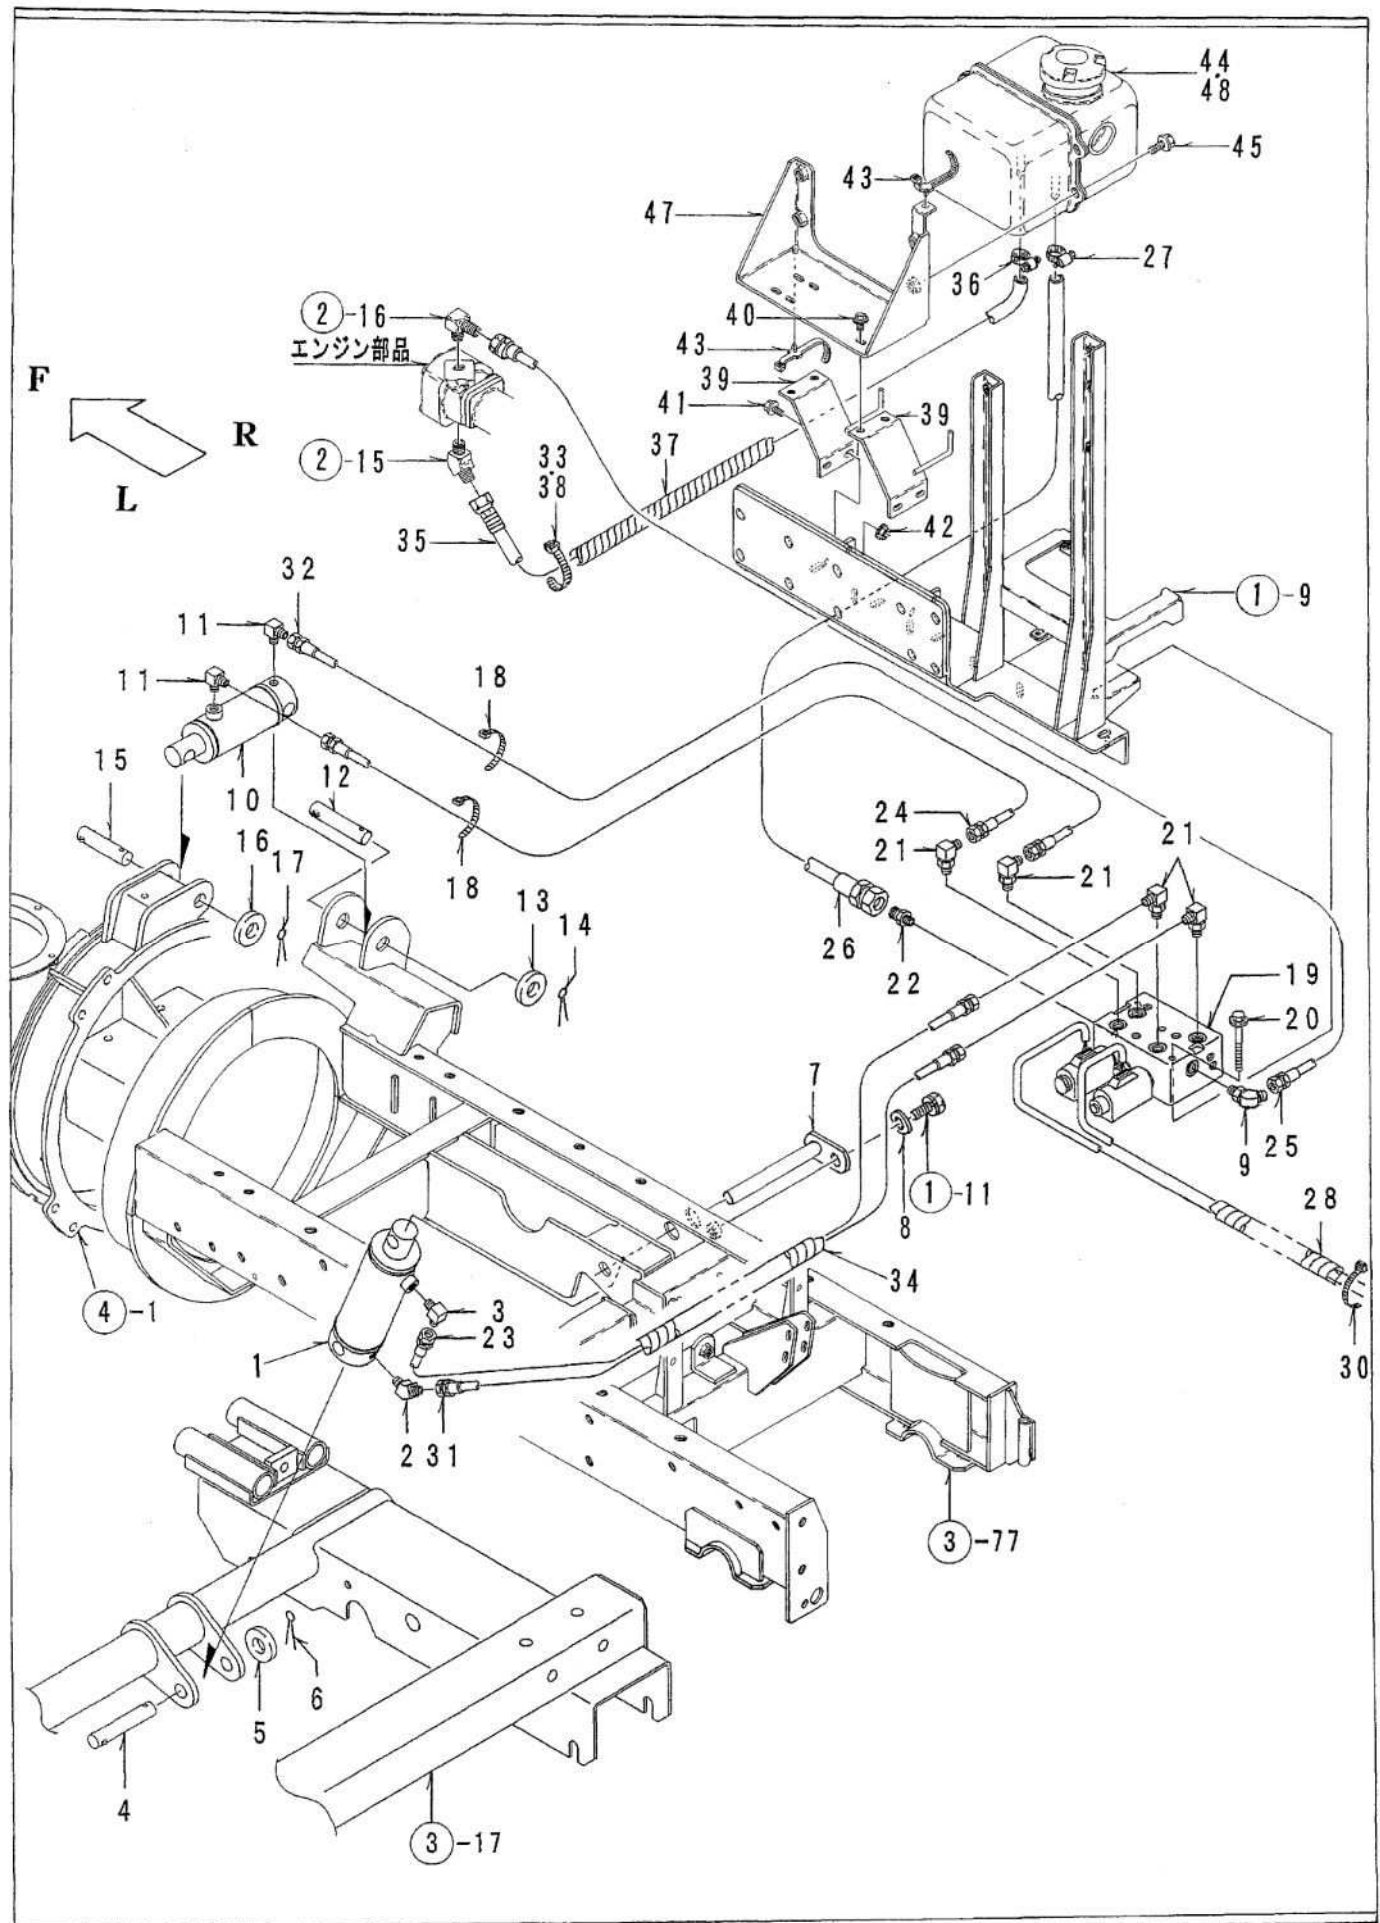


10. 油圧配管

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	50001-B56-000	複動油圧シリンダー φ60×115	1	シリンダー構成部品取扱無 ASSY対応
2	91551-3024004	45°エルボ 302404	1	
3	91551-3022004	90°エルボ 302204	1	
4	91261-201101	耳付ピン 20×110	1	
5	94101-20010	ミガキW 20	1	
6	94210-40300	ワリピン 4×30	1	販売単位 : 10
7	54100-B57-001	シリンダーピン COMP	1	
8	94101-12015	ダイマルW 12	1	販売単位 : 10
9	51901-B61-000	45°座付エルボ PF1/4×PF1/4	1	
10	50002-B56-000	複動油圧シリンダー φ50×60	1	シリンダー構成部品取扱無 ASSY対応
11	91551-3022004	90°エルボ 302204	2	
12	91261-201001	耳付ピン 20×100	1	
13	94101-20010	ミガキW 20	1	
14	94210-40300	ワリピン 4×30	1	販売単位 : 10
15	91261-200851	耳付ピン 20×85	1	
16	94101-20010	ミガキW 20	1	
17	94210-40300	ワリピン 4×30	1	販売単位 : 10
18	91311-140	リピータイ RF140	3	販売単位 : 10
19	52100-B54-001	電磁バルブ	1	
20	93100-Q808017	フランジB 8×80	2	
21	51901-B18-000	座付エルボ PF1/4×PF1/4	4	
22	51901-B54-001	ジョイント PF1/4×PF3/8	1	
23	91541-2306533	油圧ホース 2分×650	1	
24	91541-2308033	油圧ホース 2分×800	1	
25	91541-2310533	油圧ホース 2分×1050	1	
26	57200-B61-000	油圧ホース 380	1	供給不可
27	91323-019	自在バンド 19	1	
28	91382-1301501	コルゲート 13×150	1	
29				
30	91311-140	リピータイ RF140	1	販売単位 : 10
31	91541-2307033	油圧ホース 2分×700	1	
32	91541-2307533	油圧ホース 2分×750	1	
33	91311-250	リピータイ RF250	4	販売単位 : 10
34	91382-2503001	コルゲート 25×300	1	
35	57100-B61-000	油圧ホース 1370	1	
36	91323-019	自在バンド 19	1	
37	91382-2502501	コルゲート 25×250	1	
38	91311-140	リピータイ RF140	2	販売単位 : 10
39	51200-B53-000	油圧タンクステー COMP	2	
40	93100-Q801617	フランジB 8×16	4	販売単位 : 10
41	93100-0802017	フランジB 8×20	4	販売単位 : 10
42	94002-08410	フランジN 8	4	販売単位 : 10
43	91314-119P7	ケーブルストラップ 1-19P7	2	
44	52200-B54-000	オイルタンク	1	08011-B54-000へ 構成部品最終頁に記載
45	93300-1202017	フランジB 12×1.25×20	4	
46				
47	51100-B61-000	油圧タンクブラケット COMP	1	
48		タービンオイル VG32	3.4ℓ	油圧・オイルタンク用 (全容量3.7ℓ) 非売品
49				
50				
51				
52				
53				
54				
55				

11. 動力伝達 (1)

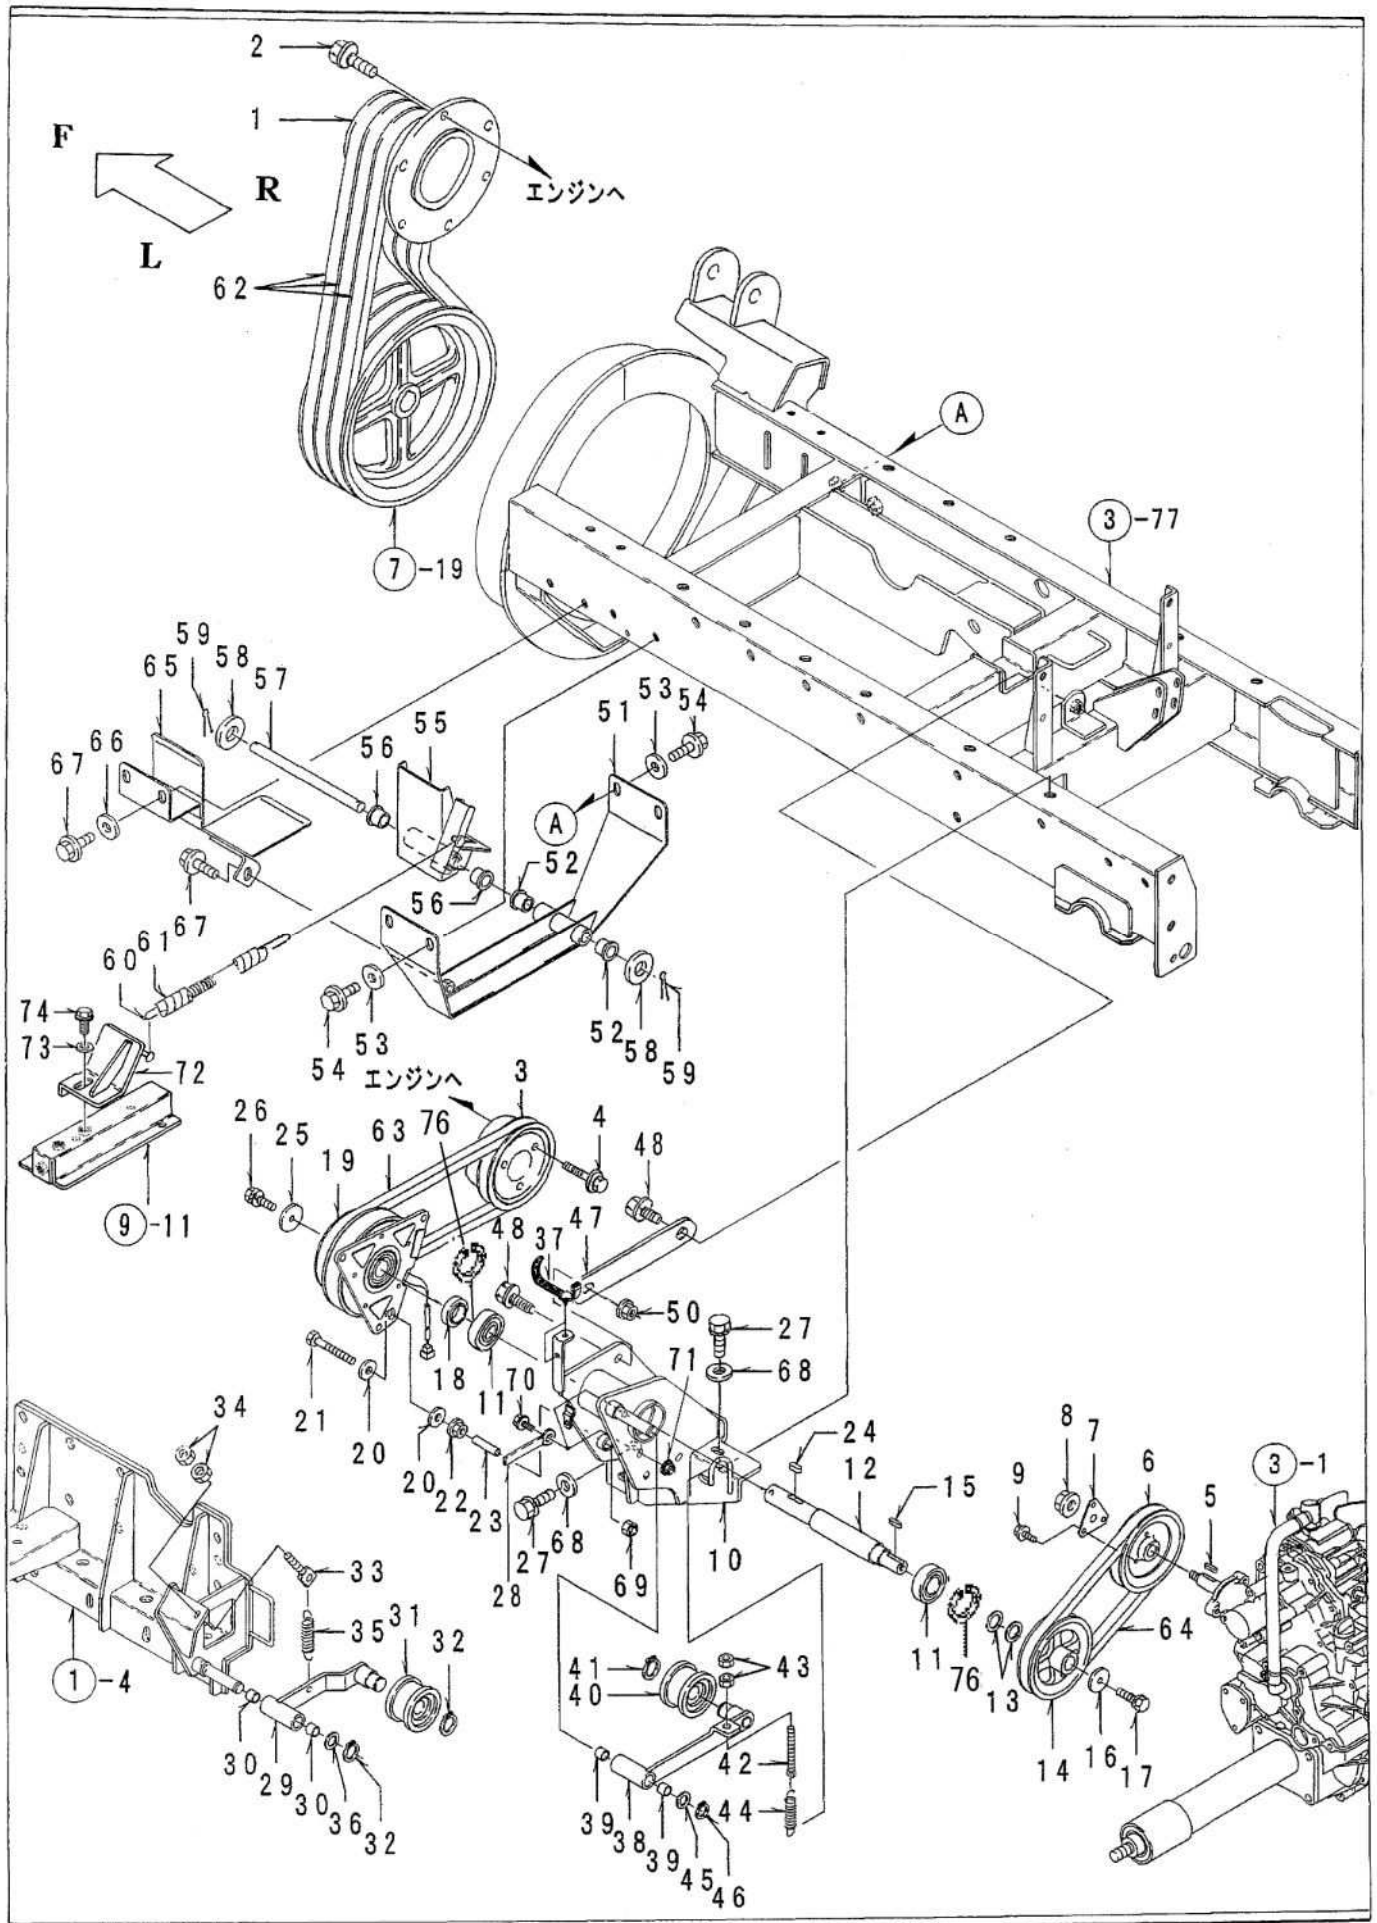


11. 動力伝達 (1)

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	02901-B61-000	エンジンブーリー(プロワ	1	
2	93300-1003017	フランジB 10×1.25×30	6	
3	02902-B61-000	エンジンブーリー(走行	1	
4	93100-0807017	フランジB 8×70	3	
5	97112-022241	キー 5×5×22RR	1	
6	63902-B54-700	HST入力ブーリー	1	
7	16901-B54-800	フィキシングプレート	1	
8	94006-10410	フランジN 10×1.25	1	販売単位 : 10
9	93100-0601617	フランジB 6×16	3	販売単位 : 10
10	61100-B61-802	走行テンションベース COMP	1	
11	96105-06205	ベアリング 6205UU	2	
12	64901-B57-004	カウンターシャフト	1	
13	91251-2030231	マルザガネ 20×30×2.3	2	
14	63902-B18-700	Vブーリー 113B×20	1	
15	97113-020041	キー 6×6×20S	1	販売単位 : 10
16	91251-0835451	マルザガネ 8×35×4.5	1	
17	91219-0825010	コガタバネプレートB 8×25	1	販売単位 : 10
18	64902-B54-803	カウンターシャフトカラー	1	
19	67100-B54-801	電磁クラッチ COMP	1	52600400 シム0.1 52600500 シム0.3
20	94101-08015	ダイヤルW 8	2	販売単位 : 10
21	92201-0805517	コガタB 8×55(7T	1	
22	94002-08410	フランジN 8	1	販売単位 : 10
23	91544-0730030	ガソリンチェーン 7.3×30	1	
24	97114-020041	キー 7×7×20S	1	
25	91251-0840451	マルザガネ 8×40×4.5	1	
26	91219-0825010	コガタバネプレートB 8×25	1	販売単位 : 10
27	93000-1203017	コガタバネB 12×30(7T	5	
28	91331-080801	コードクランプ 8×80	2	
29	66200-B61-802	走行テンションアーム A COMP	1	
30	91646-1512R	ブッシュ BM1512FB	2	
31	91615-15702243	テンションブーリー 70TB1	1	
32	94510-15080	Cジクトメワ 15	2	販売単位 : 10
33	65901-A09-001	テンション調整ネジ	1	
34	94003-08412	コガタN 8(2	2	販売単位 : 10
35	91601-A32-001	テンションスプリング	1	
36	91251-1525231	マルザガネ 15×25×2.3	1	
37	91314-119P7	ケーブルストラップ 1-19P7	2	
38	66300-B54-803	走行テンションアーム B COMP	1	
39	91646-1512R	ブッシュ BM1512FB	2	
40	91615-20704243	テンションブーリー 70TB2	1	
41	94510-20080	Cジクトメワ 20	1	販売単位 : 10
42	65901-A09-001	テンション調整ネジ	1	
43	94003-08412	コガタN 8(2	2	販売単位 : 10
44	91601-A32-001	テンションスプリング	1	
45	91251-1525231	マルザガネ 15×25×2.3	1	

11. 動力伝達 (1)

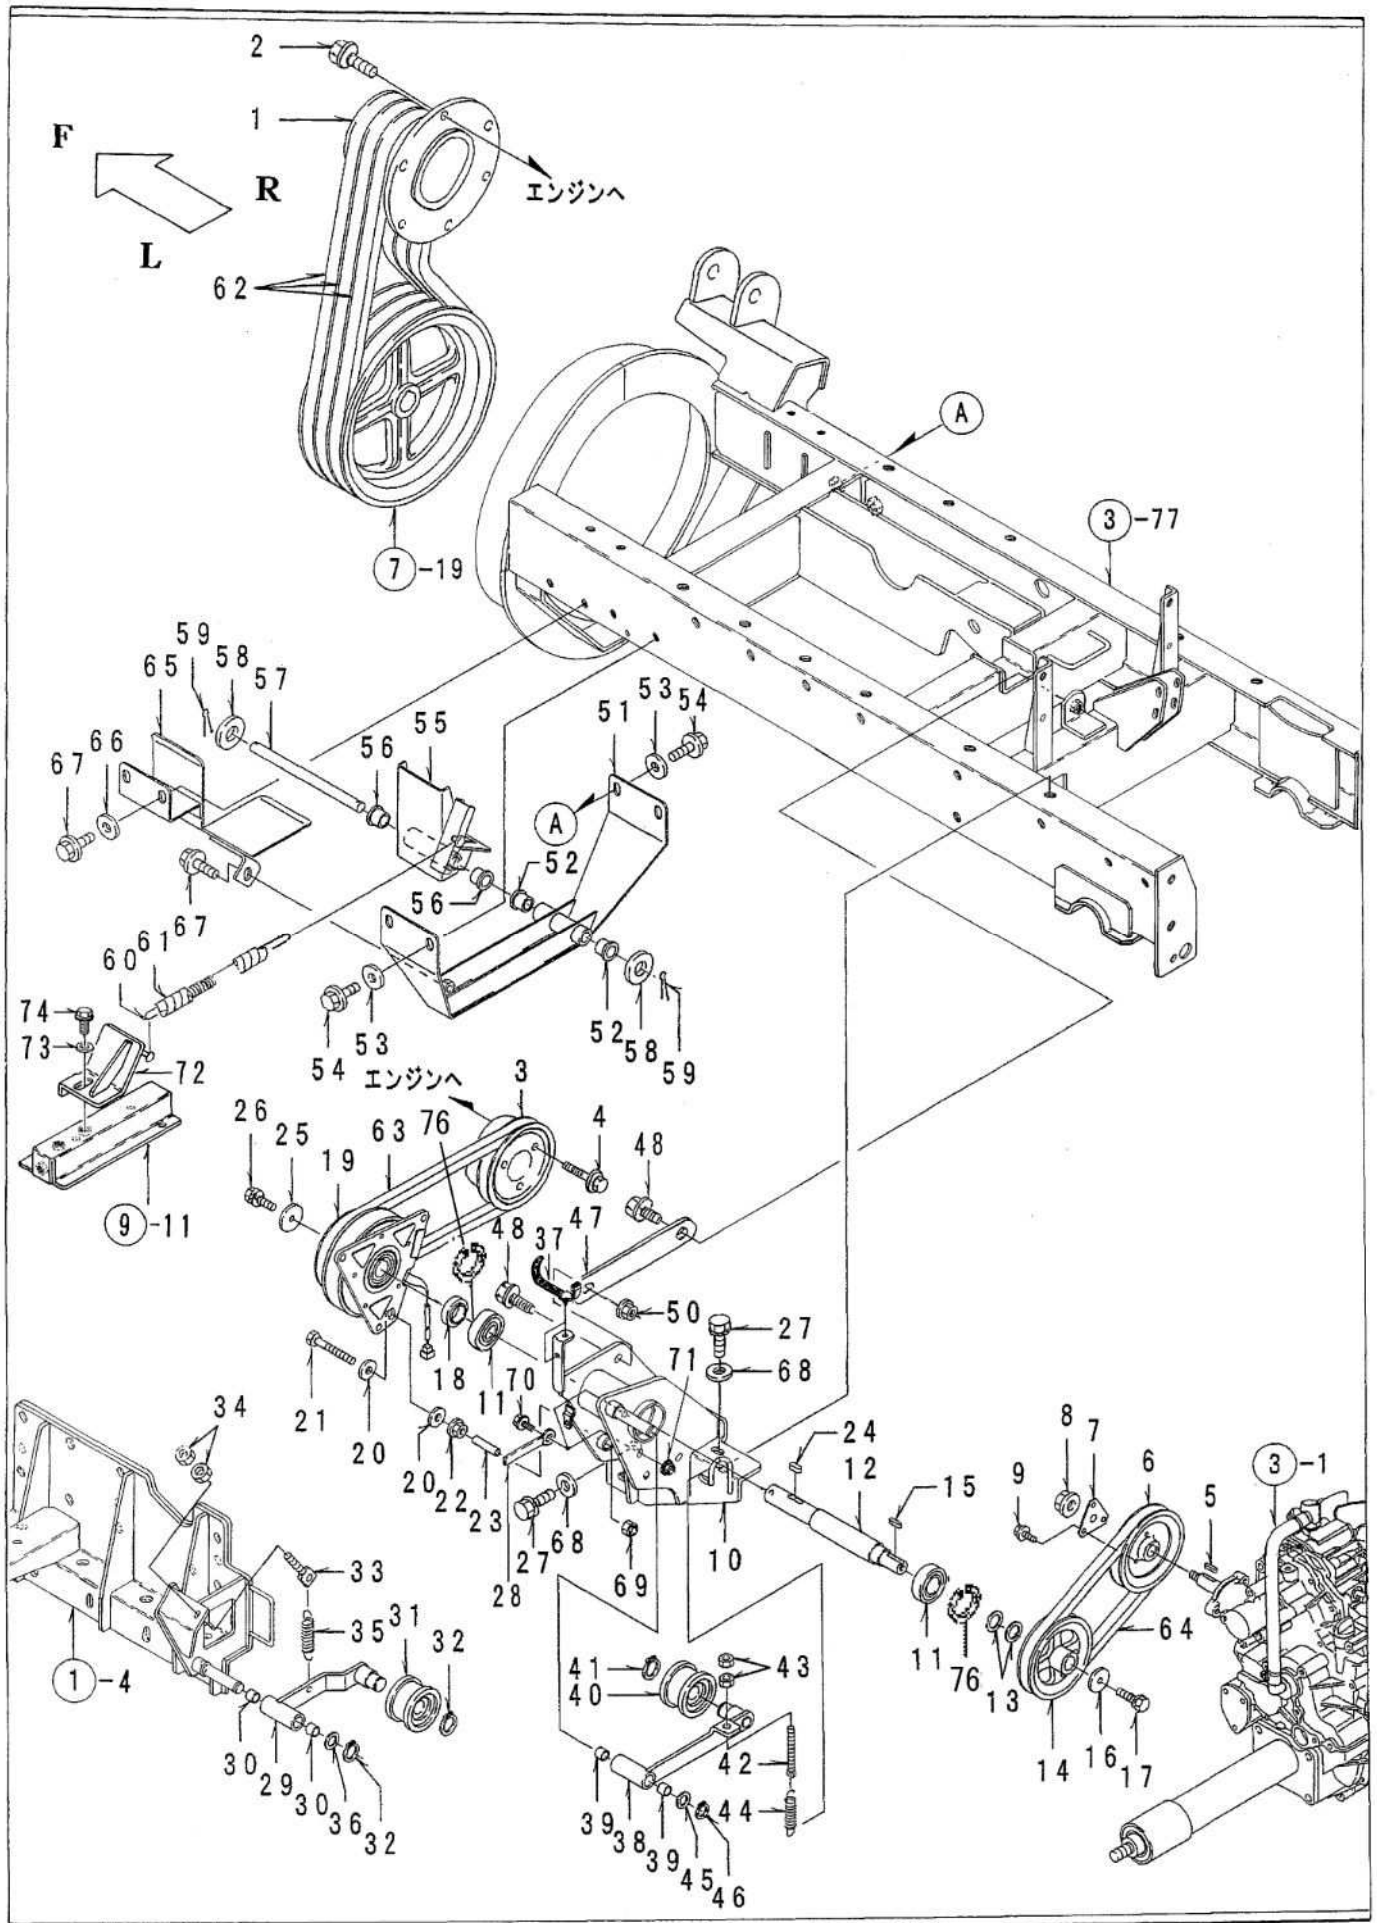


11. 動力伝達 (1)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
4 6	94510-15080	Cジクトメワ 15	1	販売単位 : 10
4 7	61901-B61-000	テンションベースサポート	1	
4 8	93300-1002517	フランジB 10×1.25×25	2	販売単位 : 10
4 9				
5 0	94006-10410	フランジN 10×1.25	1	販売単位 : 10
5 1	65100-B54-002	ブレーキブラケット COMP	1	
5 2	91644-151580	フランジブッシュ 80F-1515	2	
5 3	94101-10015	ダイマルW 10	4	販売単位 : 10
5 4	93300-1002017	フランジB 10×1.25×20	4	販売単位 : 10
5 5	65100-B56-002	プロワブレーキ COMP	1	
5 6	91644-151580	フランジブッシュ 80F-1515	2	
5 7	65901-B54-000	プロワブレーキピン 15×195	1	
5 8	94101-16010	ミガキW 16	2	
5 9	94210-30300	ワリピン 3×30	2	販売単位 : 10
6 0	66901-B54-030	ブレーキスプリング	1	
6 1	91580-1500601	ブラマー 15×60	1	
6 2	91652-0809051	W800ベルト SC51	3	
6 3	91652-0808037	W800ベルト SB37	1	63903-B96-000 可
6 4	91652-0808033	W800ベルト SB33	1	
6 5	65600-B54-000	プロワベルトストッパー COMP	1	
6 6	94101-10015	ダイマルW 10	2	販売単位 : 10
6 7	93300-1002017	フランジB 10×1.25×20	3	販売単位 : 10
6 8	94101-12010	ミガキW 12	5	販売単位 : 10
6 9	91233-084110	Uナット 8	1	販売単位 : 10
7 0	93100-0601617	フランジB 6×16	2	販売単位 : 10
7 1	94002-06410	フランジN 6	2	販売単位 : 10
7 2	65400-B54-800	ブレーキフックステー COMP	1	
7 3	94101-10015	ダイマルW 10	1	販売単位 : 10
7 4	93300-1002017	フランジB 10×1.25×20	1	販売単位 : 10
7 5				
7 6	94520-52080	C7ナットメ72	2	適用号機 ~04****
7 7				
7 8				
7 9				
8 0				
8 1				
8 2				
8 3				
8 4				
8 5				
8 6				
8 7				
8 8				
8 9				
9 0				

12. 動力伝達 (2)

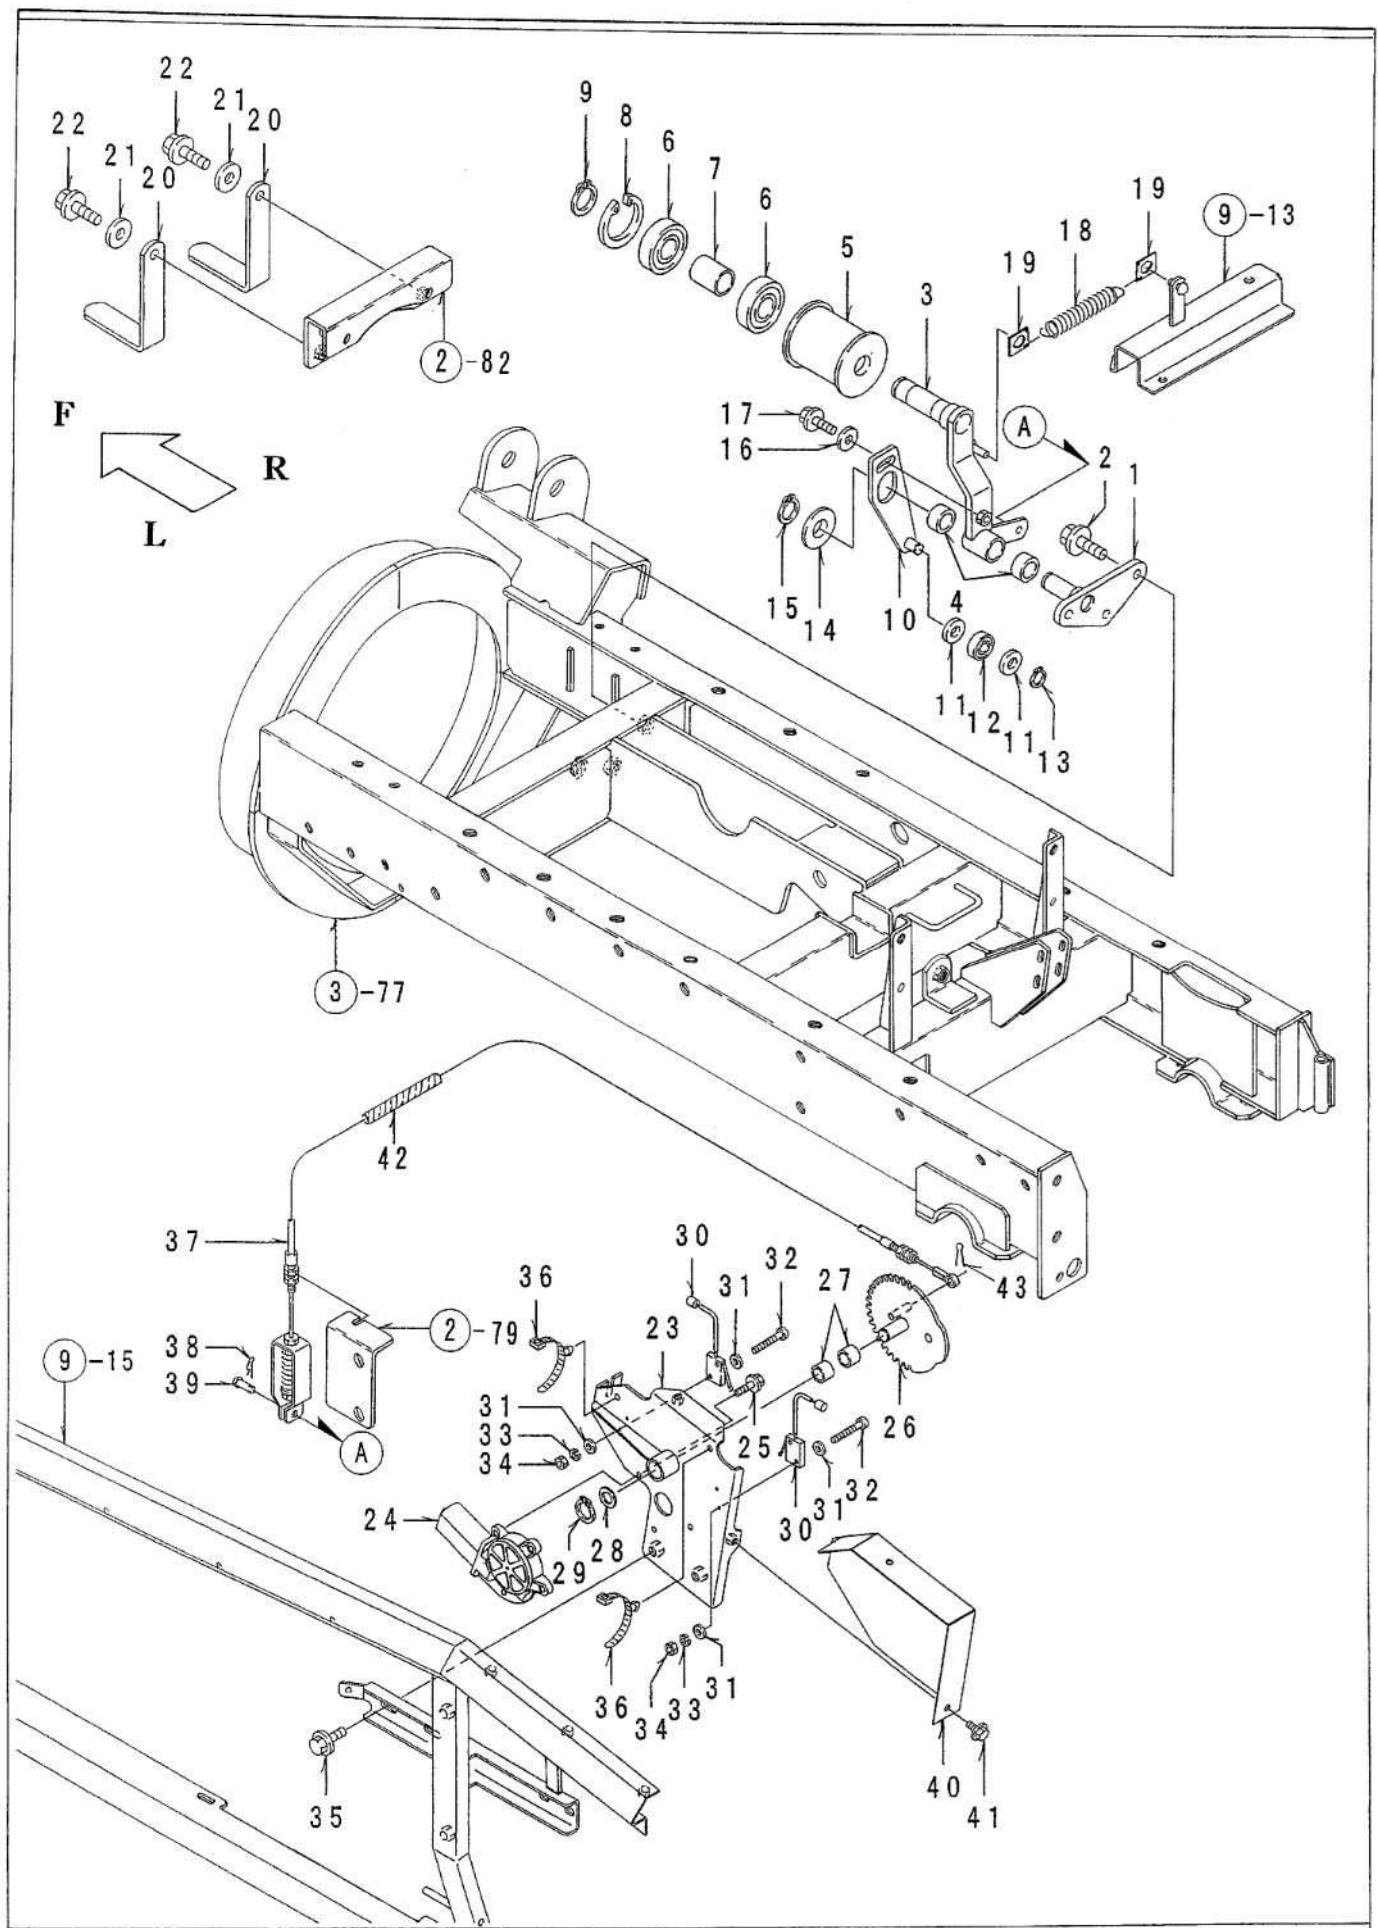


12. 動力伝達 (2)

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	66400-B18-802	プロワテンションシャフト COMP	1	
2	93300-1002517	フランジB 10×1.25×25	3	販売単位 : 10
3	66100-B54-803	除雪クラッチアーム COMP	1	
4	91646-2015R	プッシュ BM2015FB	2	
5	91614-6272823	テンションプーリ 72-3	1	
6	96105-06305	ベアリング 6305UU	2	
7	66901-B18-000	カラー 25×40	1	
8	94520-62080	Cアナトメワ 62	1	
9	94510-25080	Cジクトメワ 25	1	販売単位 : 10
10	65300-B56-801	ブレーキカム COMP	1	供給不可
11	94101-12010	ミガキW 12	2	販売単位 : 10
12	96105-06201	ベアリング 6201UU	1	
13	94510-12080	Cジクトメワ 12	1	販売単位 : 10
14	94101-20010	ミガキW 20	1	
15	94510-20080	Cジクトメワ 20	1	販売単位 : 10
16	94101-08015	ダイヤルW 8	1	販売単位 : 10
17	93100-0802517	フランジB 8×25	1	販売単位 : 10
18	66902-B53-000	テンションリターンズプリング	1	
19	66903-B53-800	スプリングフック	2	
20	65901-B56-000	プロワベルトストッパー	2	
21	94101-10015	ダイヤルW 10	2	販売単位 : 10
22	93300-1002017	フランジB 10×1.25×20	2	販売単位 : 10
23	66500-B53-801	電動クラッチベース COMP	1	
24	81100-B53-002	モータ JC578VA	1	
25	93100-0602017	フランジB 6×20	3	販売単位 : 10
26	66600-B53-802	クラッチギヤ COMP	1	
27	91647-1515	プッシュ 77B-1515	2	
28	91251-1525231	マルザガネ 15×25×2.3	1	
29	94510-15080	Cジクトメワ 15	1	販売単位 : 10
30	83100-B10-000	シュートセンカイスイッチ	2	
31	94101-03010	ミガキW 3	8	販売単位 : 10
32	93500-0302014	ナベコネジ 3×20	4	販売単位 : 10
33	94111-03012	バネW 3	4	販売単位 : 10
34	94001-03412	N 3(2	4	販売単位 : 10
35	93100-0801617	フランジB 8×16	2	販売単位 : 10
36	91314-119P7	ケーブルストラップ 1-19P7	2	
37	77100-B61-001	除雪クラッチワイヤー	1	
38	94251-080111	スナップピン A8×1.8	1	販売単位 : 10
39	94330-0802210	マルアタマピン 8×22	1	
40	68901-B53-000	電動クラッチカバー	1	
41	93100-0601217	フランジB 6×12	2	販売単位 : 10
42	91382-0701201	コルゲート 7×120	1	販売単位 : 10
43	94210-25150	ワリピン 2.5×15	1	販売単位 : 10
44				
45				
46				
47				
48				
49				
50				

13. パネル・ハンドル

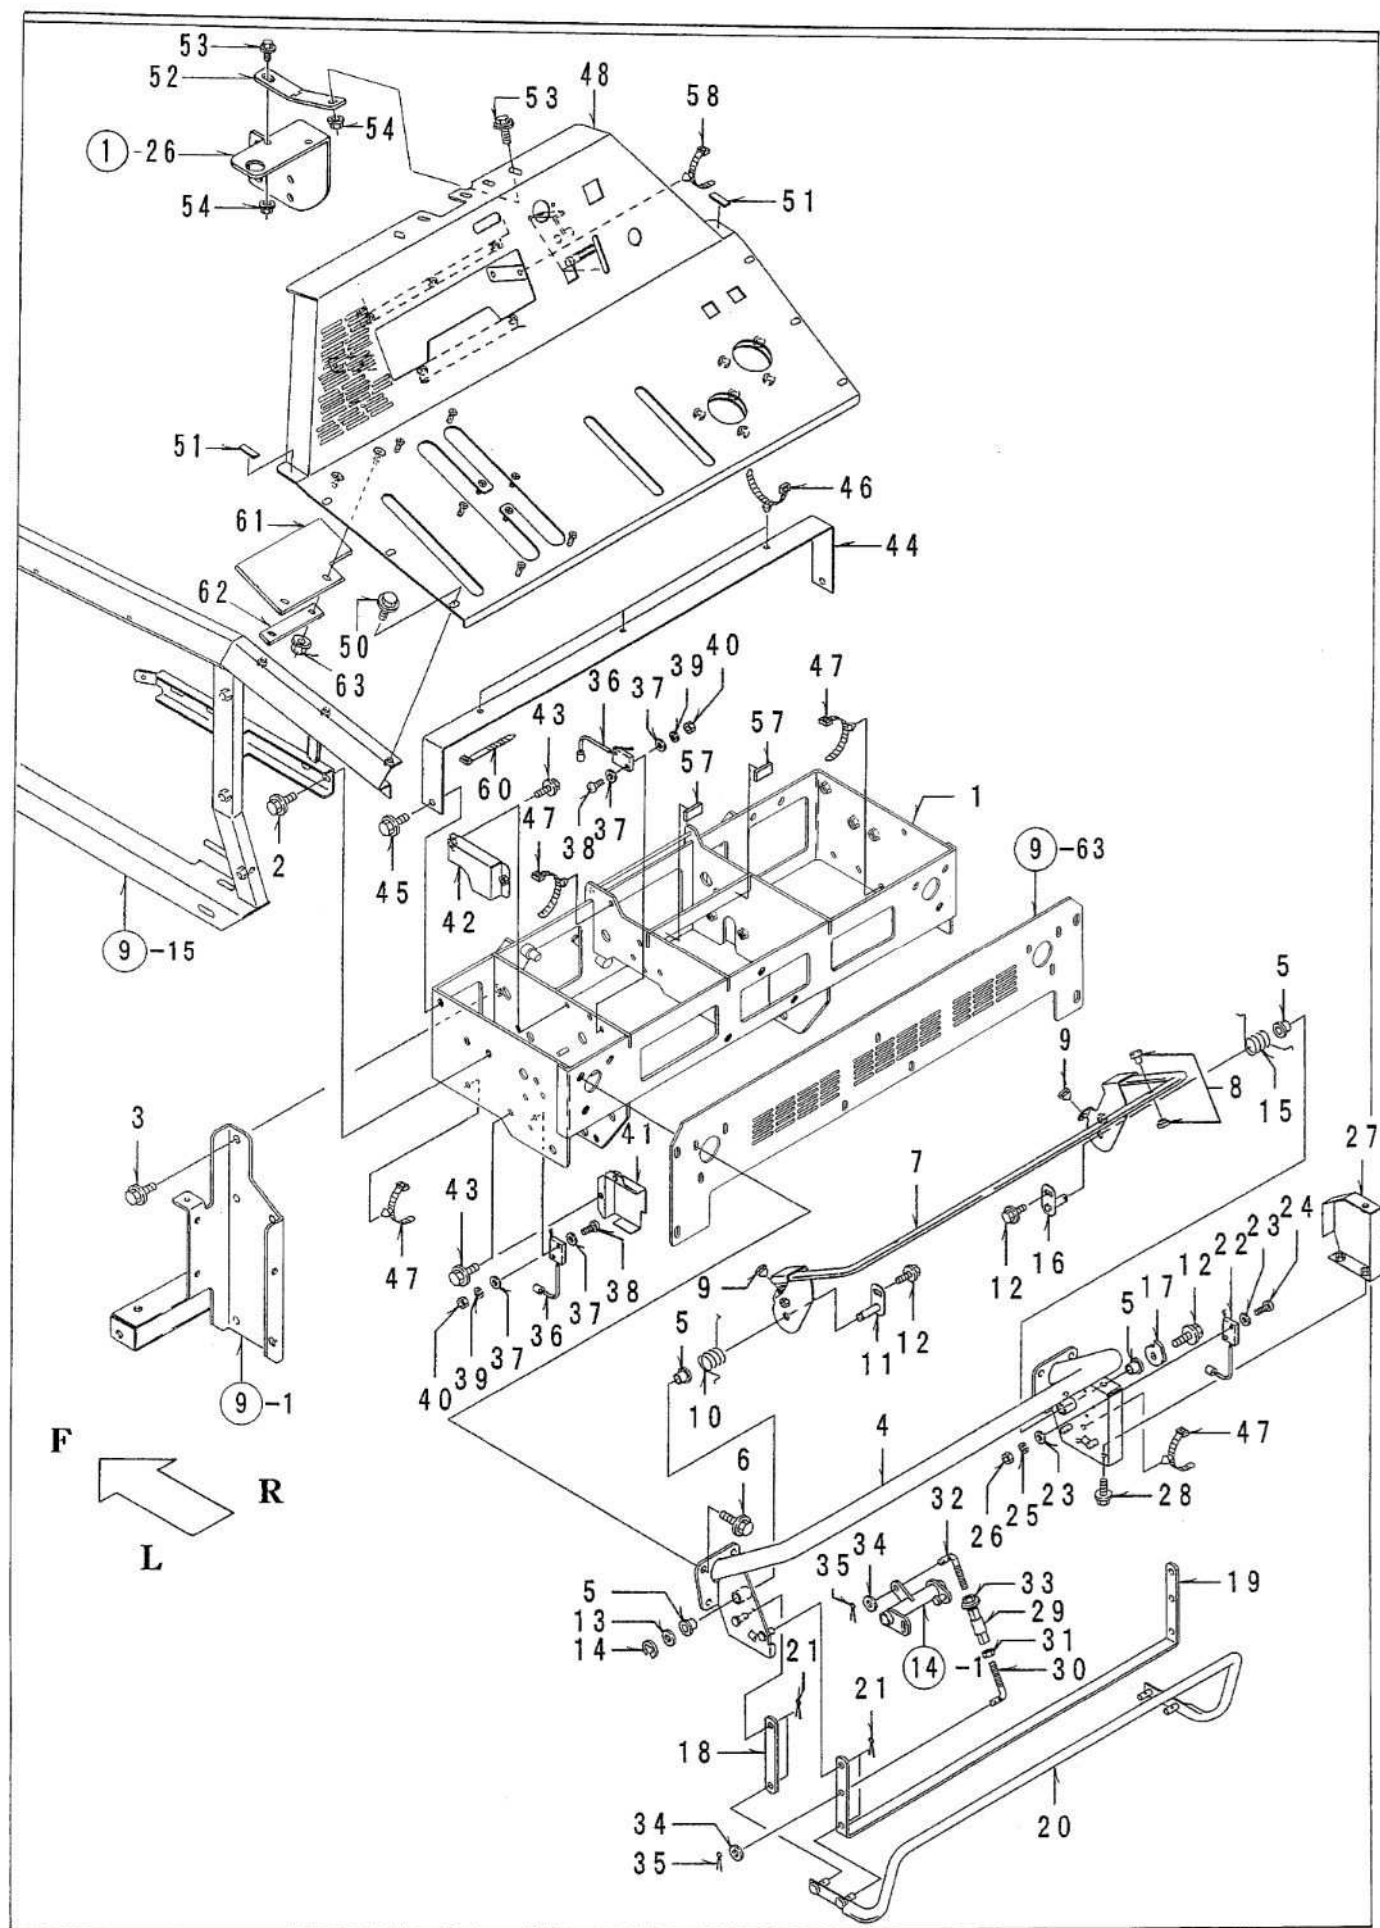


13. パネル・ハンドル

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	72200-B61-001	コントロールボックス COMP	1	
2	93100-0801617	フランジB 8×16	4	販売単位 : 10
3	93300-1002017	フランジB 10×1.25×20	6	販売単位 : 10
4	72400-B56-602	ハンドル COMP	1	
5	91644-101080	フランジブッシュ 80F-1010	4	
6	93100-0802017	フランジB 8×20	6	販売単位 : 10
7	73100-B56-002	メインラッチレバー COMP	1	
8	71902-B28-000	リベット	2	
9	91701-A41-000	グロメット Ø6	2	
10	72901-B56-001	リターンスプリング L	1	
11	74600-B56-000	レバーピン B COMP	1	
12	93100-0601217	フランジB 6×12	3	販売単位 : 10
13	94101-10010	ミガキW 10	1	販売単位 : 10
14	94511-08010	EトメW 8	1	販売単位 : 10
15	72902-B56-001	リターンスプリング R	1	
16	74500-B56-001	レバーピン A COMP	1	
17	74903-B56-000	スイッチカム B	1	
18	73909-B43-800	レバーリンク 100	2	
19	73901-B56-800	非常停止レバー B	1	
20	73600-B56-800	非常停止レバー A COMP	1	73200-B97-000へ統合
21	94210-25150	ワリピン 2.5×15	8	販売単位 : 10
22	83100-B10-000	シュートセンカイスイッチ	1	
23	94101-03010	ミガキW 3	4	販売単位 : 10
24	93500-0302014	ナベコネジ 3×20	2	販売単位 : 10
25	94111-03012	パネW 3	2	販売単位 : 10
26	94001-03412	N 3(2	2	販売単位 : 10
27	78400-B56-001	スイッチカバー D COMP	1	
28	93100-0601217	フランジB 6×12	3	販売単位 : 10
29	76902-B50-000	リンク 50	1	
30	74904-B56-000	調整ロッド L	1	
31	91231-0841210	コガタヒダリN 8(2	1	
32	74905-B56-000	調整ロッド R	1	
33	94002-08410	フランジN 8	1	販売単位 : 10
34	94101-08010	ミガキW 8	2	販売単位 : 10
35	94210-25150	ワリピン 2.5×15	2	販売単位 : 10
36	83100-B10-000	シュートセンカイスイッチ	2	
37	94101-03010	ミガキW 3	8	販売単位 : 10
38	93500-0302014	ナベコネジ 3×20	4	販売単位 : 10
39	94111-03012	パネW 3	4	販売単位 : 10
40	94001-03412	N 3(2	4	販売単位 : 10
41	78100-B54-000	スイッチカバー A COMP	1	
42	78300-B56-000	スイッチカバー C COMP	1	
43	93100-0601217	フランジB 6×12	4	販売単位 : 10
44	82902-B56-000	ハーネスステー	1	
45	93100-0801617	フランジB 8×16	2	販売単位 : 10

13. パネル・ハンドル

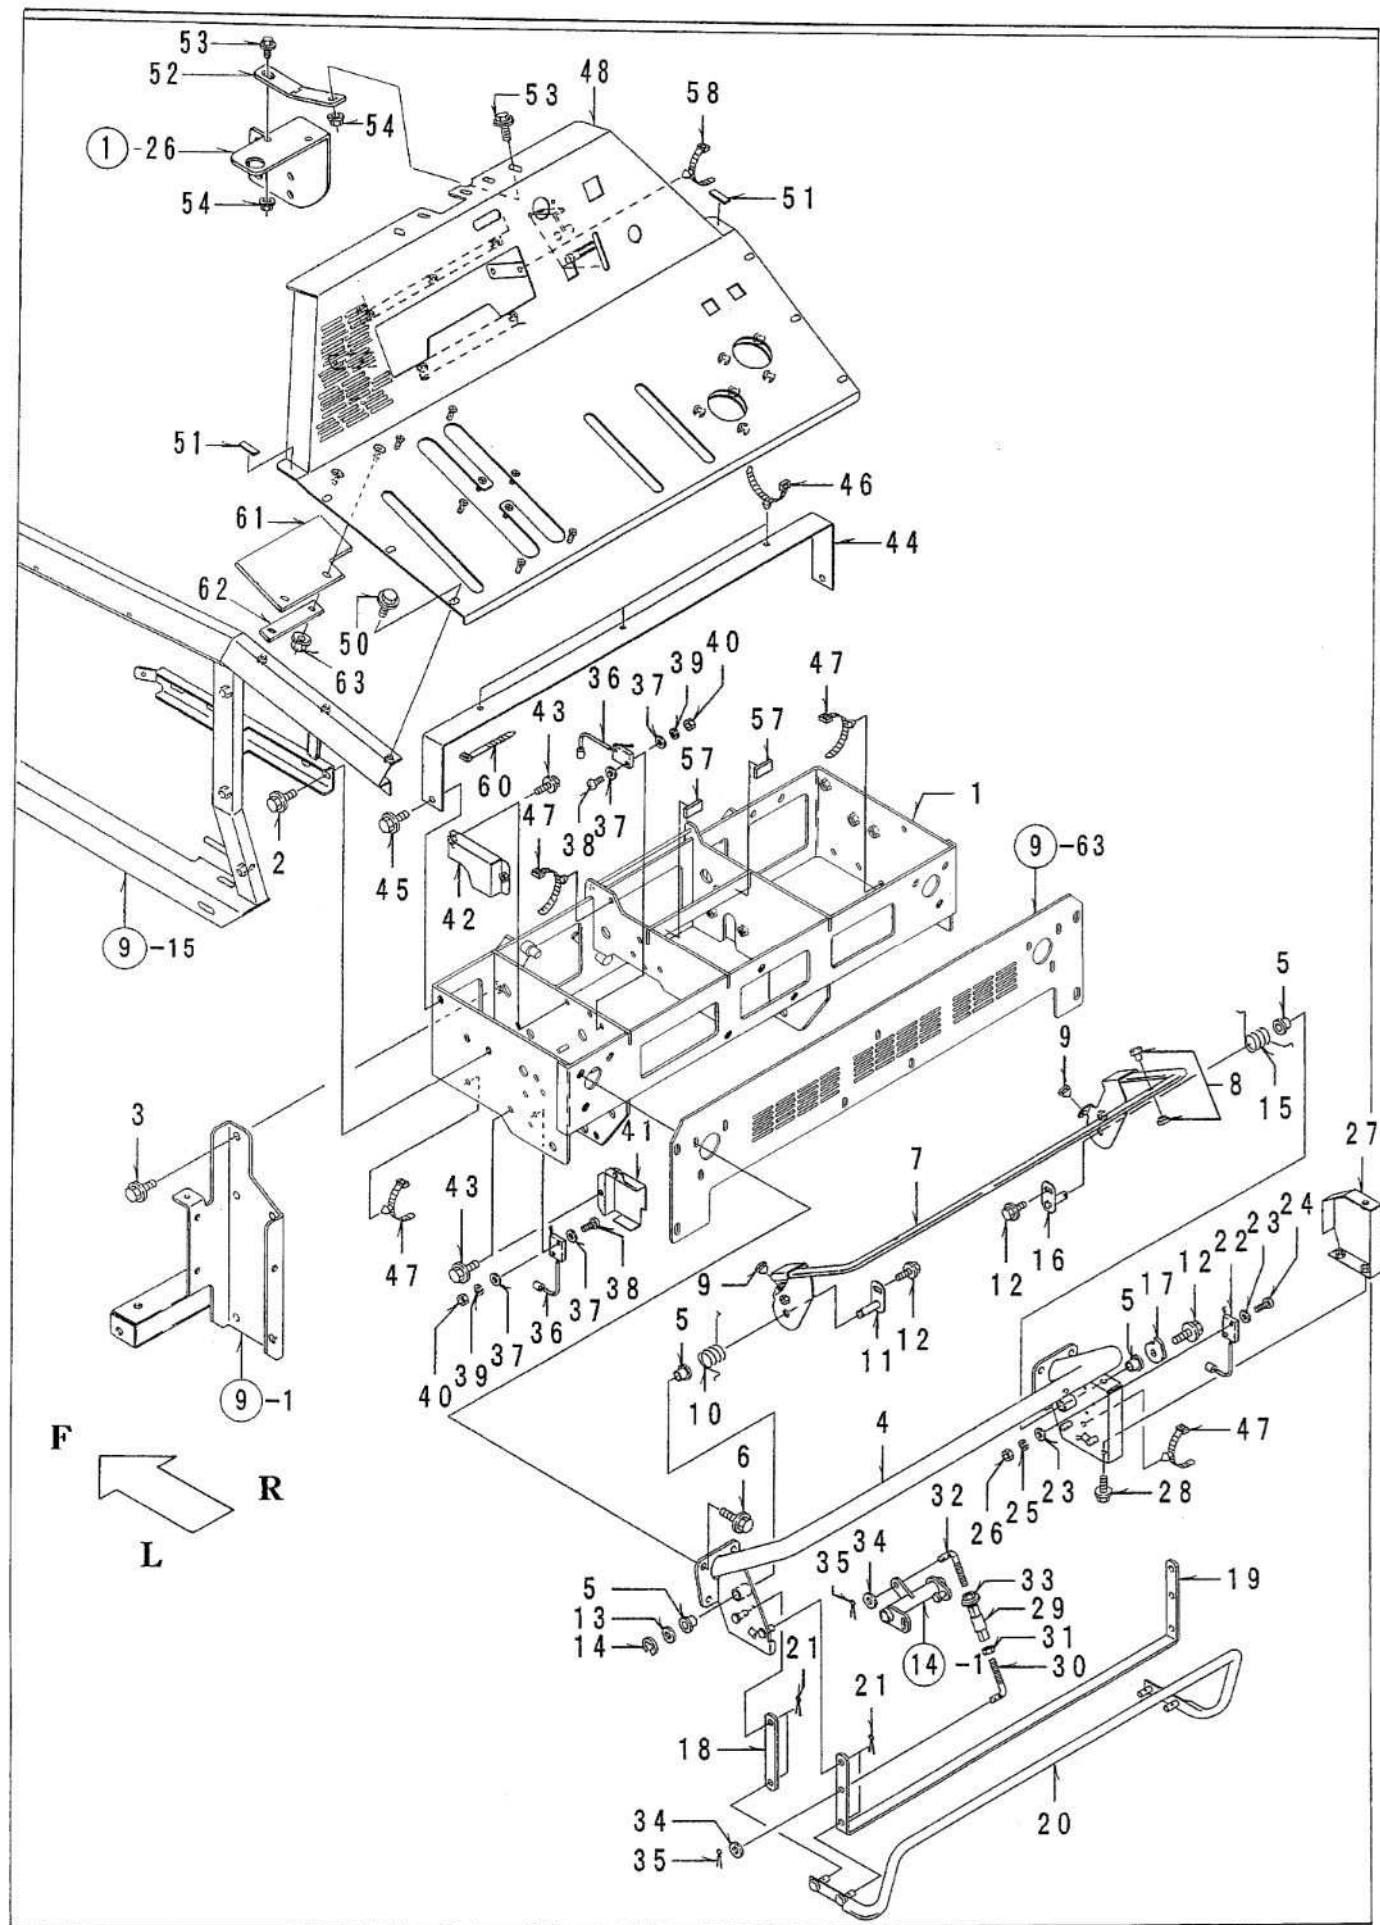


13. パネル・ハンドル

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
46	91314-15782	ケーブルストラップ 1-5782	3	
47	91314-119P7	ケーブルストラップ 1-19P7	4	
48	82100-B61-801	インジケータパネル COMP	1	供給不可
49				
50	93100-0601217	フランチB 6×12	6	販売単位 : 10
51	82903-B56-000	ゴム 10×30×3	2	
52	82901-B61-800	パネルステー	1	供給不可
53	93100-0801617	フランチB 8×16	2	販売単位 : 10
54	94002-08410	フランチN 8	2	販売単位 : 10
55				
56				
57	72901-B43-000	ゴム 15×30×5	2	
58	91314-119P7	ケーブルストラップ 1-19P7	1	
59				
60	91311-250	リピータイ RF250	1	販売単位 : 10
61	82903-B61-000	ハーネスラバー	1	
62	82904-B61-000	ハーネスラバーサポート	1	
63	94002-06410	フランチN 6	2	販売単位 : 10
64				
65				
66				
67				
68				
69				
70				
71				
72				
73				
74				
75				
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				

14. 操作レバー (1)

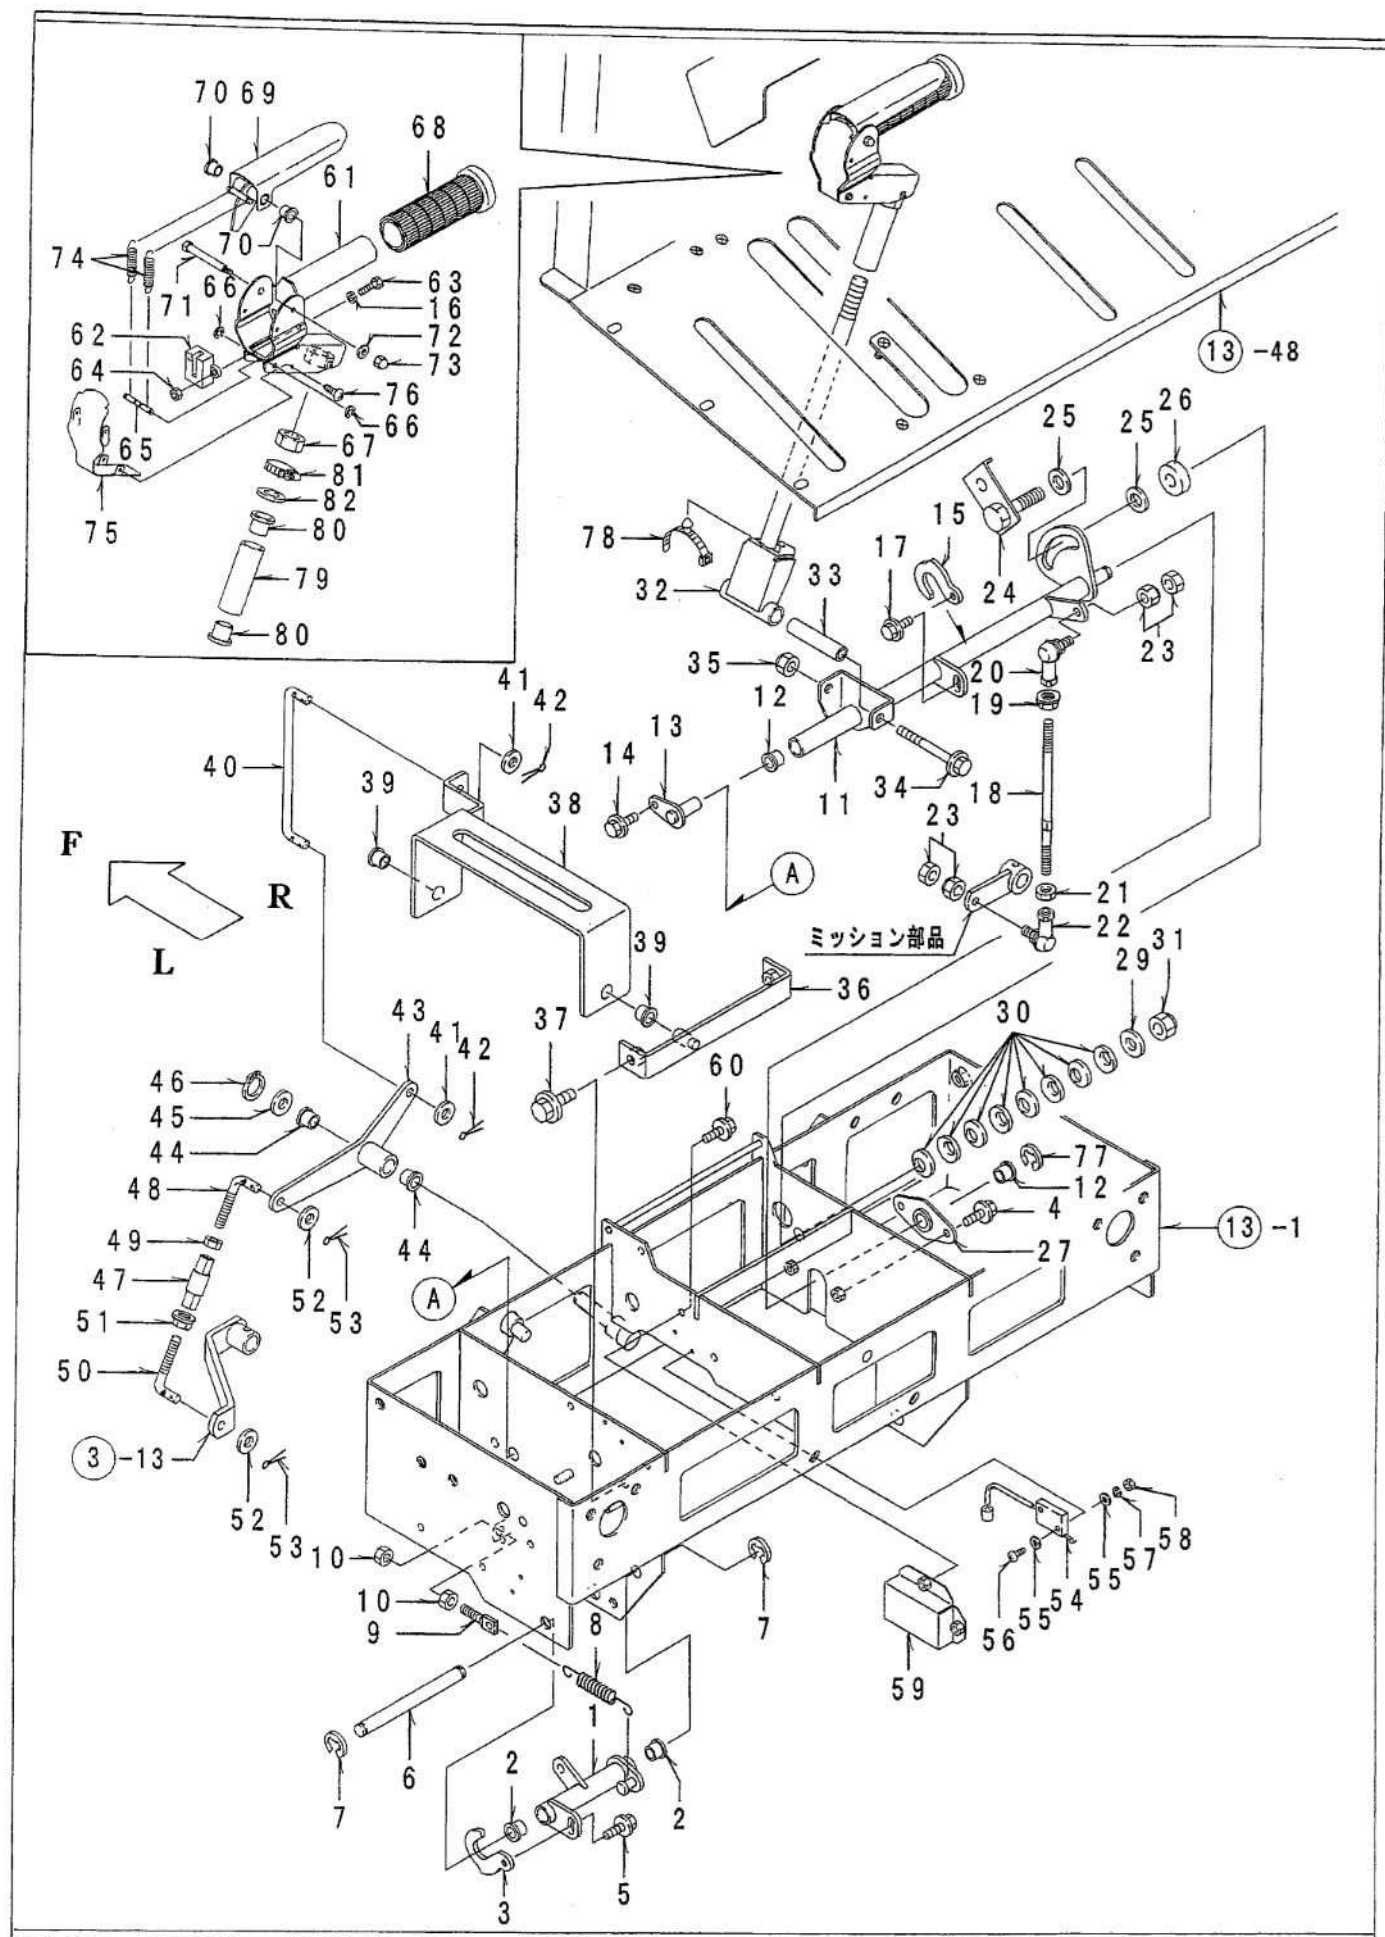


14. 操作レバー (1)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	74100-B56-001	レバーアーム COMP	1	
2	91644-121080	フランジブッシュ 80F-1210	2	
3	74902-B56-000	スイッチカム A	1	
4	93100-0601217	フランジB 6×12	2	販売単位 : 10
5	93100-0601217	フランジB 6×12	1	販売単位 : 10
6	73902-B56-000	ピン 12×130	1	
7	94511-09010	Eトメワ 9	2	販売単位 : 10
8	91601-B50-003	コイルスプリング 10×118	1	
9	16904-M65-000	テンションロッド	1	
10	94003-08412	コガタN 8(2)	2	販売単位 : 10
11	75100-B56-002	変速レバーボス COMP	1	
12	91644-121080	フランジブッシュ 80F-1210	2	
13	74500-B43-000	レバーピン 30 COMP	1	末番-801可
14	93100-0601217	フランジB 6×12	1	販売単位 : 10
15	74902-B56-000	スイッチカム A	1	
16	94111-05012	パネW 5	2	販売単位 : 10
17	93100-0601217	フランジB 6×12	1	販売単位 : 10
18	75901-B50-000	主変速ロッド A	1	
19	94002-08410	フランジN 8	1	販売単位 : 10
20	91634-080211	リンクボール BL8D	1	
21	91231-0841210	コガタヒダリN 8(2)	1	
22	91634-080221	リンクボール BL8DL	1	
23	91235-08100	ハードロックN 8	2	
24	75500-B56-001	テンションボルト COMP	1	
25	91648-8012	ワッシャー 80W-12	2	
26	72904-B56-000	フリクションカラー	1	
27	75200-B56-001	ハウジング COMP	1	
28				
29	94101-12010	ミガキW 12	1	販売単位 : 10
30	91252-121	サラパネ L12	8	
31	91233-124111	Uナット 12×1.25	1	
32	75700-B56-806	変速レバー COMP	1	
33	75903-M72-002	カラー 9×63.5	1	
34	93100-0808017	フランジB 8×80	1	
35	91233-084110	Uナット 8	1	販売単位 : 10
36	72300-B56-800	主変速ブラケット COMP	1	
37	93100-0801617	フランジB 8×16	2	販売単位 : 10
38	75600-B56-001	変速レバーアーム COMP	1	
39	91644-121080	フランジブッシュ 80F-1210	2	
40	75904-B56-000	副変速ロッド B	1	
41	94101-08010	ミガキW 8	2	販売単位 : 10
42	94210-25150	ワリピン 2.5×15	2	販売単位 : 10
43	75400-B56-000	副変速カム COMP	1	
44	91644-121080	フランジブッシュ 80F-1210	2	
45	94101-12010	ミガキW 12	1	販売単位 : 10

14. 操作レバー (1)

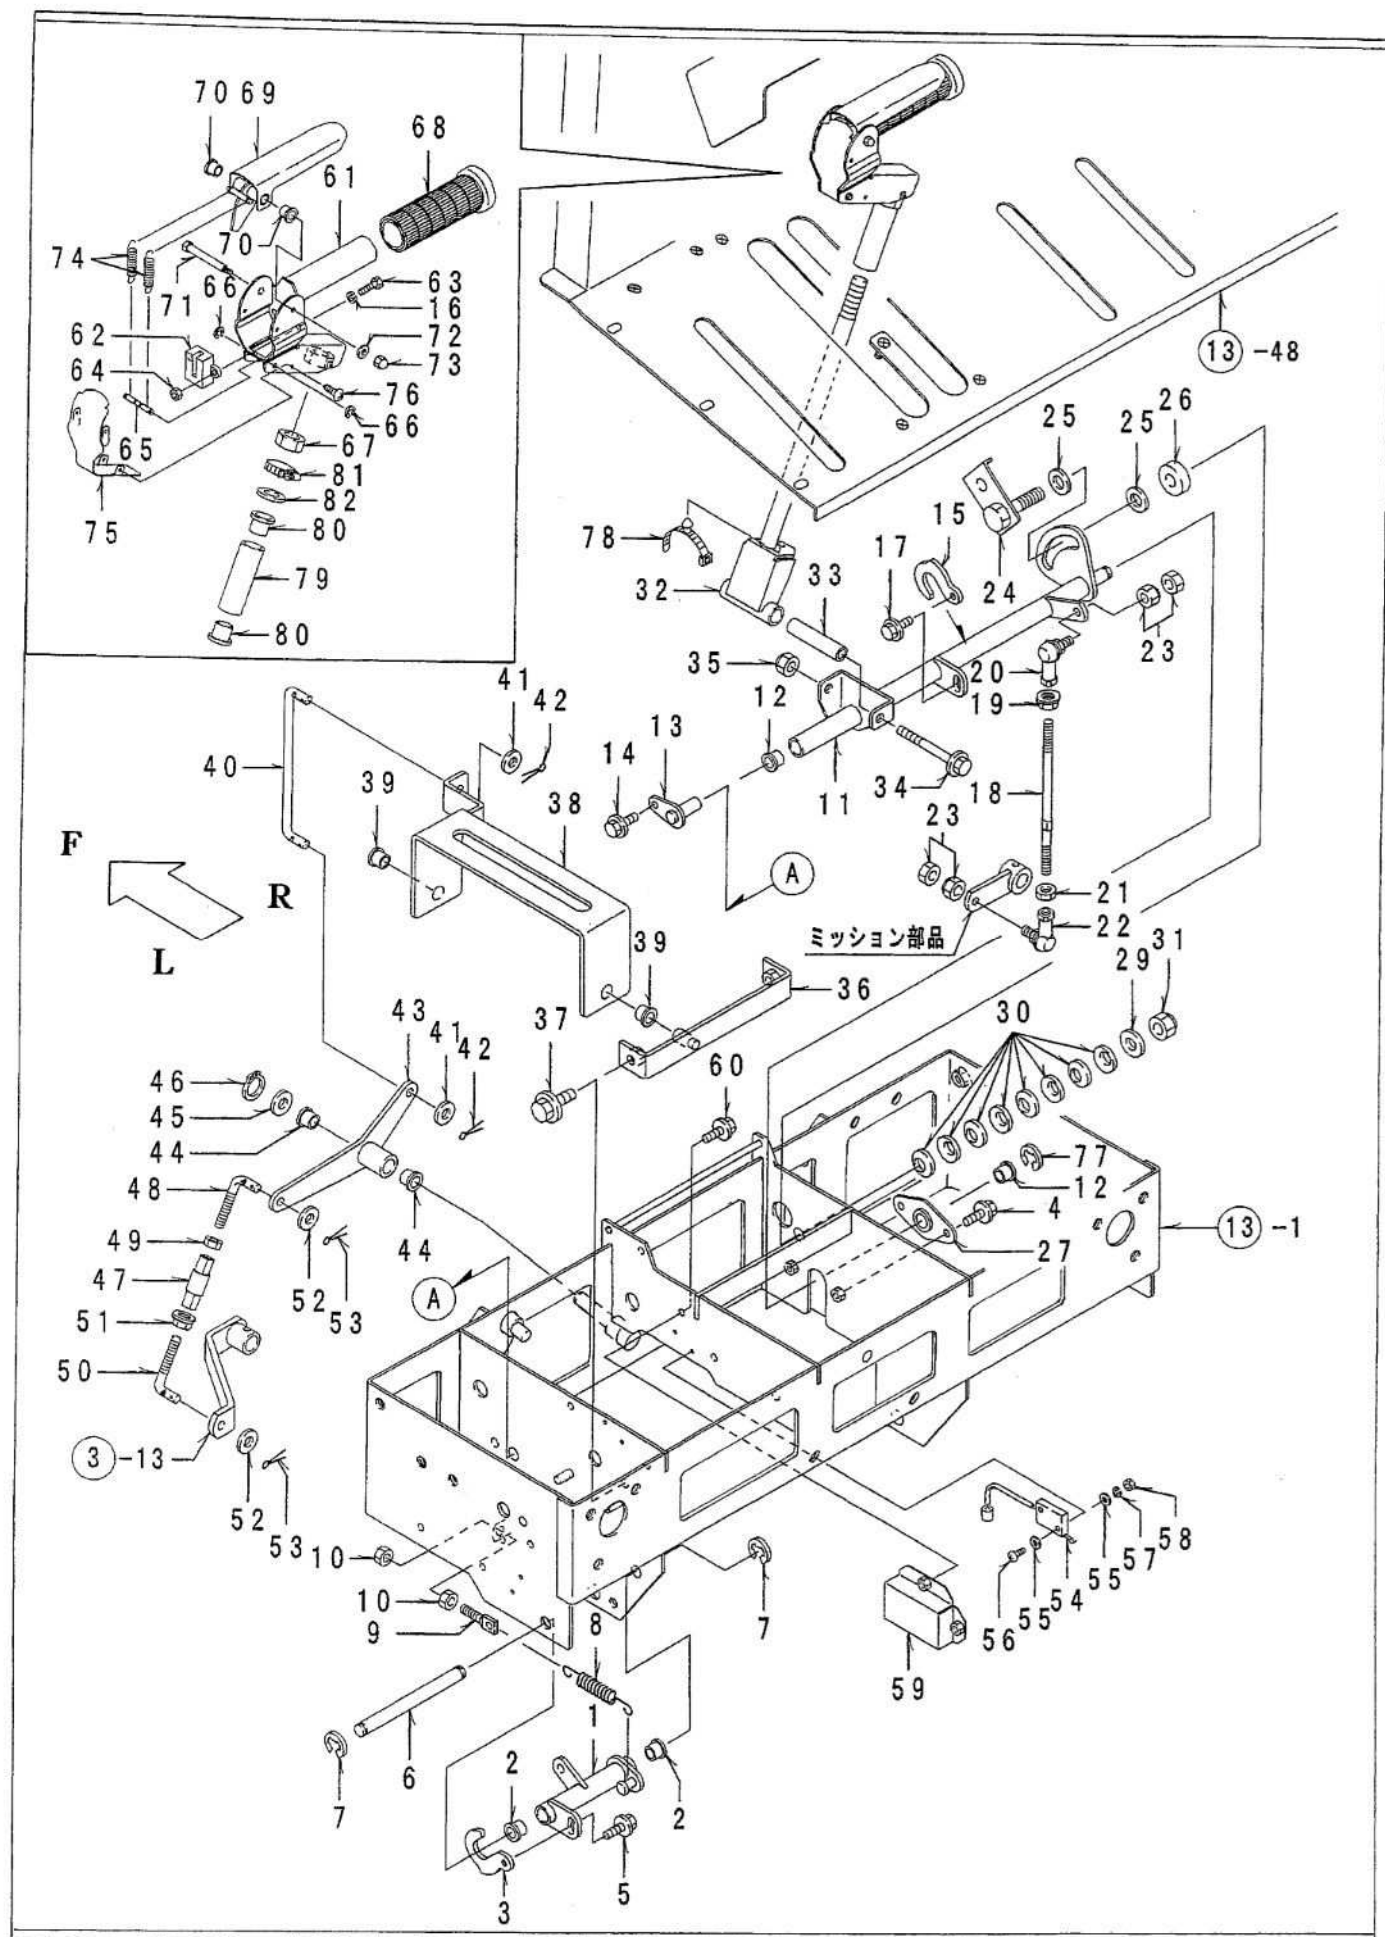


14. 操作レバー (1)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
46	94510-12080	Cジクトメワ 12	1	販売単位 : 10
47	75905-B07-000	リンク 100	1	
48	75903-B16-001	副変速ロッド B	1	
49	91231-0841210	コガタヒダリN 8(2	1	
50	75907-B08-001	ロッド 120	1	
51	94002-08410	フランジN 8	1	販売単位 : 10
52	94101-08010	ミガキW 8	2	販売単位 : 10
53	94210-25150	ワリピン 2.5×15	2	販売単位 : 10
54	83100-B10-000	シュートセンカイスイッチ	1	
55	94101-03010	ミガキW 3	4	販売単位 : 10
56	93500-0302014	ナベコネジ 3×20	2	販売単位 : 10
57	94111-03012	バネW 3	2	販売単位 : 10
58	94001-03412	N 3(2	2	販売単位 : 10
59	78200-B56-000	スイッチカバー B COMP	1	
60	93100-0601217	フランジB 6×12	2	販売単位 : 10
61	73700-B56-804	HSTレバーグリップ COMP	1	供給不可
62	83300-B56-000	リードスイッチ	1	供給不可
63	92000-0502014	B 5×20	2	販売単位 : 10
64	94001-05412	N 5(2	2	販売単位 : 10
65	73904-B56-000	スプリングホルダー	1	
66	94511-03010	Eトメワ 3	2	販売単位 : 10
67	94004-14412	N 14×1.5	1	
68	73906-B56-000	ハンドルグリップ 34	1	供給不可
69	73500-B56-003	HSTクラッチレバー COMP	1	
70	91644-060680	フランジブッシュ 80F-0606	2	
71	73903-B56-000	クラッチピン	1	
72	94101-04010	ミガキW 4	1	販売単位 : 10
73	94021-04413	フクロN 4	1	販売単位 : 10
74	72903-B56-001	クラッチスプリング	2	
75	78500-B56-804	クラッチカバー COMP	1	
76	91216-3006020	タッピンネジ 3×6	4	販売単位 : 10
77	94511-09010	Eトメワ 9	1	販売単位 : 10
78	91314-119P7	ケーブルストラップ 1-19P7	1	
79	75902-B56-801	パイプサポート	1	
80	91644-141580	フランジブッシュ 80F-1415	2	
81	91323-015	自在バンド 15	1	
82	94101-14010	ミガキW 14	1	
83				
84				
85				
86				
87				
88				
89				
90				

15. 操作レバー (2)

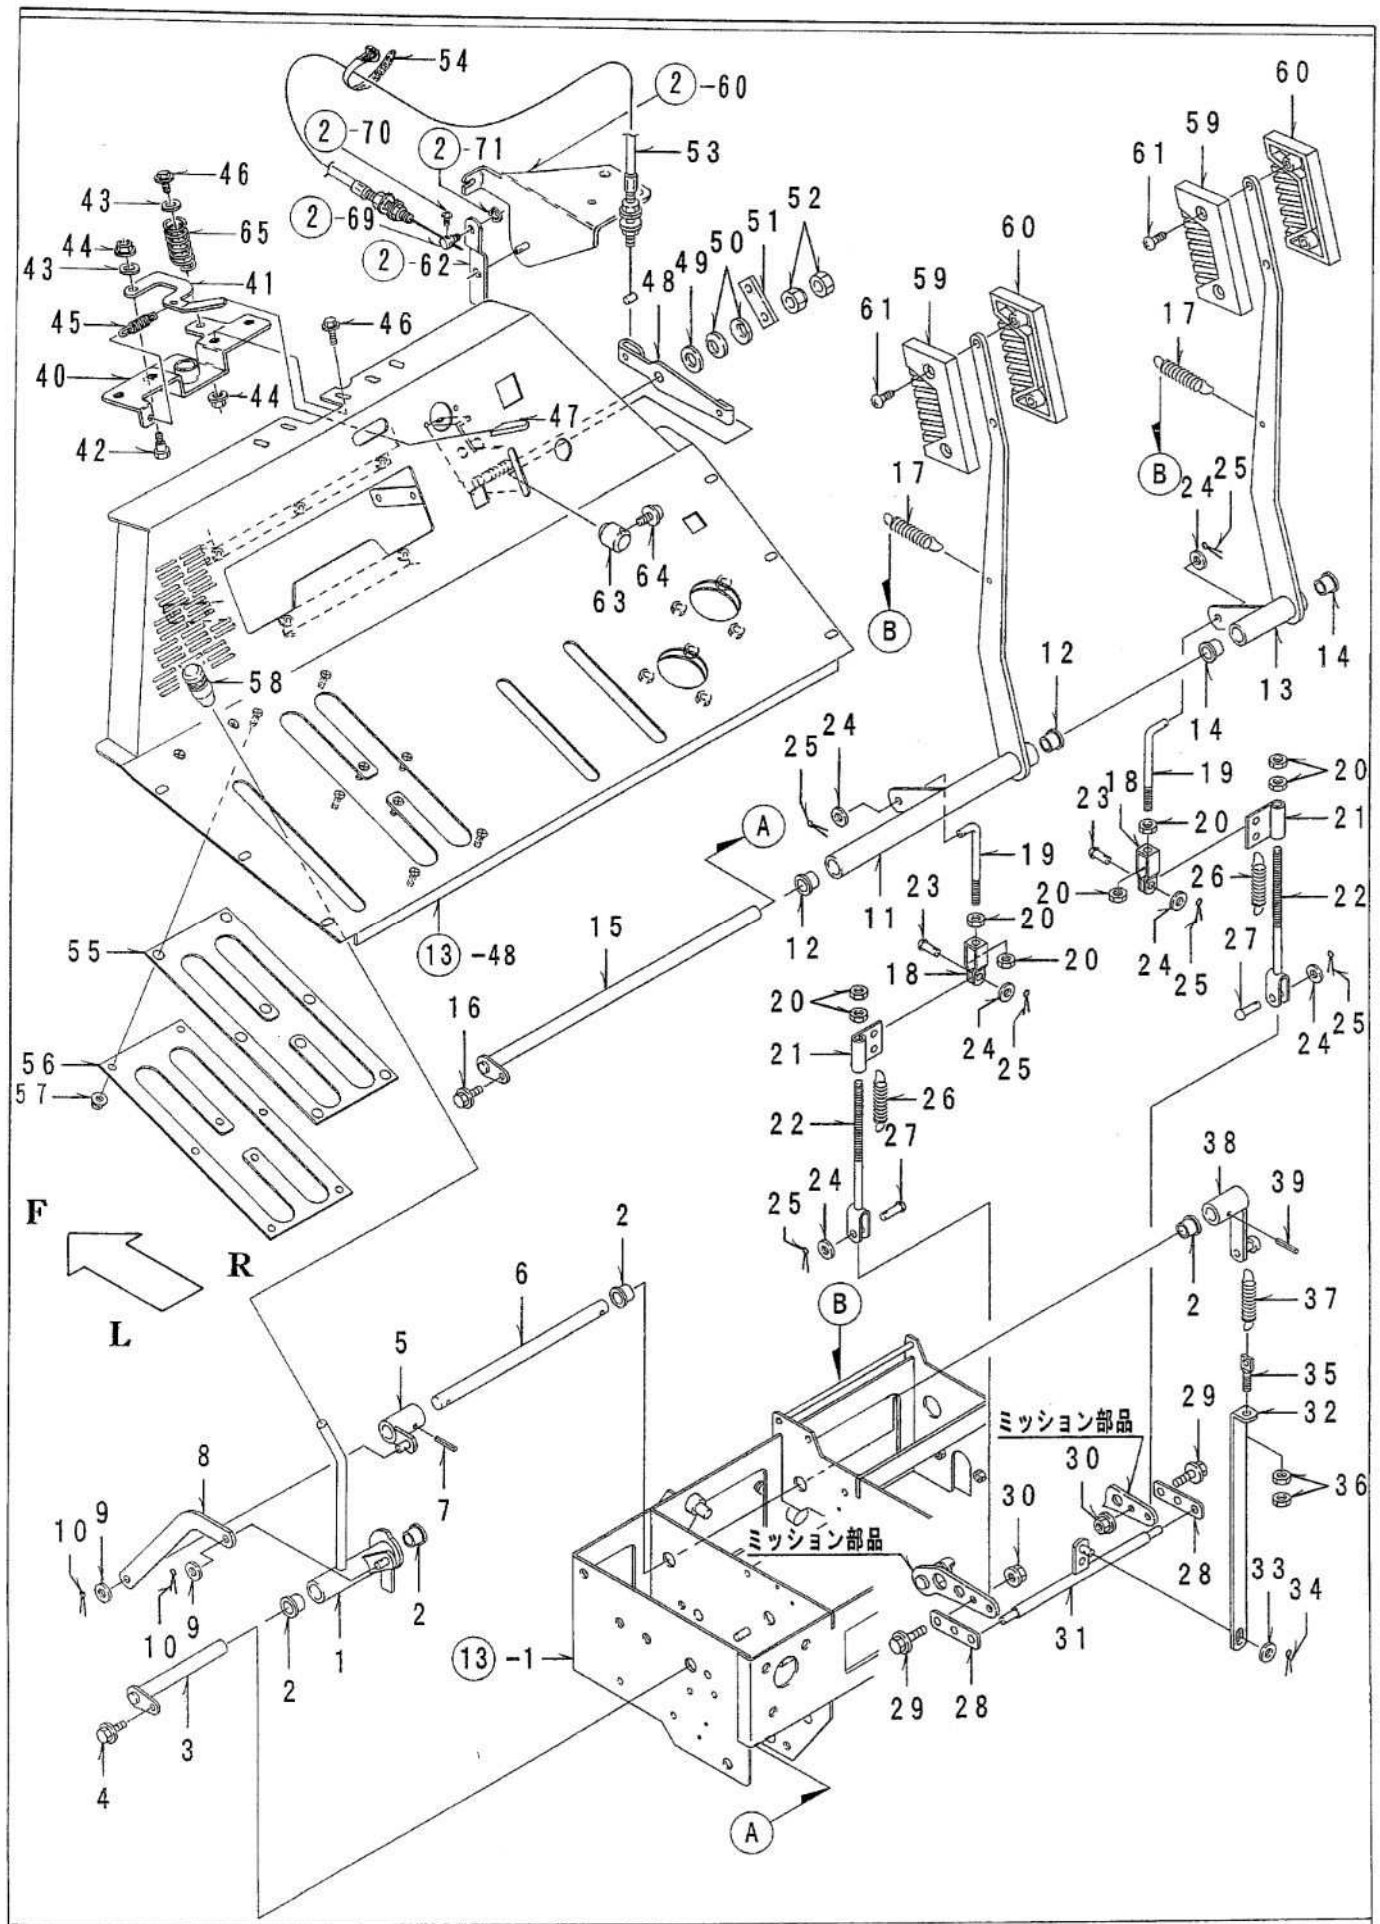


15. 操作レバー (2)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	76100-B56-801	駐車ブレーキレバー COMP	1	
2	91644-151280	フランジブッシュ 80F-1512	4	
3	76200-B56-000	レバーピン 132 COMP	1	
4	93100-0601217	フランジB 6×12	1	販売単位 : 10
5	76400-B56-000	カウンターアーム B COMP	1	
6	76905-B56-000	ブレーキカウンターシャフト	1	
7	94319-50028	スプリングピン 5×28	1	販売単位 : 10
8	76906-B56-000	ブレーキリンクアーム	1	
9	94101-08010	ミガキW 8	2	販売単位 : 10
10	94210-25150	ワリピン 2.5×15	2	販売単位 : 10
11	73200-B56-801	サイドクラッチレバー L COMP	1	
12	91644-151280	フランジブッシュ 80F-1512	2	
13	73300-B56-800	サイドクラッチレバー R COMP	1	供給不可
14	91644-151280	フランジブッシュ 80F-1512	2	
15	73400-B56-801	レバーピン 410 COMP	1	
16	93100-0601217	フランジB 6×12	1	販売単位 : 10
17	91604-A38-001	コイルスプリング 16.5×125	2	
18	73903-A91-000	ジョイント A	2	
19	75905-B39-031	副変速ロッド C	2	
20	94003-08412	コガタN 8(2)	8	販売単位 : 10
21	73904-B54-800	サイドクラッチホルダー	2	
22	76600-B53-000	サイドクラッチロッド COMP	2	
23	94330-0802210	マルアタマピン 8×22	2	
24	94101-08010	ミガキW 8	6	販売単位 : 10
25	94210-25150	ワリピン 2.5×15	6	販売単位 : 10
26	91601-B16-000	サイドクラッチスプリング	2	
27	94330-0802510	マルアタマピン 8×25	2	
28	76903-B53-000	ブレーキアームプレート	2	
29	93100-0802017	フランジB 8×20	2	販売単位 : 10
30	94002-08410	フランジN 8	2	販売単位 : 10
31	76500-B53-000	ブレーキピン COMP	1	
32	76904-B56-000	ブレーキリンクバー	1	
33	94101-08010	ミガキW 8	1	販売単位 : 10
34	94210-25150	ワリピン 2.5×15	1	販売単位 : 10
35	16904-M65-000	テンションロッド	1	
36	94003-08412	コガタN 8(2)	2	販売単位 : 10
37	91601-A71-001	テンションクラッチスプリング	1	91601-B16-000へ統合
38	76300-B56-000	カウンターアーム A COMP	1	
39	94319-50028	スプリングピン 5×28	1	販売単位 : 10
40	72500-B53-800	ボンネットホルダー COMP	1	
41	72901-B53-800	ボンネットオープンレバー	1	
42	75911-B18-000	段付ボルト M6	1	
43	94101-06015	ダイマルW 6	2	販売単位 : 10
44	94002-06410	フランジN 6	2	販売単位 : 10
45	91601-M27-001	コイルスプリング 12.5×50	1	

15. 操作レバー (2)

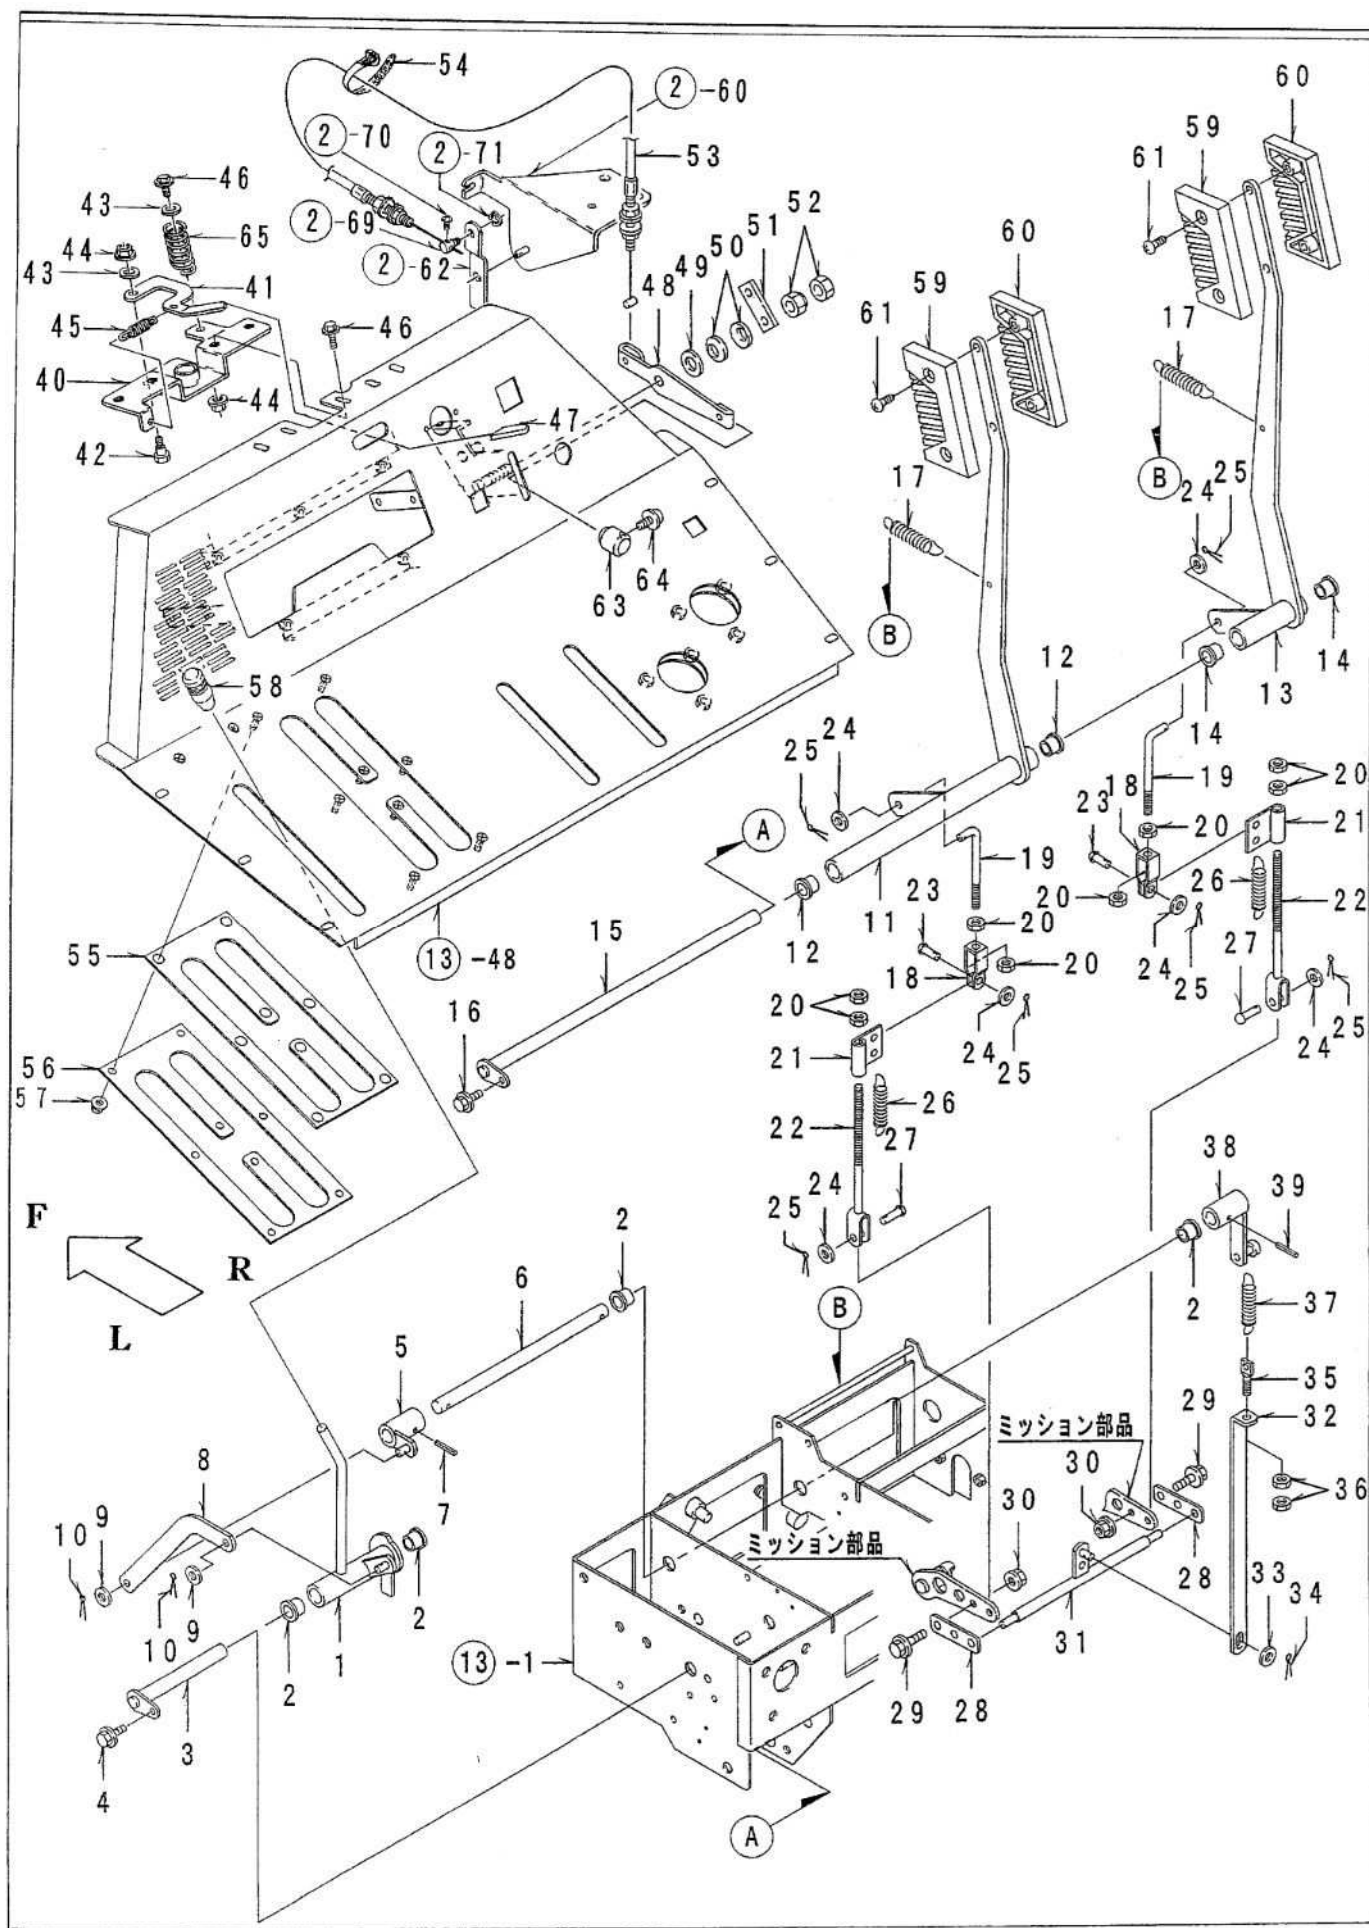


15. 操作レバー (2)

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
46	93100-0601617	フランジB 6×16	5	販売単位 : 10
47	91731-1510021	レバーグリップ K15	1	
48	75905-B18-001	スロットルレバー	1	
49	94101-08015	ダイヤルW 8	1	販売単位 : 10
50	91252-082	サリバネH 8	2	販売単位 : 10
51	75906-B18-000	スラストプレート	1	
52	91235-08100	ハードロックN 8	1	
53	77200-B61-001	スロットルワイヤー	1	
54	91311-140	リピータイ RF140	1	販売単位 : 10
55	75901-B54-000	変速レバーガイド	1	
56	75902-B54-000	レバーガイドクランプ	1	
57	94002-06410	フランジN 6	8	販売単位 : 10
58	76902-A91-001	操作レバーニギリ (赤)	1	
59	76903-B18-000	クラッチレバーニギリ A	2	
60	76904-B18-000	クラッチレバーニギリ B	2	
61	76906-A91-000	タッピンネジ 4×20	4	
62				
63	75907-B18-000	スロットルレバーノブ	1	
64	75908-B18-001	スペシャルスクリュー 4×8	1	
65	91603-B18-000	ボンネットスプリング	1	
66				
67				
68				
69				
70				
71				
72				
73				
74				
75				
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				

16. 電装品 (1)

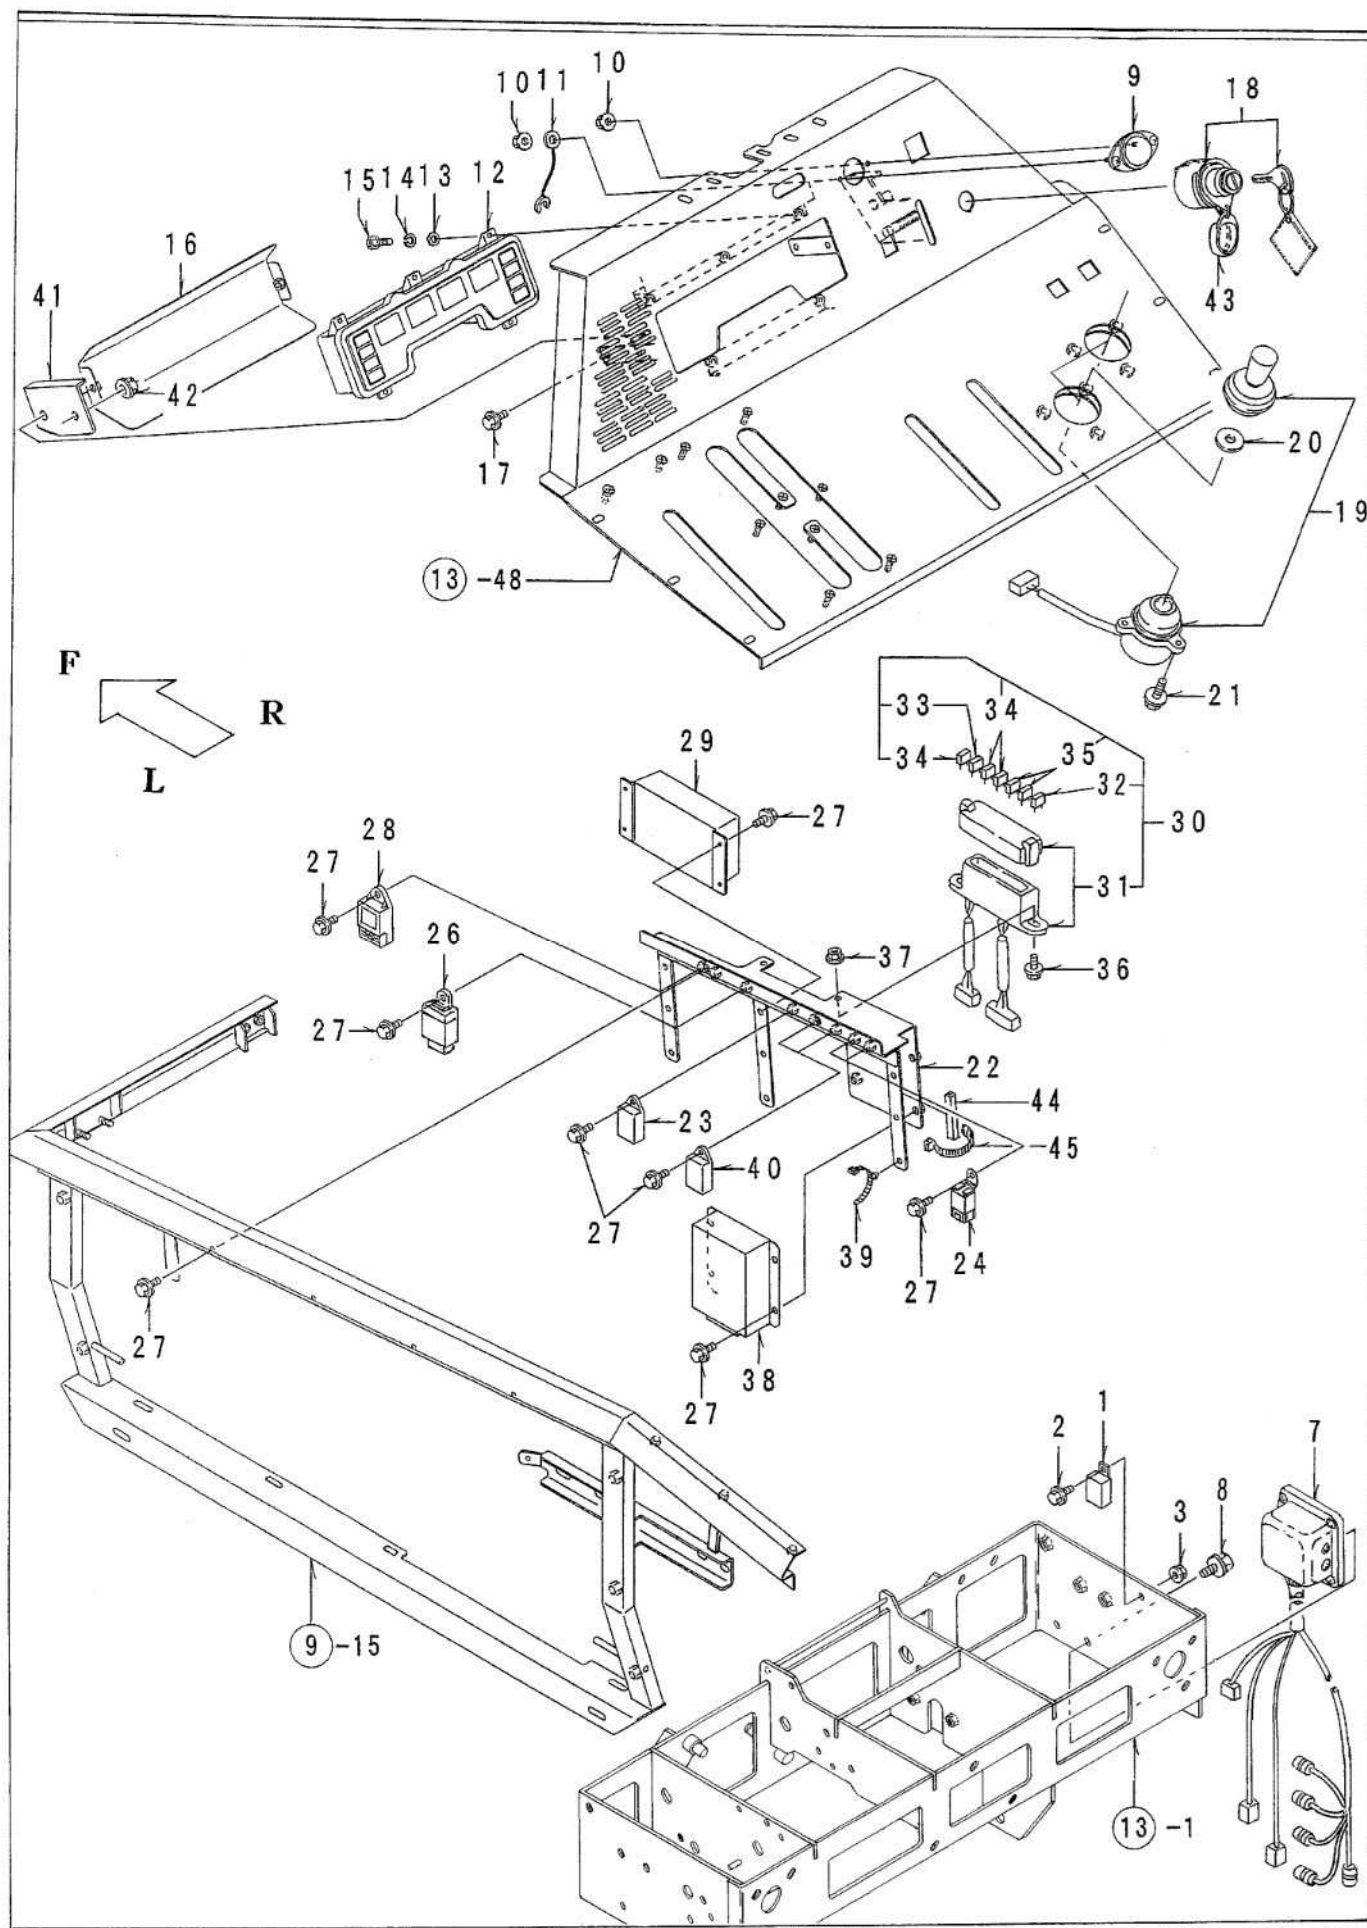

16. 電装品 (1)

SE422AD

パーツ	部 品 番 号	部 品 名	個数	備 考
1	84300-B18-000	ソレノイドボックス	1	08010-B18-000へ
2	93100-0601617	フランジB 6×16	1	販売単位 : 10
3	94002-06410	フランジN 6	1	販売単位 : 10
4				
5				
6				
7	83600-B56-000	水平制御ユニット	1	08009-B18-000 代替キットへ
8	93100-0601217	フランジB 6×12	2	販売単位 : 10
9	83100-B07-000	パネルライト 83120-B07-000 ハルブ 12V10W	1	
10	94002-04410	フランジN 4	2	販売単位 : 10
11	87300-B18-000	アースコード	1	
12	83100-B54-000	コンピメーター 83110-B18-000 ハルブ 12V3.4W	1	08003-B54-000 変換キットへ
13	94101-04010	ミガキW 4	5	販売単位 : 10
14	94111-04012	パネW 4	5	販売単位 : 10
15	92000-0401614	B 4×16	5	販売単位 : 10
16	88100-B53-001	メーターカバー COMP	1	
17	93100-0601217	フランジB 6×12	2	販売単位 : 10
18	15393-63612	スタータスイッチ アッシ	1	エンジン付属品 66711-55240 キーのみ (2個入)
19	83200-B18-000	コントロールスイッチ	2	ノブのみ 35362-797-631
20	83902-B18-000	マルザガネ 11×32×4.5	2	
21	93100-0602017	フランジB 6×20	6	販売単位 : 10
22	82200-B61-800	リレーブラケット COMP	1	供給不可
23	84100-B32-000	Cリレー	1	ライトリレー
24	84500-B18-000	NOリレー	2	走行リレー、セル作動リレー
25				
26	T0070-31411	タイマー(キーストップ	1	エンジン付属品 ソレノイド 作動リレー
27	93100-0601217	フランジB 6×12	17	販売単位 : 10
28	33740-75293	タイマ(グローランプ	1	エンジン付属品 ランプ タイマー
29	84100-B56-000	旋回コントローラ	1	
30	80001-B61-001	ヒューズボックス ASSY	1	供給不可
31	89100-B18-000	ヒューズボックス	1	供給不可
32	91811-115	ブレードヒューズ 15A	1	
33	91811-105	ブレードヒューズ 5A	1	
34	91811-110	ブレードヒューズ 10A	3	
35	91811-130	ブレードヒューズ 30A	2	
36	93100-0601617	フランジB 6×16	2	販売単位 : 10
37	94002-06410	フランジN 6	2	販売単位 : 10
38	84100-B54-001	コントロールボックス	1	
39	91314-11W02	ケーブルストラップ 1-1W02	2	
40	84200-B56-000	モーターリレー	2	オガオフリレー、オガオンリレー
41	82902-B61-800	メーターカバー	1	供給不可
42	94002-06410	フランジN 6	1	販売単位 : 10
43	54611-41121	スタータスイッチキャップ	1	エンジン付属品
44	85902-B56-000	玉ナシ溝ゴム 11×60	1	供給不可
45	91311-140	リピータイ RF140	1	販売単位 : 10
46				
47				
48				
49				
50				




17. 電装品(2)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	85100-B61-002	メインハーネス	1	
2	83200-B54-000	大形照光スイッチ	1	オーガクラッチ用
3	91830-0011000	小形照光スイッチ(フリー	2	83500-B18-000Kへ
4	94002-08410	フレンジN 8	1	販売単位: 10
5	83500-B18-000	小形照光スイッチ	1	
6	85200-B56-000	シュータハーネス	1	
7				
8	85400-B61-001	シュータライトハーネス	1	供給不可
9	82300-B56-000	ハーネスステー COMP	1	
10	93100-0601217	フレンジB 6×12	2	販売単位: 10
11	89903-A26-000	防振ゴム	1	
12	91890-095D31L	バッテリー 95D31L	1	
13	86901-B56-801	バッテリークランプ	1	
14	94101-06015	ダイマルW 6	1	販売単位: 10
15	94001-06412	N 6(2	2	販売単位: 10
16	86902-B43-000	バッテリーセットボルト	1	
17	87100-B56-000	バッテリー + コード	1	
18	87200-B56-001	バッテリー - コード	1	
19	93300-1001617	フレンジB 10×1.25×16	1	
20	85500-B56-000	走行ハーネス	1	
21	85600-B56-000	レバーハーネス	1	
22	91311-140	リピータイ RF140	1	販売単位: 10
23	91811-340	スローブローヒューズ 40A[AS]	1	メインハーネス内
24	91811-350	スローブローヒューズ 50A[AS]	1	メインハーネス内
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				

18. 銘板、付属品

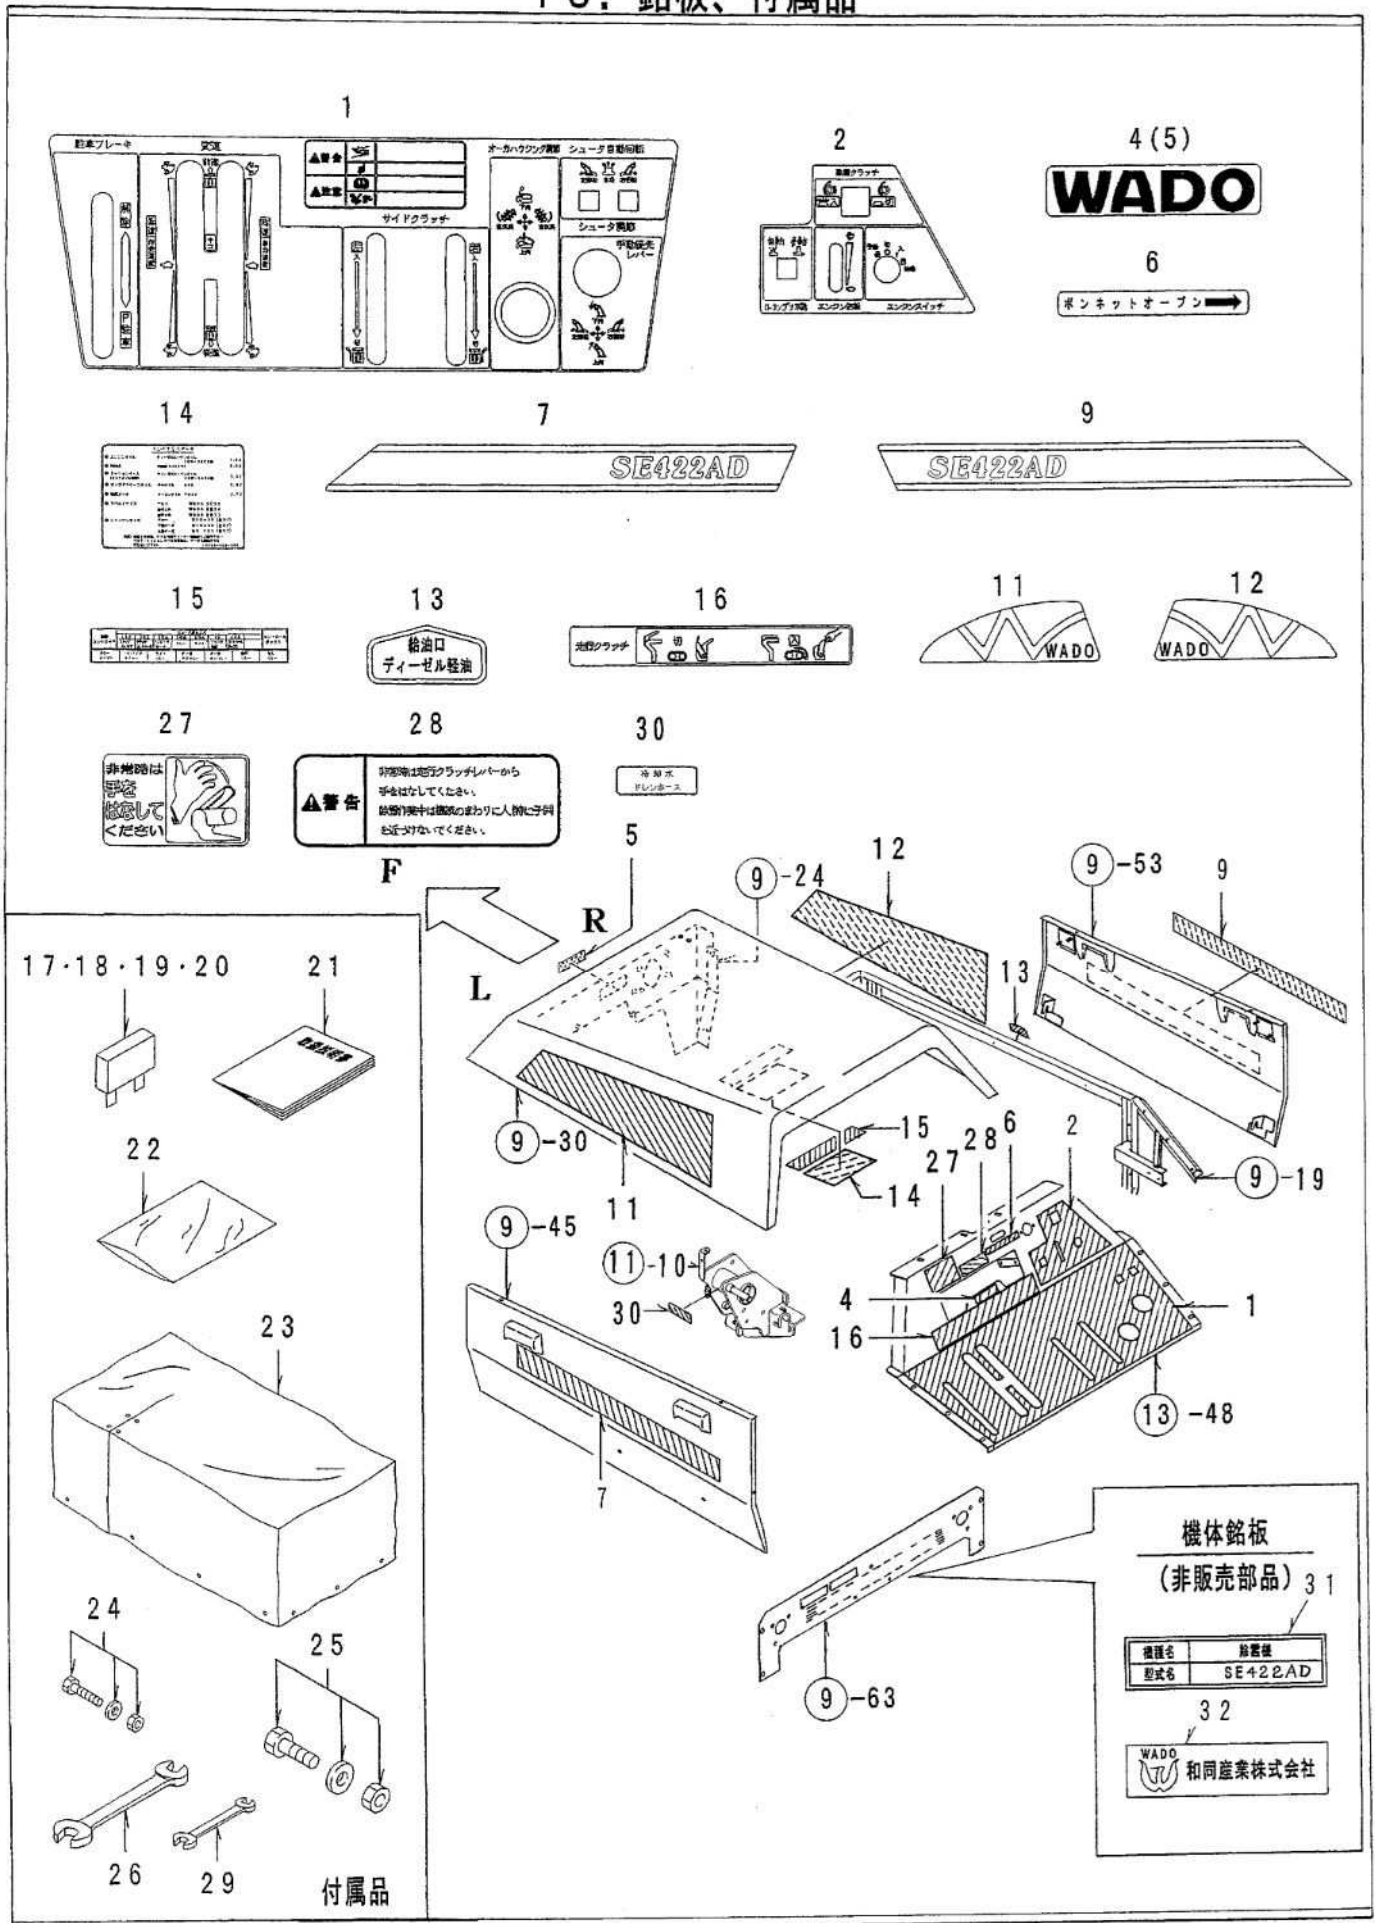

18. 銘板・付属品

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	79901-B56-001	パネル マーク	1	
2	79902-B57-001	インジケータパネル マーク	1	供給不可
3				
4	91830-A26-000	ワドーマーク A	1	
5	91831-A26-000	ワドーマーク B	1	
6	79910-B18-000	ボンネットオープン マーク	1	
7	79907-B61-000	サイドマーク L	1	供給不可
8				
9	79908-B61-000	サイドマーク R	1	供給不可
10				
11	79905-B51-002	ボンネットマーク L	1	供給不可
12	79906-B51-002	ボンネットマーク R	1	供給不可
13	79911-B18-000	給油口 マーク	1	
14	79903-B61-000	メンテナンス マーク	1	供給不可
15	79906-B61-000	リレーヒューズ マーク	1	供給不可
16	79904-B56-000	走行クラッチ マーク	1	
17	91811-115	ブレードヒューズ 15A	1	同梱
18	91811-105	ブレードヒューズ 5A	1	同梱
19	91811-110	ブレードヒューズ 10A	1	同梱
20	91811-130	ブレードヒューズ 30A	1	同梱
21	91903-B61-000	取扱説明書(ワド-	1	同梱
22		ポリブクロ 0.07×80×110	1	同梱(ブレードヒューズ用)
23	98100-B18-000	シートカバー	1	同梱
24	90001-B18-000	シャーボルト 6×25 ASSY	1	同梱(上段オーガ用)
25	90002-B18-000	シャーボルト 10×30 ASSY	2	同梱(プロウ・下段オーガ用)
26	91905-B16-000	コンビネーションレンチ 17	1	同梱(上段オーガ用)
27	79905-B56-000	喚起マーク (走行	1	
28	91194-011	走行クラッチ警告 ラベル	1	
29	91905-B56-000	コンビネーションレンチ 10	2	同梱(下段オーガ用)
30	79901-B61-001	冷却水ドレン マーク	1	
31	91904-B61-000	型式 ラベル	1	
32		機体番号付社銘板	1	非売品
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				




19. 銘板 (安全)

SE422AD

パーツ№	部 品 番 号	部 品 名	個数	備 考
1	91193-002	ラジエータ危険 ラベル	1	
2	91193-005	火気厳禁 ラベル(ディーゼル)	1	
3	91193-006	オーガ危険 ラベル(ヨコ)	1	
4	91194-002	飛散警告 ラベル	1	
5	91194-004	ブロワ警告 ラベル	1	
6	91195-003	カバー注意 ラベル	2	
7	91194-008	排気ガス警告 ラベル(ヨコ)	1	
8	91195-001	マフラー注意 ラベル	1	
9	79907-B54-001	ボンネット注意 ラベル	1	
10	91193-003	バッテリー危険 ラベル	1	
11				
12	33100-B53-101L	シュータ 900 (PL) ASSY	1式	
13	33200-B50-003L	カートリッジカバー (PL) ASSY	1式	
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				


燃料タンクASSY分解

04100-B36-000

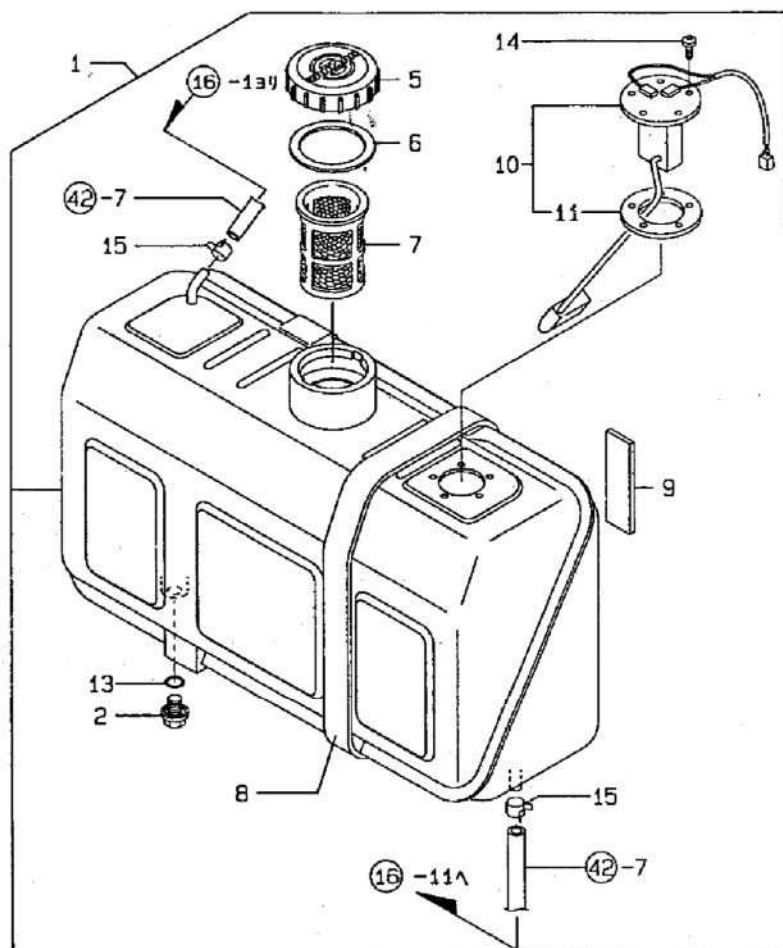


REF. NO.	LEV. 0	PART NO.	DESCRIPTION	(A)
1	.	129065-55010	TANK, F.O. CMP	1
2	..	124060-01640	PLUG M12	1
5	..	105302-55040	COVER	1
6	..	101504-55051	GASKET, TANK CAP	1
7	..	101504-55101	STRAINER, FUEL INLET	1
8	..	121400-55830	SEAT, RUBBER	2
9	..	121400-55870	FELT 30X105X5	2
10	..	198290-56600	GAUGE COMPL., FUEL	1
11	...	194420-56620	GASKET	1
13	..	24311-000140	O-RING 1A P-14.0	1
14	..	26557-050122	SCREW M 5X 12	5
15	.	23000-013000	CLAMP 13	4

B 5 4 油圧オイルタンク構成部品の品番・品名

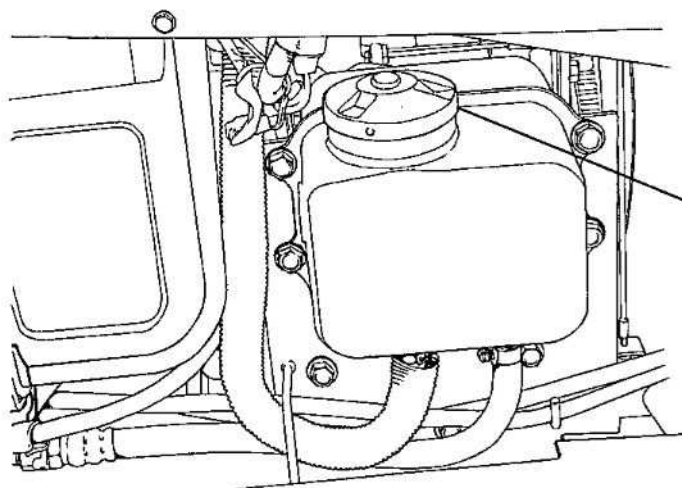

品番：52230-B54-000

品名：オイルタンクキャップ

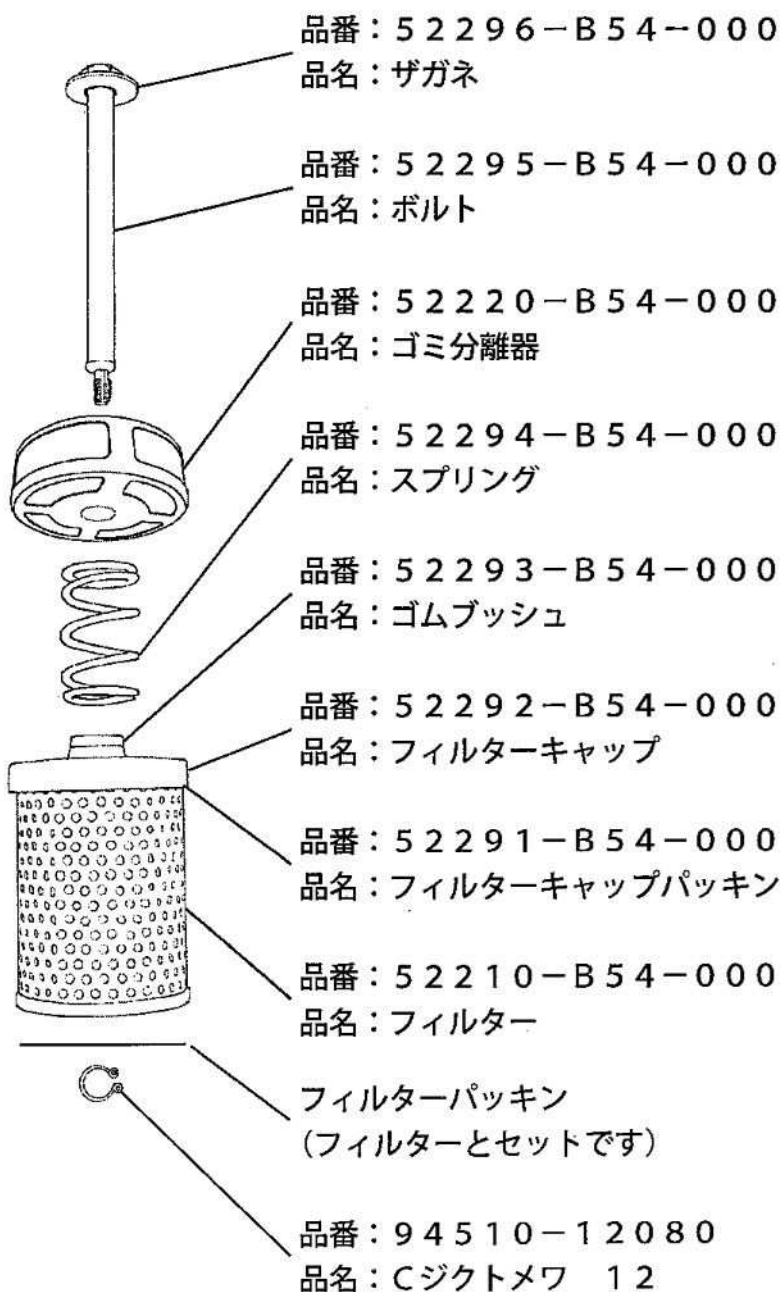

品番：52296-B54-000

品名：ザガネ

品番：52295-B54-000

品名：ボルト

品番：52220-B54-000

品名：ゴミ分離器

品番：52294-B54-000

品名：スプリング

品番：52293-B54-000

品名：ゴムブッシュ

品番：52292-B54-000

品名：フィルターキャップ

品番：52291-B54-000

品名：フィルターキャップパッキン

品番：52210-B54-000

品名：フィルター

フィルターパッキン
(フィルターとセットです)


品番：94510-12080

品名：Cジクトメワ 12

(パッキン幅 約5mm)

フィルターとフィルターパッキン
はセットになっています。
(パッキン幅 約8mm)

4. 除雪フレーム

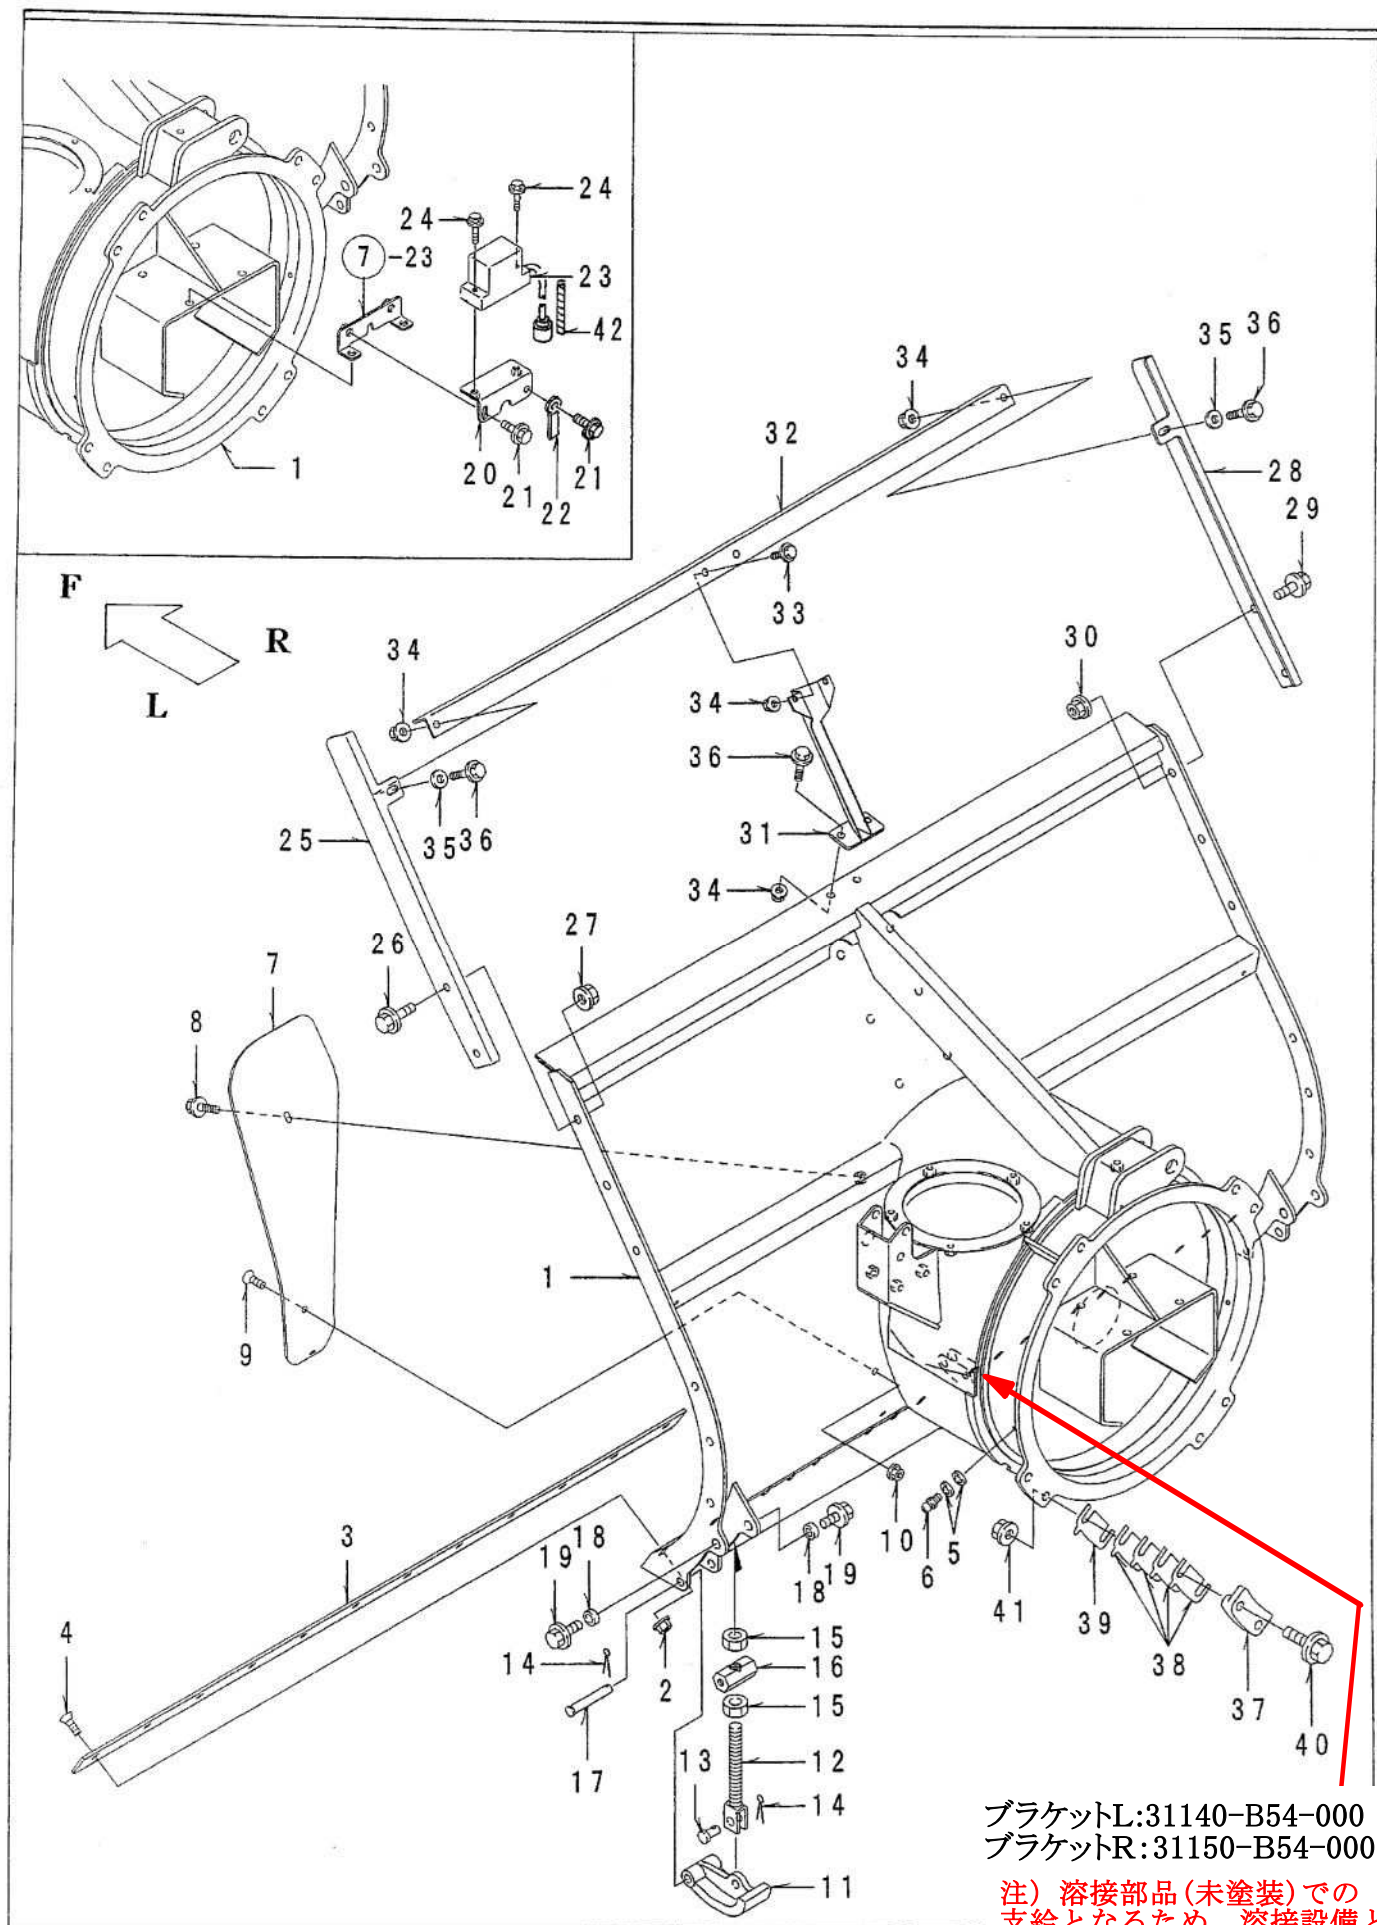

ブラケットL:31140-B54-000
 ブラケットR:31150-B54-000

注) 溶接部品(未塗装)での
 支給となるため、溶接設備と
 溶接後の塗装を行う必要あり

2019/4/2